MANUAL TRANSMISSION - NSG370 (Continued)

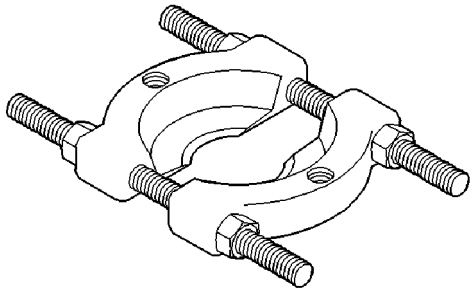

BEARING SPLITTER 1130

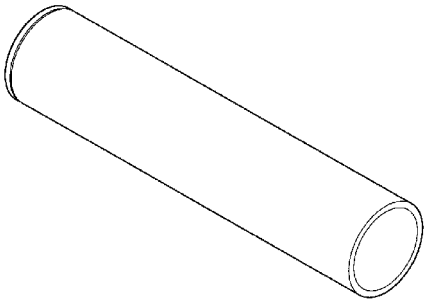

HUB INSTALLER 8228

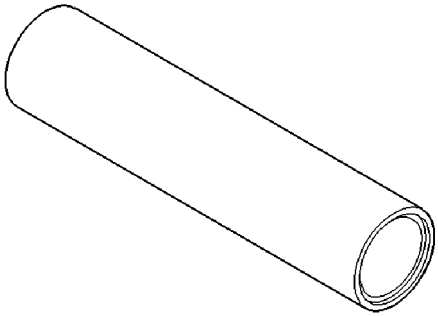

BEARING INSTALLER 6448A

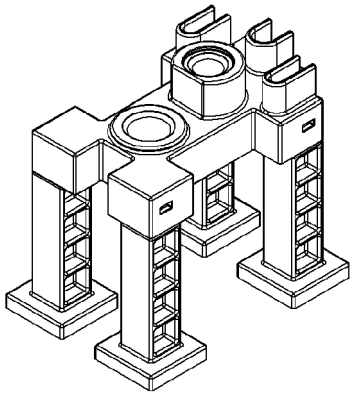

BUILD FIXTURE 9633

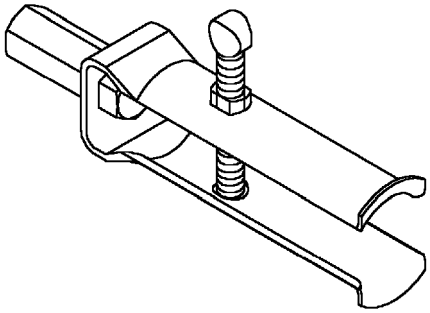

BEARING REMOVER 7794-A

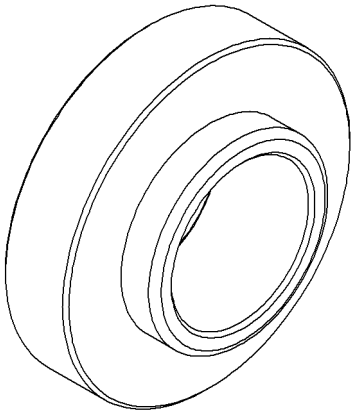

SEAL INSTALLER 9635

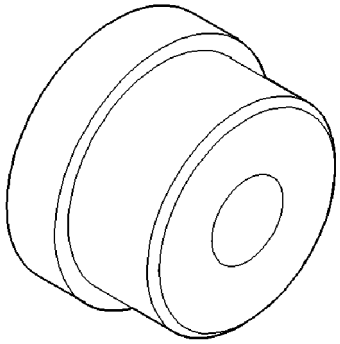

PLUG INSTALLER 7829-A