AUTOMATIC TRANSMISSION - 42RLE (Continued)

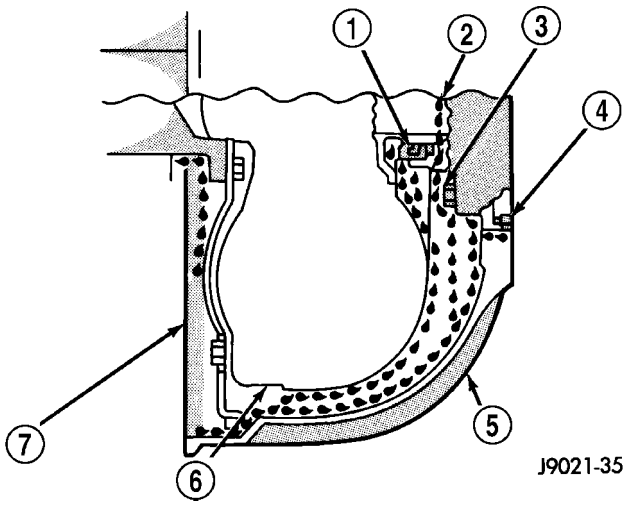


*Fig. 11 Converter Housing Leak Paths*

1 - PUMP SEAL
2 - PUMP VENT
3 - PUMP BOLT
4 - PUMP GASKET
5 - CONVERTER HOUSING
6 - CONVERTER
7 - REAR MAIN SEAL LEAK

Fluid leakage at or around the torque converter area (Fig. 11) may originate from an engine oil leak. The area should be examined closely. Factory fill fluid is red and, therefore, can be distinguished from engine oil.

Some suspected converter housing fluid leaks may not be leaks at all. They may only be the result of residual fluid in the converter housing, or excess fluid spilled during factory fill, or fill after repair. Converter housing leaks have several potential sources. Through careful observation, a leak source can be identified before removing the transmission for repair.

Pump seal leaks tend to move along the drive hub (Fig. 11) and onto the rear of the converter. Pump o-ring or pump body leaks follow the same path as a seal leak. Pump attaching bolt leaks are generally deposited on the inside of the converter housing and not on the converter itself. Pump seal or gasket leaks (Fig. 11)usually travel down the inside of the converter housing.

## TORQUE CONVERTER LEAKAGE

Possible sources of torque converter leakage are:

- Torque converter weld leaks at the outside diameter weld. (Fig. 12)
- Torque converter hub weld. (Fig. 12)

## STANDARD PROCEDURE - ALUMINUM THREAD REPAIR

Damaged or worn threads in the aluminum transmission case and valve body can be repaired by the use of Heli-Coils®, or equivalent. This repair consists of drilling out the worn-out damaged threads. Then tap the hole with a special Heli-Coil® tap, or equivalent, and installing a Heli-Coil® insert, or equivalent, into the hole. This brings the hole back to its original thread size.

Heli-Coil®, or equivalent, tools, and inserts are readily available from most automotive parts suppliers.

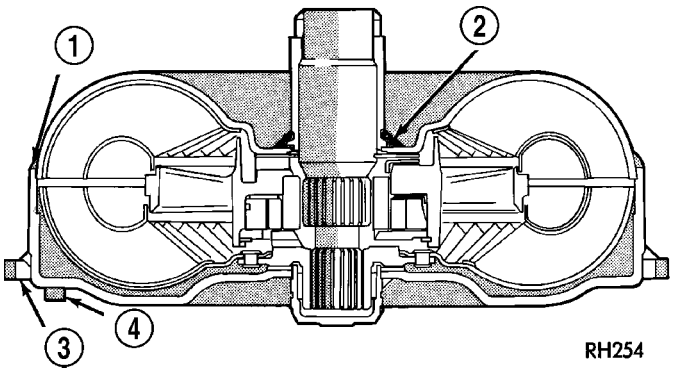


*Fig. 12 Converter Leak Points - Typical*

1 - OUTSIDE DIAMETER WELD
2 - TORQUE CONVERTER HUB WELD
3 - STARTER RING GEAR
4 - LUG

## REMOVAL

(1) Disconnect battery negative cable.

(2) Raise and support vehicle.

(3) Disconnect and lower or remove necessary exhaust components.

(4) Remove engine-to-transmission bending braces or engine collar.

(5) Remove starter motor. (Refer to 8 - ELECTRICAL/STARTING/STARTER MOTOR - REMOVAL)

(6) On 4.0L engine equipped vehicles, disconnect and remove crankshaft position sensor (Fig. 13). Retain sensor attaching bolt.

**CAUTION: The crankshaft position sensor can be damaged during transmission removal (or installation) if the sensor is left in place. To avoid damage, remove the sensor before removing the transmission.**

(7) If transmission is being removed for overhaul, remove transmission oil pan, drain fluid and reinstall pan. (Refer to 21 - TRANSMISSION/AUTOMATIC - 42RLE/FLUID - STANDARD PROCEDURE)

(8) Remove torque converter access cover.

(9) Rotate crankshaft in clockwise direction until converter bolts are accessible. Then remove bolts one at a time. Rotate crankshaft with socket wrench on dampener bolt.