AUTOMATIC TRANSMISSION - 42RLE (Continued)

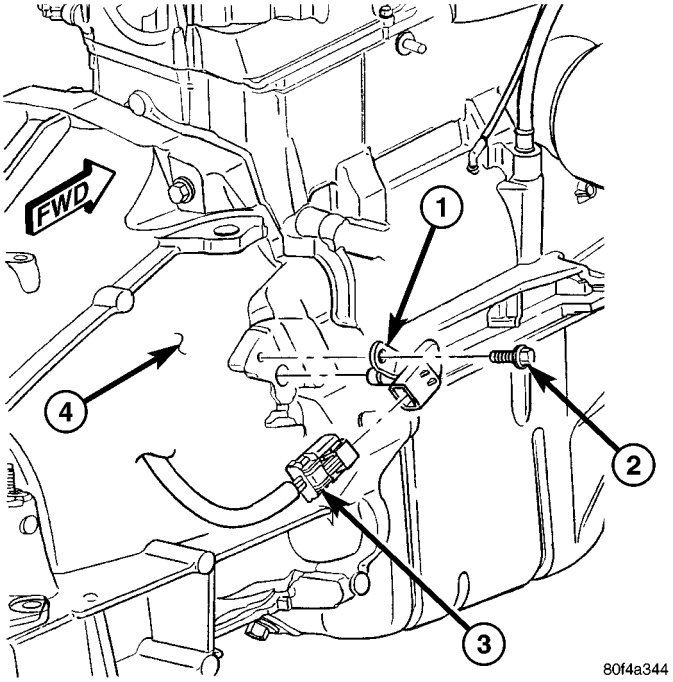

Fig. 13 Crankshaft Position Sensor

1 - CRANKSHAFT POSITION SENSOR
2 - MOUNTING BOLT
3 - ELECTRICAL CONNECTOR
4 - TRANSMISSION BELLHOUSING

(10) Mark propeller shaft and axle yokes for assembly alignment. Then disconnect and remove propeller shafts. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - REMOVAL)

(11) Disconnect wires from the input and output speed sensors (Fig. 14).

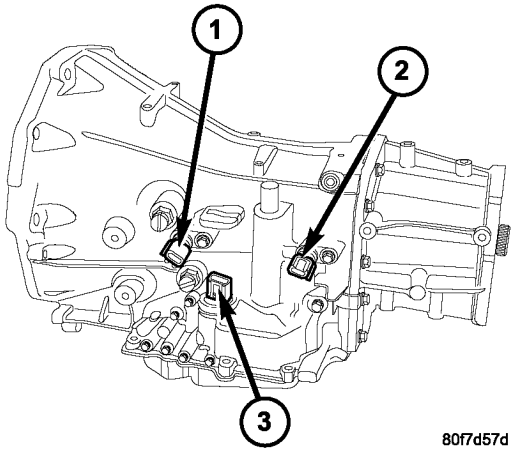

Fig. 14 Input and Output Speed Sensors and Transmission Range Sensor

1 - INPUT SPEED SENSOR
2 - OUTPUT SPEED SENSOR
3 - TRANSMISSION RANGE SENSOR

(12) Disconnect wires from the transmission range sensor (Fig. 14) and the solenoid/pressure switch assembly (Fig. 15).

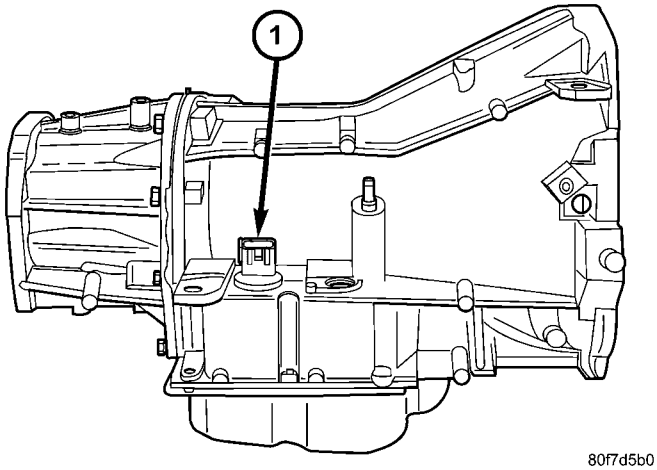

Fig. 15 Solenoid/Pressure Switch Assembly

1 - SOLENOID/PRESSURE SWITCH ASSEMBLY CONNECTOR

(13) Disconnect gearshift cable from transmission manual valve lever.

(14) Disconnect shift rod from transfer case shift lever or remove shift lever from transfer case.

(15) Support rear of engine with safety stand or jack.

(16) Raise transmission slightly with service jack to relieve load on skid plate and transmission support.

(17) Remove bolts securing rear support (Fig. 16) and cushion to transmission and skid plate. Raise transmission slightly, slide exhaust hanger arm from bracket and remove rear support.

(18) Remove bolts attaching skid plate (Fig. 16) to frame and remove skid plate. (Refer to 13 - FRAME

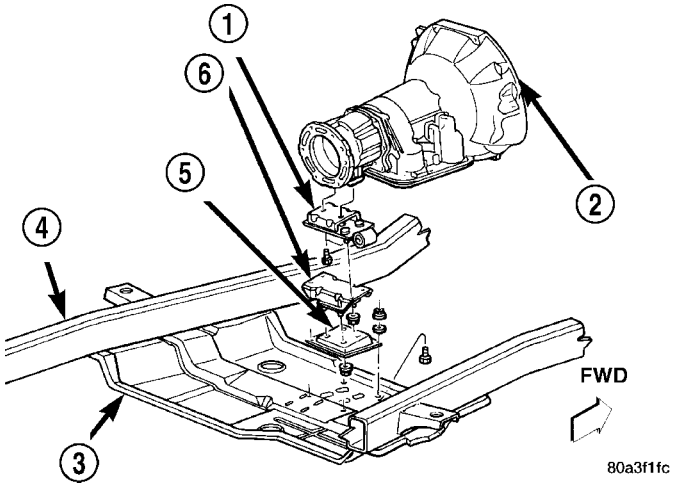

Fig. 16 Transmission Mount - Automatic Transmission

1 - TRANSMISSION SUPPORT BRACKET
2 - AUTOMATIC TRANSMISSION
3 - SKID PLATE
4 - FRAME
5 - TRANSMISSION MOUNT SUPPORT BRACKET
6 - CUSHION