AUTOMATIC TRANSMISSION - 42RLE (Continued)

& BUMPERS/FRAME/TRANSFER CASE SKID PLATE - REMOVAL)

(19) Disconnect transfer case vent hose.

(20) Remove transfer case. (Refer to 21 - TRANSMISSION/TRANSFER CASE - REMOVAL)

(21) Remove fill tube bracket bolts and pull tube out of transmission. Retain fill tube seal. Remove the bolt attaching transfer case vent tube to converter housing.

(22) Disconnect fluid cooler lines at transmission.

(23) Remove all converter housing bolts.

(24) Carefully work transmission and torque converter assembly rearward off engine block dowels.

(25) Hold torque converter in place during transmission removal.

(26) Lower transmission and remove assembly from under the vehicle.

(27) To remove torque converter, carefully slide torque converter out of the transmission.

## DISASSEMBLY

**NOTE: If the transmission is being reconditioned (clutch/seal replacement) or replaced, it is necessary to perform the Quick Learn Procedure using the DRBIII® Scan Tool (Refer to 8 - ELECTRICAL/ELECTRONIC CONTROL MODULES/TRANSMISSION CONTROL MODULE - STANDARD PROCEDURE).**

Before disassembling transmission, move the shift lever clockwise as far as it will go and then remove the shift lever.

**NOTE: Tag all clutch pack assemblies, as they are removed, for reassembly identification.**

**CAUTION: Do not intermix clutch discs or plates as the unit might then fail.**

(1) Remove the torque converter from the transmission input shaft (Fig. 17).

(2) Measure input shaft end play using Tool 8266. Set up Tool 8266 and a dial indicator as shown in (Fig. 18). Move input shaft in and out to obtain end play reading. End play specifications are 0.13 to 0.64 mm (0.005 to 0.025 inch). Record indicator reading for reference when reassembling the transmission. If endplay exceeds the specified range, the #4 thrust plate needs to be inspected and changed if necessary.

**NOTE: The four bolts along the bottom of the adapter housing have a sealing patch applied from the factory. Note the locations of these bolts and seperate these bolts for reuse.**

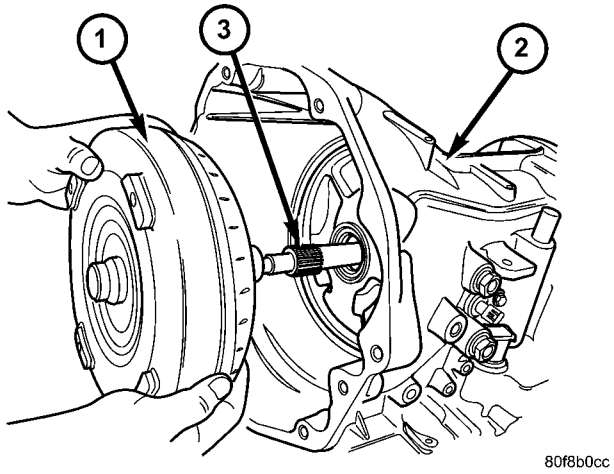


***Fig. 17 Remove Torque Converter***

1 - TORQUE CONVERTER
2 - TRANSMISSION
3 - INPUT SHAFT

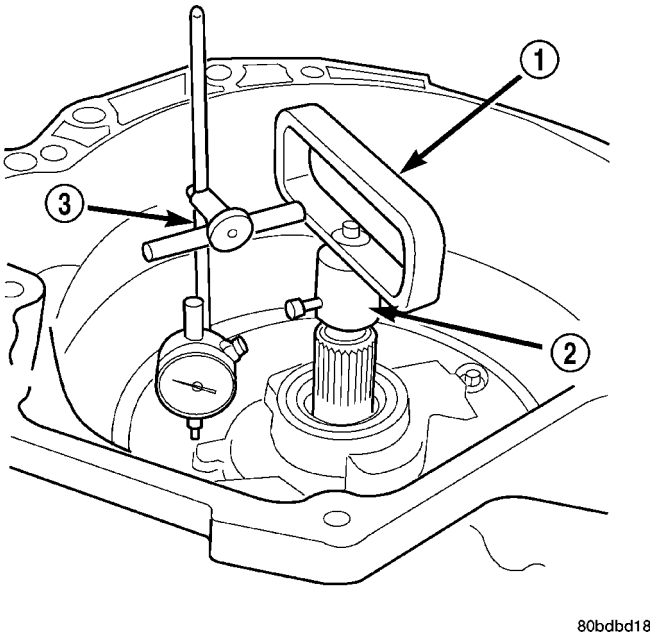


***Fig. 18 Measure Input Shaft End Play Using Tool 8266 - Typical***

1 - TOOL 8266-8
2 - TOOL 8266-2
3 - TOOL C-3339