AUTOMATIC TRANSMISSION - 42RLE (Continued)

(18) Remove the low/reverse accumulator snap ring (Fig. 35).

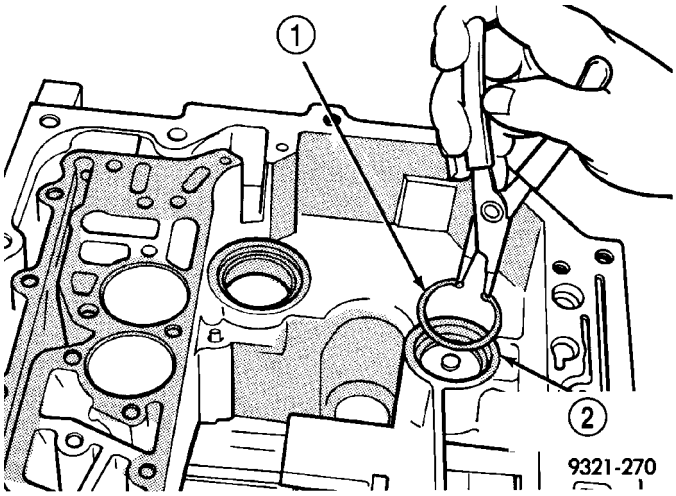


Fig. 35 Remove Low/Reverse Accumulator

1 - SNAP RING
2 - LOW/REVERSE ACCUMULATOR

(19) Remove the low/reverse accumulator plug (Fig. 36).

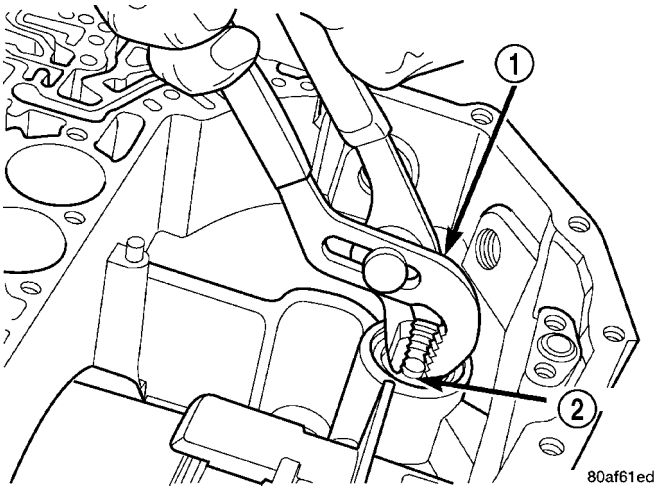


Fig. 36 Remove Low/Reverse Accumulator Plug

1 - ADJUSTABLE PLIERS
2 - PLUG

(20) Remove low/reverse accumulator piston using suitable pliers (Fig. 37). Remove piston and springs (Fig. 38).

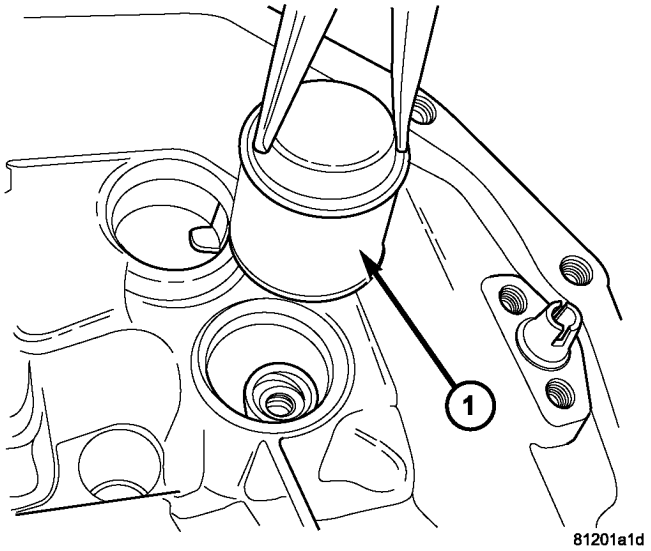


Fig. 37 Low/Reverse Accumulator Piston

1 - ACCUMULATOR PISTON

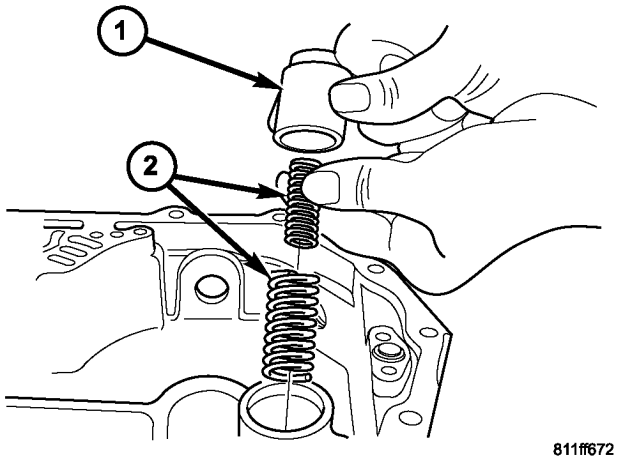


Fig. 38 Low/Reverse Accumulator

1 - PISTON
2 - RETURN SPRINGS