AUTOMATIC TRANSMISSION - 42RLE (Continued)

**NOTE: Verify that Tool 5058A is centered properly over the 2/4 clutch retainer before compressing. If necessary, fasten the 5058A bar to the bellhousing flange with any combination of locking pliers and bolts to center the tool properly.**

(32) Install and load Tool 5058A to remove the 2/4 clutch retainer snap ring (Fig. 51).

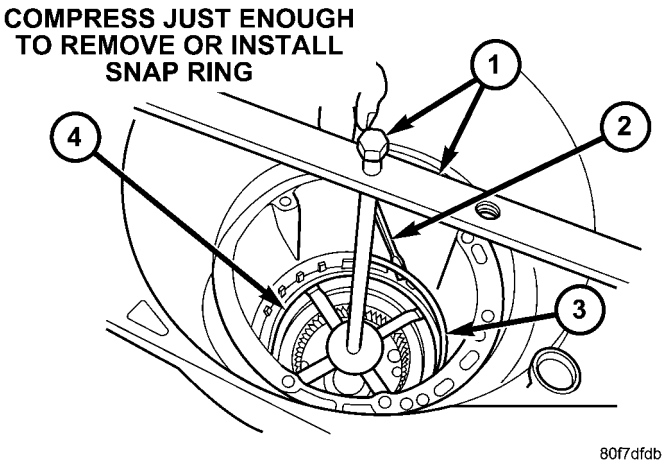



***Fig. 51 Remove 2/4 Clutch Retainer Snap Ring***

1 - TOOL 5058
2 - SCREWDRIVER
3 - SNAP RING
4 - 2/4 CLUTCH RETAINER

**NOTE: The 2/4 Clutch Piston has bonded seals which are not individually serviceable. Seal replacement requires replacement of the piston assembly.**

(33) Remove the 2/4 clutch retainer (Fig. 52) and (Fig. 53).

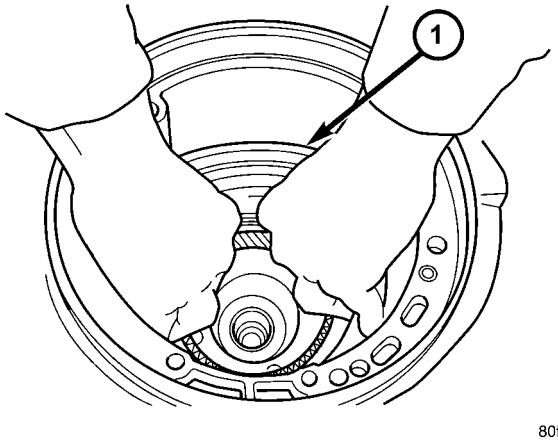



***Fig. 52 Remove 2/4 Clutch Retainer***

1 - 2/4 CLUTCH RETAINER

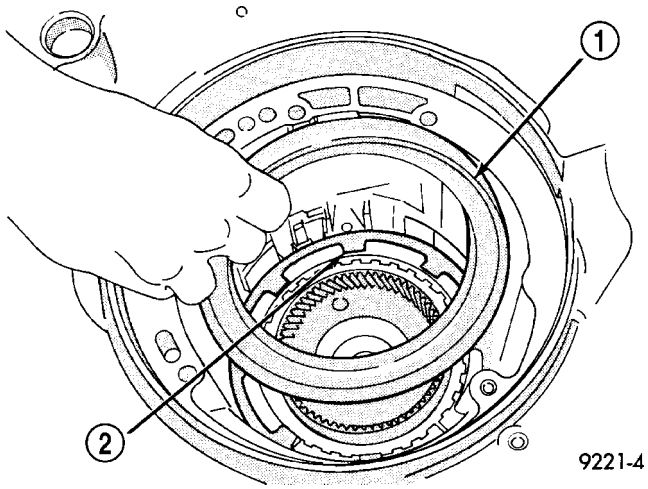



***Fig. 53 2/4 Clutch Retainer***

1 - 2/4 CLUTCH RETAINER
2 - 2/4 CLUTCH RETURN SPRING

(34) Remove the 2/4 clutch return spring (Fig. 54).

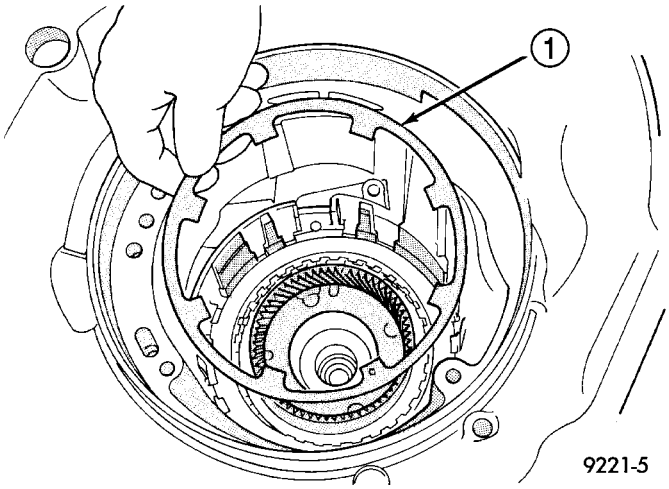



***Fig. 54 Remove 2/4 Clutch Return Spring***

1 - 2/4 CLUTCH RETURN SPRING