AUTOMATIC TRANSMISSION - 42RLE (Continued)

(39) Remove the low/reverse reaction plate snap ring (Fig. 59).

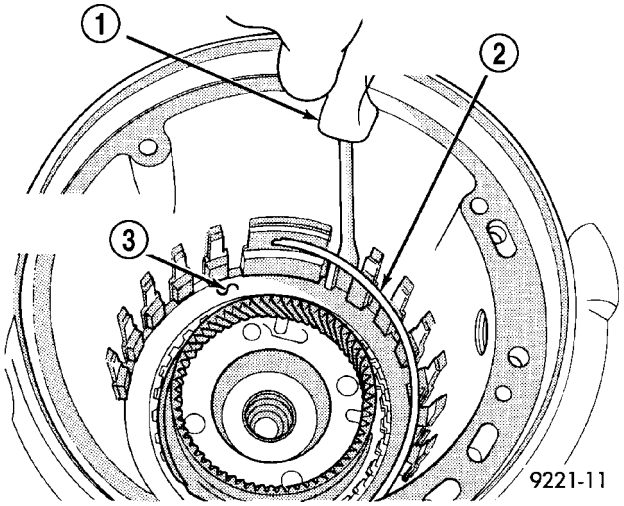


Fig. 59 Remove Low/Reverse Reaction Plate Snap Ring

1 - SCREWDRIVER
2 - LOW/REVERSE REACTION PLATE FLAT SNAP RING
3 - DO NOT SCRATCH CLUTCH PLATE

(40) Remove the low/reverse clutch pack (Fig. 60).

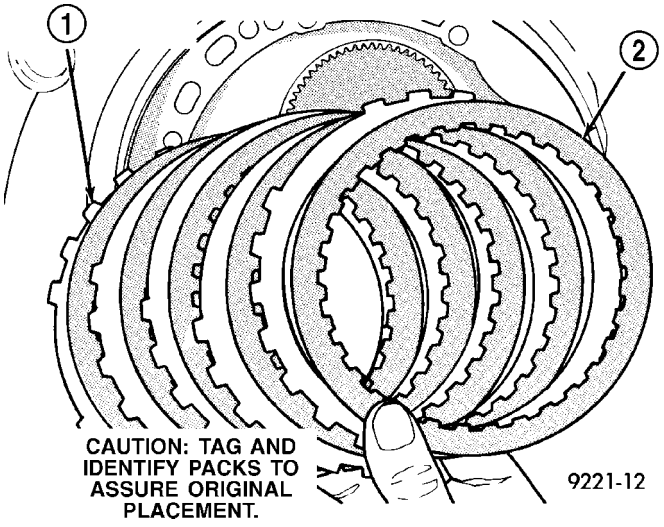


Fig. 60 Remove Low/Reverse Clutch Pack

1 - CLUTCH PLATES (5)
2 - CLUTCH DISCS (5)

CAUTION: Failure to grind and open stakes of the output shaft nut will result in thread damage to the shaft during nut removal.

WARNING: WEAR SAFETY GOGGLES WHILE GRINDING STAKE NUTS.

(41) Using a die grinder or equivalent, grind the stakes in the shoulder of the shaft nuts as shown in (Fig. 61) (Fig. 62). Do not grind all the way through the nut and into the shaft. There are two stakes on each nut.

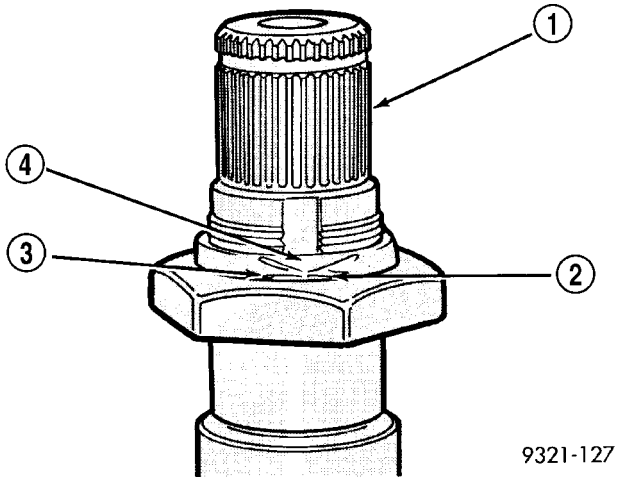


Fig. 61 Grinding Stakes

1 - TRANSFER SHAFT
2 - GRIND HERE
3 - GRIND HERE
4 - NUT STAKE

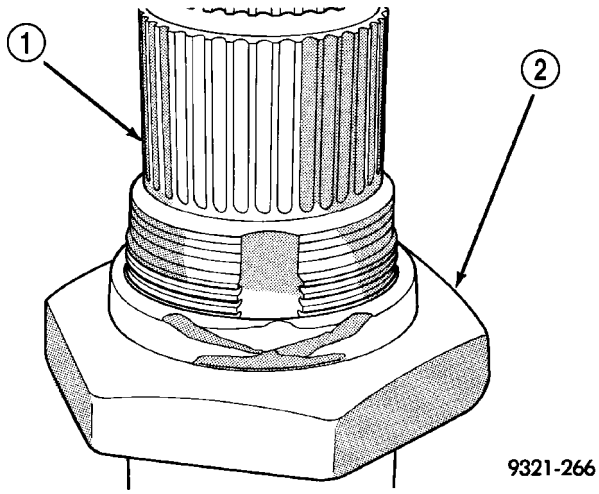


Fig. 62 Stake Grinding Pattern

1 - TRANSFER SHAFT
2 - TRANSFER SHAFT NUT