AUTOMATIC TRANSMISSION - 42RLE (Continued)

(42) Using a small chisel, carefully open the stakes on nut (Fig. 63).

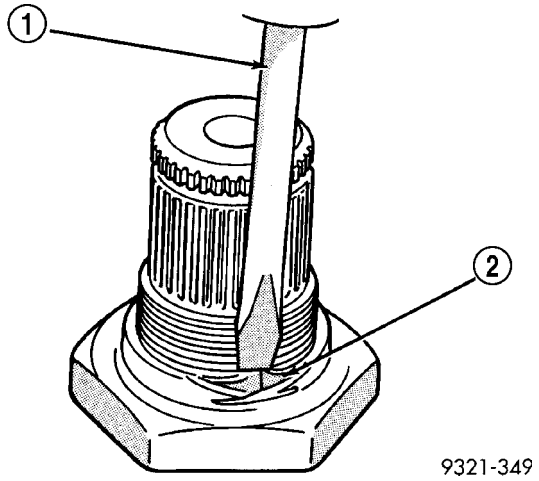

Fig. 63 Opening Nut Stakes

1 - CHISEL
2 - NUT STAKE

(43) Use special tool 6497 and 6498A to remove the transfer shaft nut or the output shaft nut (Fig. 64).

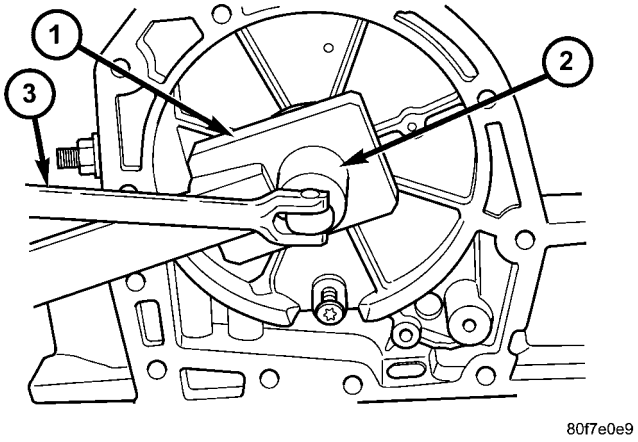

Fig. 64 Remove Output Shaft Nut

1 - SPECIAL TOOL 6497
2 - SPECIAL TOOL 6498A
3 - BREAKER BAR

(44) Remove the output shaft from case using a shop press (Fig. 65).

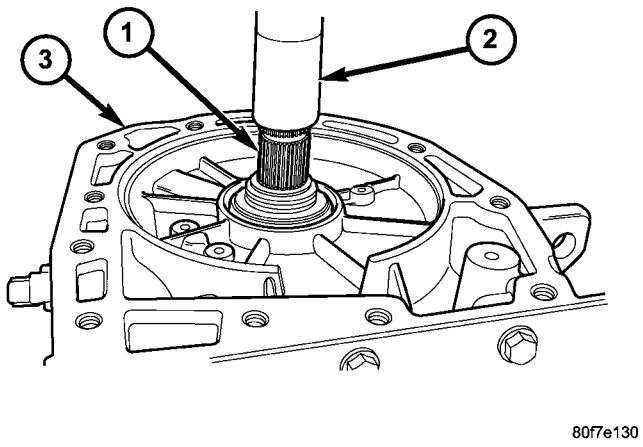

Fig. 65 Use Arbor Press to Remove Output Shaft from Case

1 - OUTPUT SHAFT
2 - ARBOR PRESS
3 - TRANSMISSION CASE

Use special tool 6596 with a shop press to remove the front output shaft bearing cup (Fig. 66).

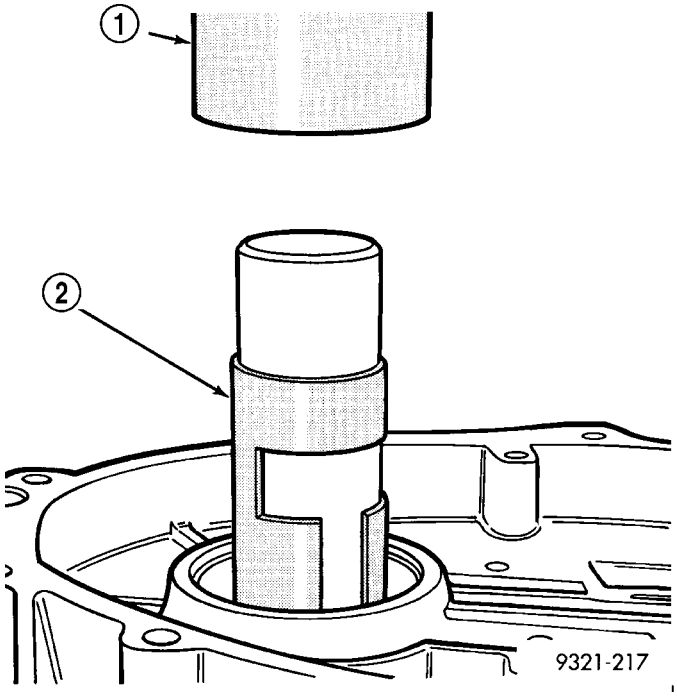

Fig. 66 Remove Front Bearing Cup - Typical

1 - ARBOR PRESS
2 - SPECIAL TOOL 6596