(45) Use special tool 6597 and handle C-4171 and C-4171-2 to press the rear output shaft bearing cup rearward (Fig. 67).

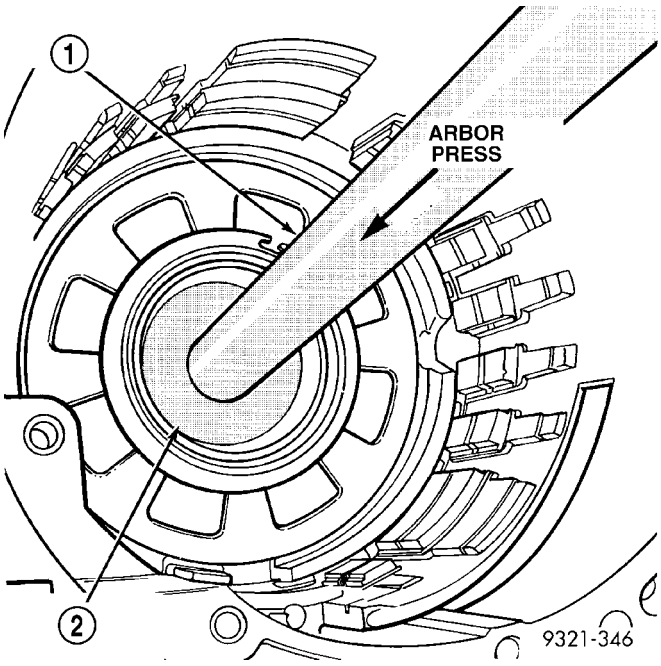


Fig. 67 Remove Rear Bearing Cup

1 - SPECIAL TOOL 4171 AND 4171-2
2 - SPECIAL TOOL 6597

(46) Remove the rear carrier front bearing cone (Fig. 68).

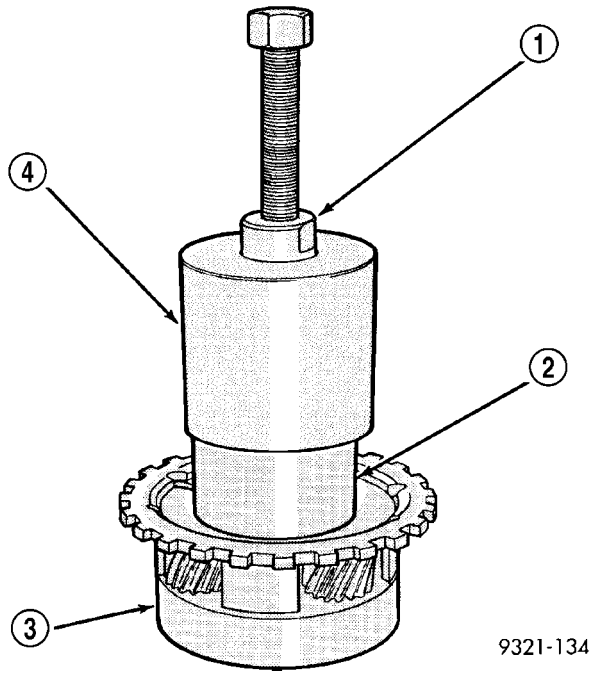


Fig. 68 Remove Rear Carrier Front Bearing Cone

1 - SPECIAL TOOL 5048-1
2 - SPECIAL TOOL 6545
3 - REAR CARRIER
4 - SPECIAL TOOL 5048

(47) Install and load compressor (Fig. 69) as shown in (Fig. 70).

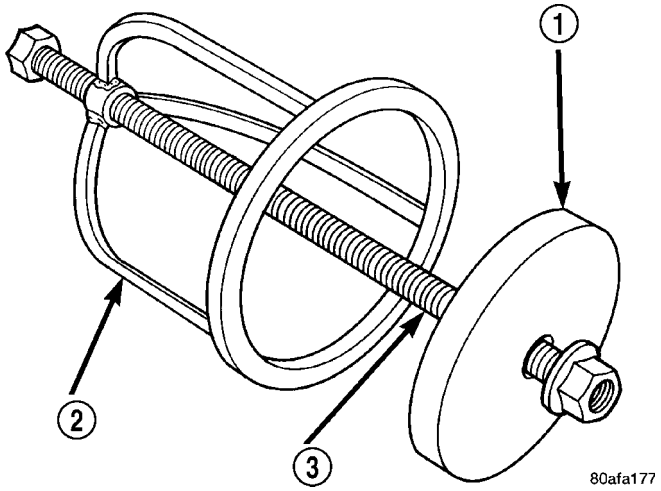


Fig. 69 Low/Reverse Spring Compressor Tool

1 - TOOL 6057
2 - TOOL 5059
3 - TOOL 5058-3

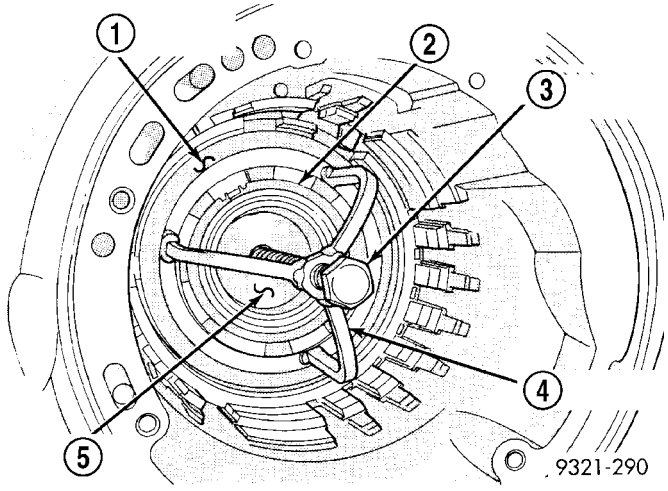


Fig. 70 Compressor Tool in Use

1 - LOW/REVERSE CLUTCH RETURN SPRING
2 - SNAP RING (INSTALL AS SHOWN)
3 - TOOL 5058A-3
4 - TOOL 5059A
5 - SPECIAL TOOL 6057