AUTOMATIC TRANSMISSION - 42RLE (Continued)

(d) Install shim on output shaft (Fig. 94). Apply small amount of petrolatum onto the shim to hold it in place. Use the original shim as a starting point. If original shim is not available, use the thickest shim available.

(e) Install output shaft/rear carrier into rear bearing. The shaft must be pressed into position. Use special tool MD-998911 (Disc) and C- 4171 and C4171-2 (Handle) to press shaft into rear bearing (Fig. 95).

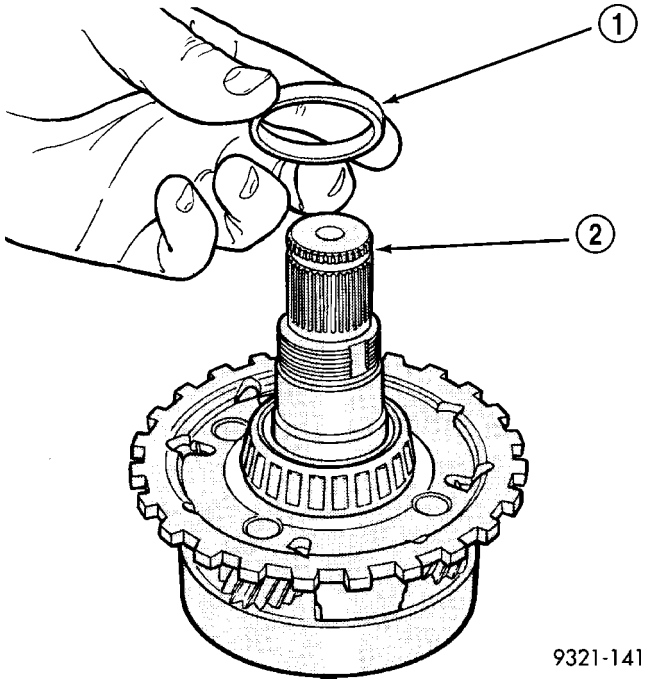


Fig. 94 Shim Installation

1 - SHIM
2 - OUTPUT SHAFT

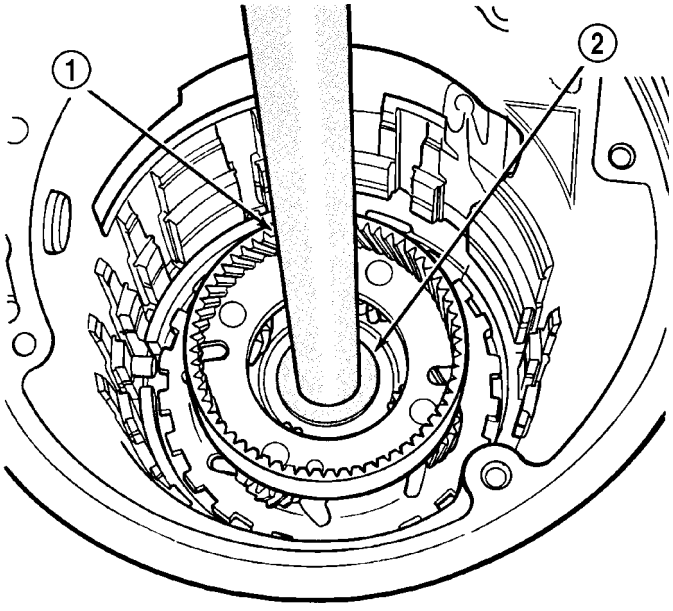


Fig. 95 Press Shaft Into Case

1 - SPECIAL TOOL C-4171 AND C-4171-2
2 - SPECIAL TOOL MD-998911

(f) **Do not re-use old output shaft nut because the removed stake weakens the nut flange.** Using special tools 6497 and 6498-A, install new output shaft nut. Do not reuse old output shaft nut. Tighten new output shaft nut to 271 N·m (200 ft. lbs.).

(g) Check the turning torque of the output shaft (Fig. 96). The shaft should have 1 to 8 in. lbs. of turning torque. If the turning torque is **higher than** 8 in. lbs., install a thicker shim. If turning torque is **less than** 1 in. lb., install a thinner shim. Make sure there is no end play.

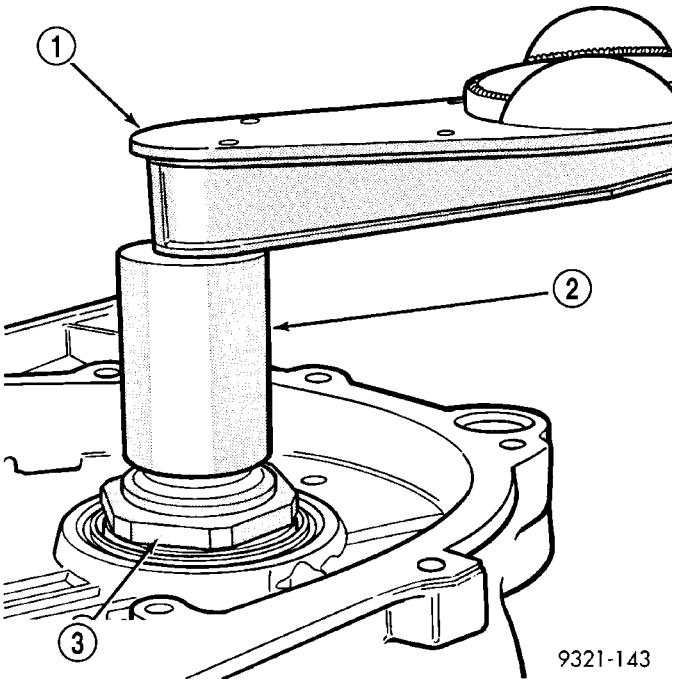


Fig. 96 Checking Turning Torque

1 - TORQUE WRENCH
2 - SPECIAL TOOL 6498-A
3 - OUTPUT SHAFT NUT