AUTOMATIC TRANSMISSION - 42RLE (Continued)

(h) The new nut must be staked after the correct turning torque is obtained (Fig. 97) (Fig. 98). Use special tool 6639 to stake output shaft nut. **CAUTION: Failure to stake nut could allow the nut to back-off during use.**

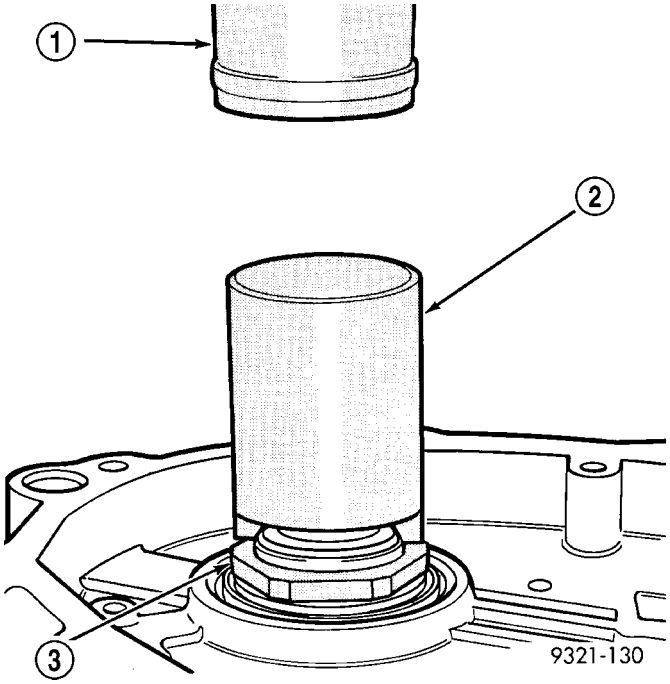


Fig. 97 Staking Output Shaft Nut - Typical

1 - ARBOR PRESS
2 - STAKING TOOL - 6639
3 - NEW NUT

(14) Install low/reverse clutch pack (Fig. 99). Leave uppermost disc out to facilitate snap ring installation.

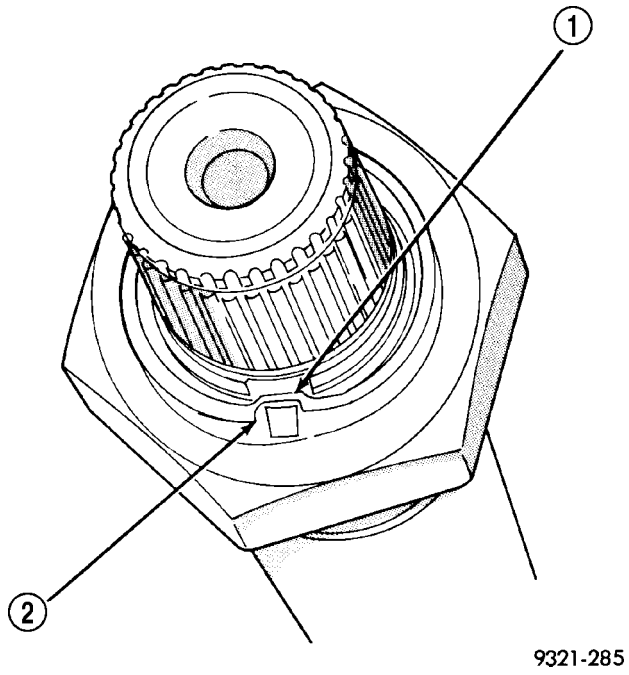


Fig. 98 Properly Staked Nut

1 - BOTTOMED IN SLOT
2 - CORRECTLY STAKED NUT

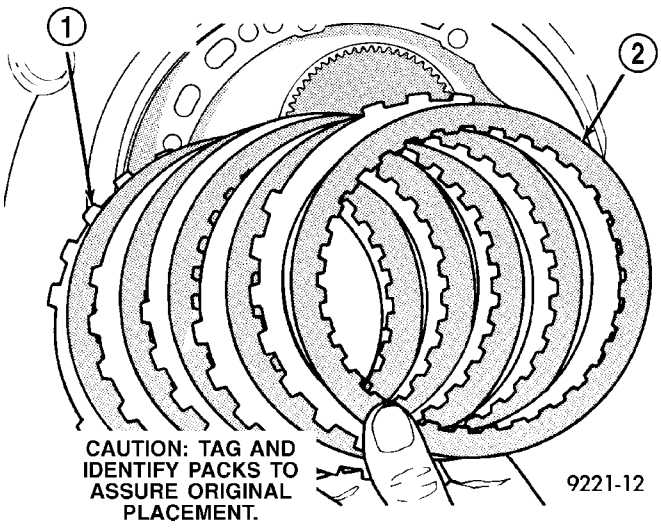


Fig. 99 Install Low/Reverse Clutch Pack

1 - CLUTCH PLATES (5)
2 - CLUTCH DISCS (5)