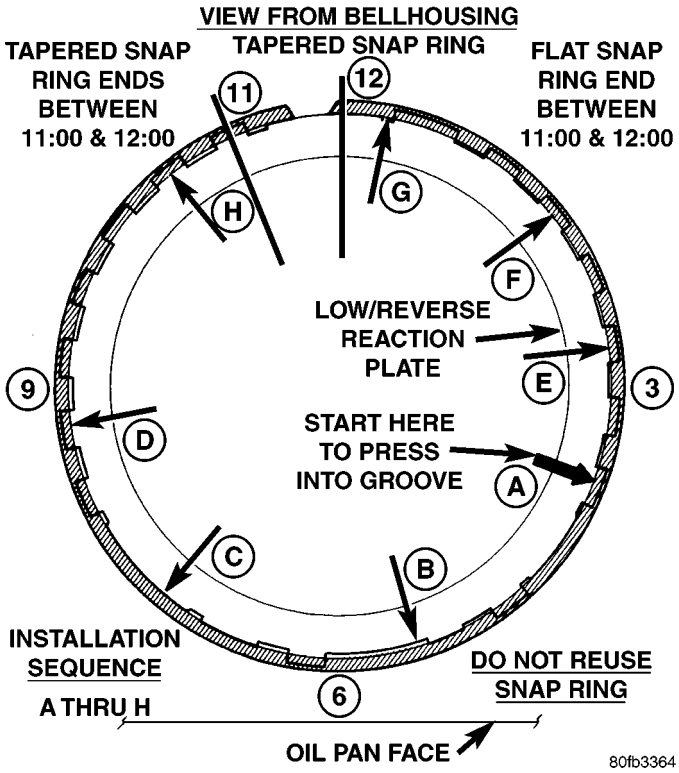


Fig. 104 Tapered Snap Ring Instructions

(19) Measure low/reverse clutch pack. Set up dial indicator as shown in (Fig. 105). Press down clutch pack with finger and zero dial indicator. Record measurement in four (4) places and take average reading. **Low/Reverse clutch pack clearance is 0.84 to 1.60 mm (0.033 to 0.063 inch).**

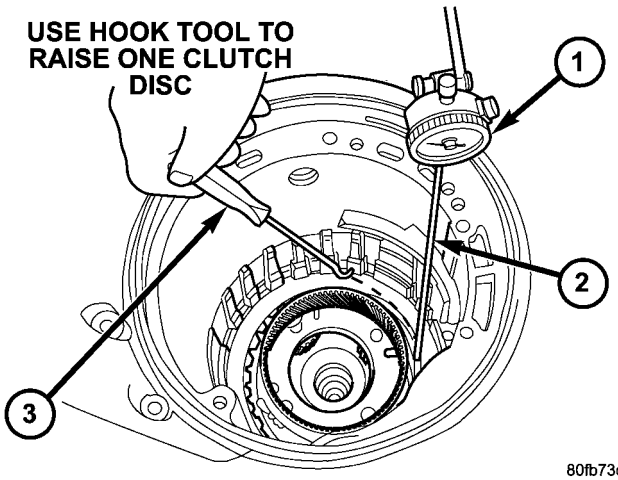


Fig. 105 Check Low/Reverse Clutch Clearance

1 - DIAL INDICATOR
2 - DIAL INDICATOR TIP TOOL 6268
3 - HOOK TOOL

(20) Select the proper low/reverse reaction plate to achieve specifications.

(21) Install 2/4 clutch pack (Fig. 106).

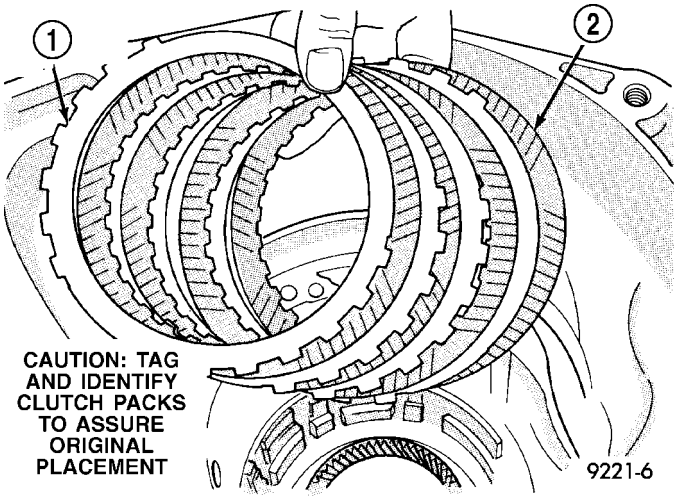


Fig. 106 Install 2/4 Clutch Pack

1 - CLUTCH PLATE (4)
2 - CLUTCH DISC (4)

NOTE: The 2/4 Clutch Piston has bonded seals which are not individually serviceable. Seal replacement requires replacement of the piston assembly.

(22) Install 2/4 clutch belleville spring (Fig. 107) (Fig. 108).

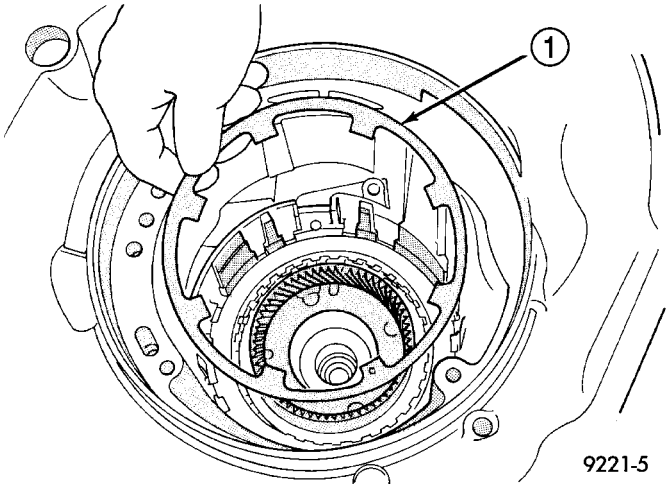


Fig. 107 Install 2/4 Clutch Return Spring

1 - 2/4 CLUTCH RETURN SPRING