AUTOMATIC TRANSMISSION - 42RLE (Continued)

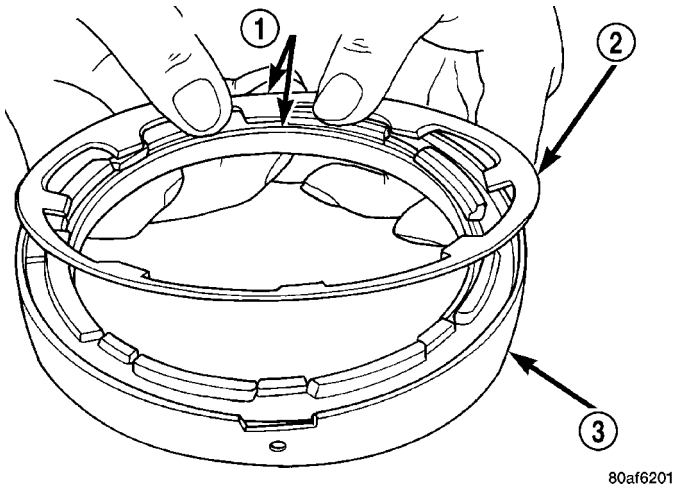


***Fig. 108 Proper Orientation of 2/4 Clutch***

1 - NOTE POSITION
2 - RETURN SPRING
3 - 2/4 CLUTCH RETAINER

(23) Install 2/4 clutch retainer (Fig. 109).

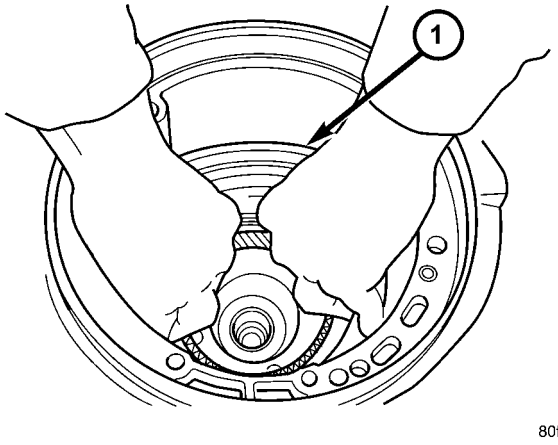


***Fig. 109 Install 2/4 Clutch Retainer***

1 - 2/4 CLUTCH RETAINER

**NOTE: Verify that Tool 5058A is centered properly over the 2/4 clutch retainer before compressing. If necessary, fasten the 5058A bar to the bellhousing flange with any combination of locking pliers and bolts to center the tool properly.**

(24) Set up Tool 5058 as shown in (Fig. 110). Compress 2/4 clutch just enough to facilitate snap ring installation.

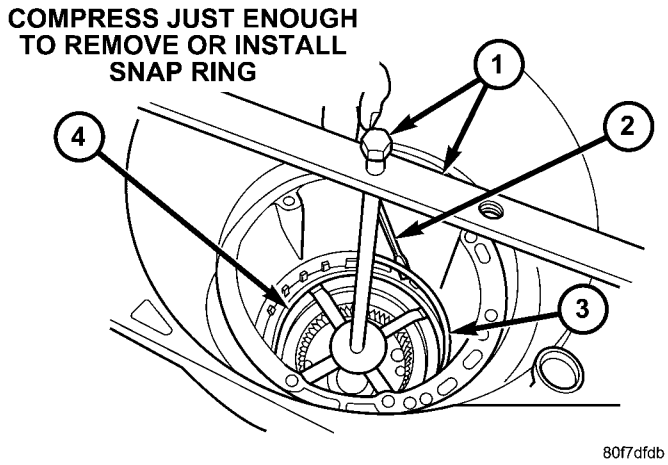


***Fig. 110 Remove 2/4 Clutch Retainer Snap Ring***

1 - TOOL 5058
2 - SCREWDRIVER
3 - SNAP RING
4 - 2/4 CLUTCH RETAINER

(25) **Measure 2/4 clutch clearance:** Set up dial indicator as shown in (Fig. 111). Press down clutch pack with finger and zero dial indicator. Record measurement in four (4) places and take average reading. **The 2/4 clutch pack clearance is 0.76 to 2.64 mm (0.030 to 0.104 inch).** If not within specifications, the clutch is not assembled properly or is excessively worn. **There is no adjustment for the 2/4 clutch clearance.**

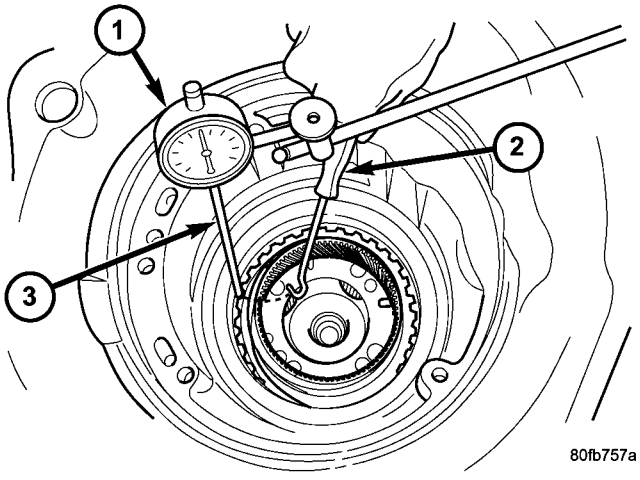


***Fig. 111 Check 2/4 Clutch Clearance***

1 - DIAL INDICATOR
2 - HOOK TOOL
3 - DIAL INDICATOR TIP TOOL 6268