AUTOMATIC TRANSMISSION - 42RLE (Continued)

(35) Install oil pump and torque the new oil pump-to-case bolts to 30 N·m (265 in. lbs.) (Fig. 123). Do not reuse original oil pump bolts.

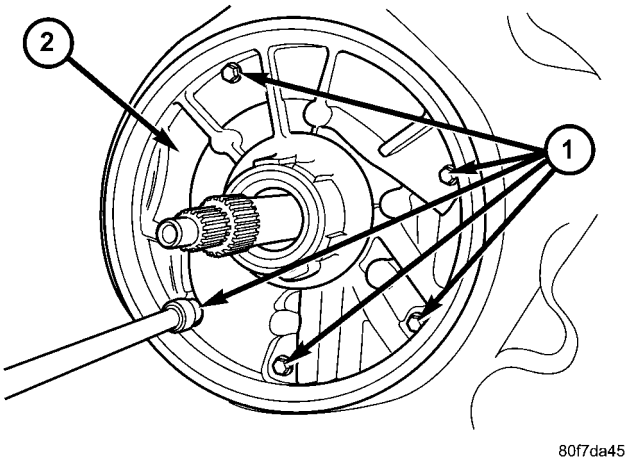


Fig. 123 Install Oil Pump Attaching Bolts

1 - BOLTS
2 - OIL PUMP

(36) Install low/reverse accumulator as shown in (Fig. 124).

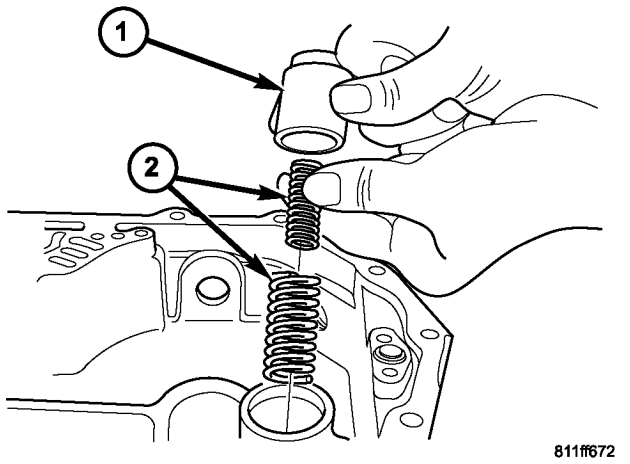


Fig. 124 Low/Reverse Accumulator

1 - PISTON
2 - RETURN SPRINGS

(37) Install low/reverse accumulator plug (Fig. 125).

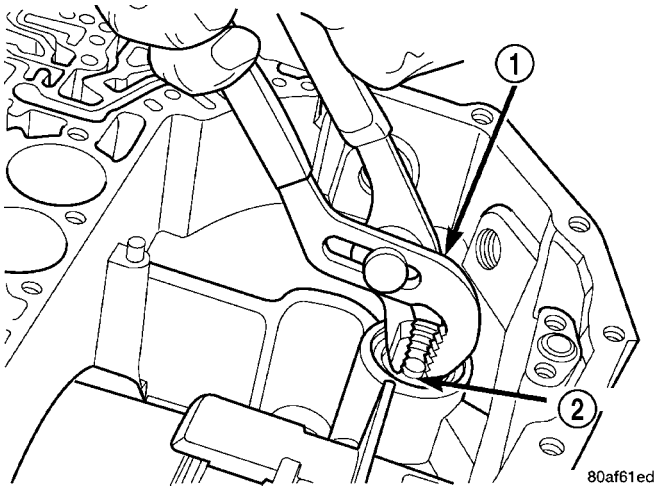


Fig. 125 Install Low/Reverse Accumulator Plug

1 - ADJUSTABLE PLIERS
2 - PLUG

(38) Install low/reverse accumulator snap ring (Fig. 126).

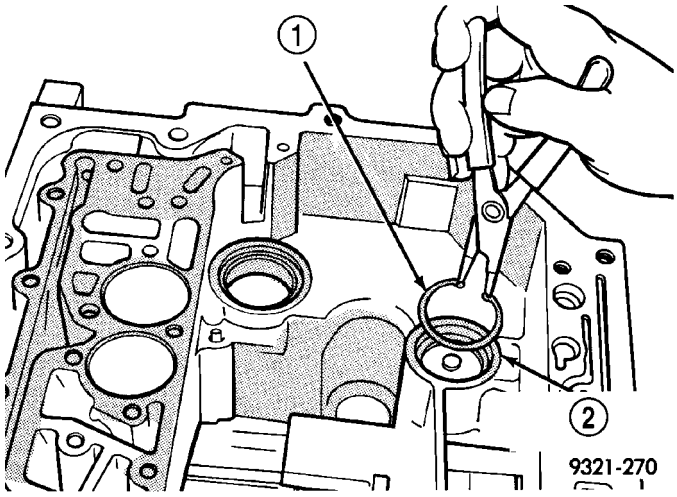


Fig. 126 Install Low/Reverse Accumulator Snap Ring

1 - SNAP RING
2 - LOW/REVERSE ACCUMULATOR