(45) As a final check of the transmission, measure the input shaft end play. This will indicate when a #4 thrust plate change is required. The #4 thrust plate is located behind the overdrive clutch hub. Attach a dial indicator to transmission bell housing with its plunger seated against end of input shaft (Fig. 134). Move input shaft in and out to obtain end play reading. **Input shaft end play must be 0.127 to 0.635 mm (0.005 to 0.025 inch).** If not within specifications, make the necessary thrust plate adjustment.

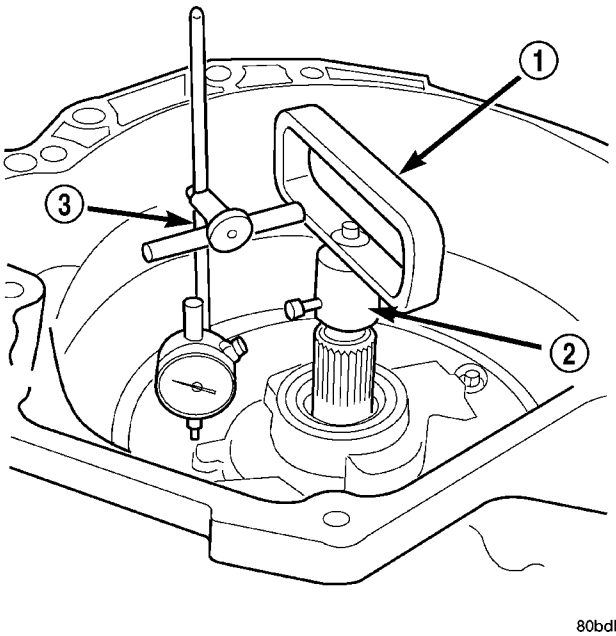

Fig. 134 Measure Input Shaft End Play Using Tool 8266 - Typical

1 - TOOL 8266-8
2 - TOOL 8266-2
3 - TOOL C-3339

(46) Inspect the lube tube grommet (Fig. 135) for damage. If the grommet lip is damaged, it will need to be replaced.

(47) Install the 4X4 stub shaft onto the transmission output shaft.

(48) Place a bead of Mopar® ATF RTV on the rear surface of the transmission case for the adapter housing.

(49) Install the adapter (Fig. 136) housing onto the transmission case.

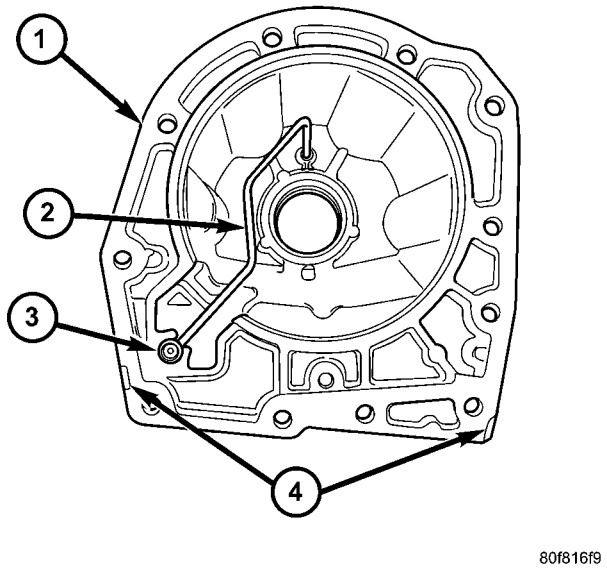

Fig. 135 Lube Tube Grommet

1 - HOUSING
2 - LUBE TUBE
3 - GROMMET
4 - PRY SLOTS

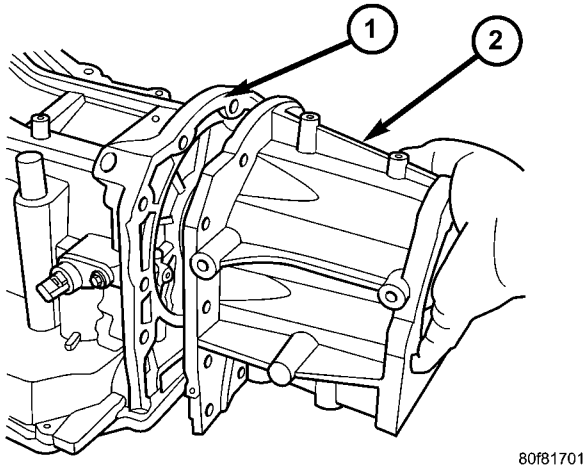

Fig. 136 Install Adapter Housing

1 - TRANSMISSION CASE
2 - ADAPTER HOUSING