(12) Carefully work transmission forward and over engine block dowels until converter hub is seated in crankshaft.

(13) Install and tighten bolts that attach transmission converter housing to engine block.

CAUTION: Be sure the converter housing is fully seated on the engine block dowels before tightening any bolts.

(14) Install torque converter attaching bolts. Tighten bolts to 88 N·m (65 ft. lbs.).

(15) On 4.0L engine equipped vehicles, install the crankshaft position sensor (Fig. 140).

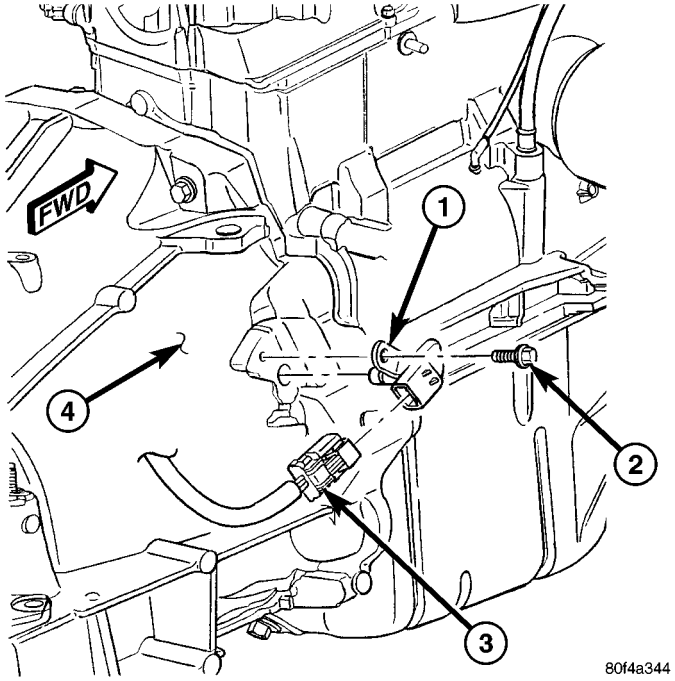

Fig. 140 Crankshaft Position Sensor

1 - CRANKSHAFT POSITION SENSOR
2 - MOUNTING BOLT
3 - ELECTRICAL CONNECTOR
4 - TRANSMISSION BELLHOUSING

(16) Install transmission fill tube and seal. Install new fill tube seal in transmission before installation.

(17) Connect transmission cooler lines to transmission.

(18) Install transfer case onto transmission. (Refer to 21 - TRANSMISSION/TRANSFER CASE - INSTALLATION)

(19) Install skid plate (Fig. 141) and attach transmission rear support to skid plate. (Refer to 13 - FRAME & BUMPERS/FRAME/TRANSFER CASE SKID PLATE - INSTALLATION)

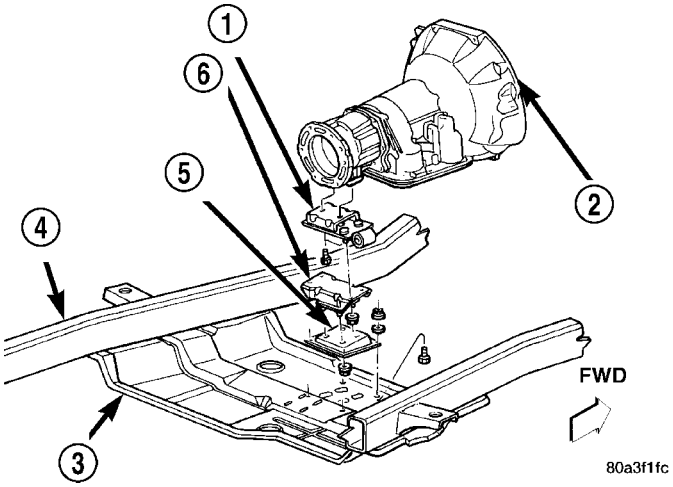

Fig. 141 Transmission Mount - Automatic Transmission

1 - TRANSMISSION SUPPORT BRACKET
2 - AUTOMATIC TRANSMISSION
3 - SKID PLATE
4 - FRAME
5 - TRANSMISSION MOUNT SUPPORT BRACKET
6 - CUSHION

(20) Remove engine support fixture.

(21) Remove transmission jack.

(22) Connect input and output speed sensor wires (Fig. 142).

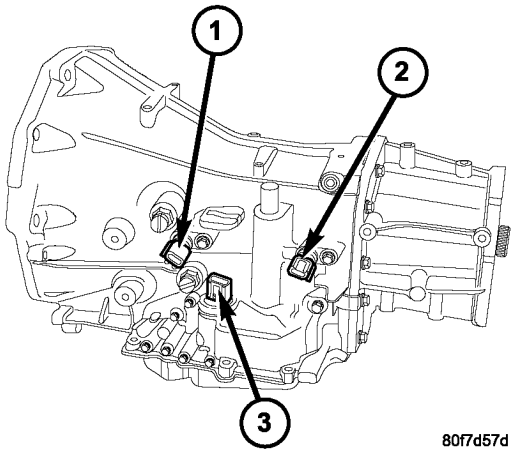

Fig. 142 Input and Output Speed Sensors and Transmission Range Sensor

1 - INPUT SPEED SENSOR
2 - OUTPUT SPEED SENSOR
3 - TRANSMISSION RANGE SENSOR