ACCUMULATOR

DESCRIPTION

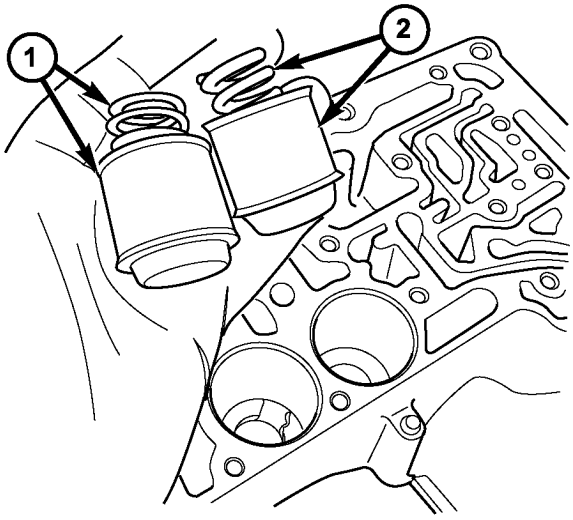

Fig. 144 Underdrive and Overdrive Accumulators

1 - OVERDRIVE PISTON AND SPRING
2 - UNDERDRIVE PISTON AND SPRING

The 42RLE underdrive, overdrive, low/reverse, and 2/4 clutch hydraulic circuits each contain an accumulator. An accumulator typically consists of a piston, return spring(s), and a cover or plug. The overdrive (1) and underdrive (2) accumulators are located within the transmission case, and are retained by the valve body (Fig. 144).

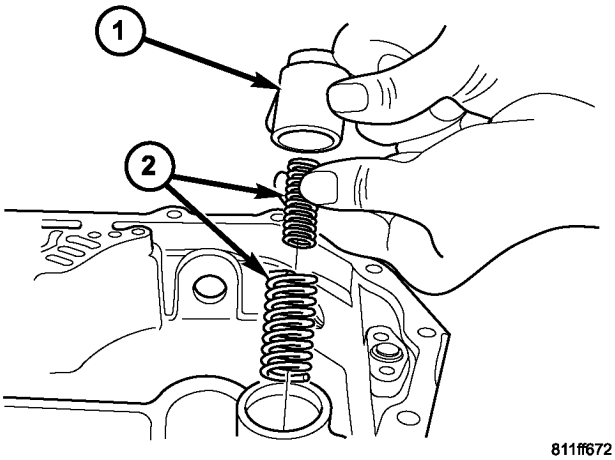

Fig. 145 Low/Reverse Accumulator

1 - PISTON
2 - RETURN SPRINGS

The low reverse (1) accumulator (Fig. 145) is also located within the transmission case, but the assembly is retained by a cover and a snap-ring.

The 2/4 accumulator (5) is located in the valve body. It is retained by a cover and retaining screws (Fig. 146).

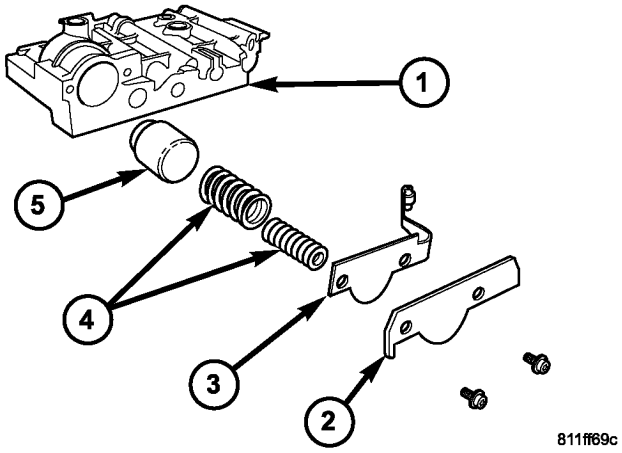

Fig. 146 2/4 Accumulator Assembly

1 - VALVE BODY
2 - RETAINER PLATE
3 - DETENT SPRING
4 - RETURN SPRINGS
5 - PISTON

OPERATION

The function of an accumulator is to cushion the application of a frictional clutch element. When pressurized fluid is applied to a clutch circuit, the application force is dampened by fluid collecting in the respective accumulator chamber against the piston and springs. The intended result is a smooth, firm clutch application.

ADAPTER HOUSING SEAL

REMOVAL

(1) Remove the transfer case (Refer to 21 - TRANSMISSION/TRANSFER CASE - REMOVAL).

(2) Using a screw mounted in a slide hammer, remove the adapter housing seal.

INSTALLATION

(1) Install a new adapter housing seal with Tool Handle C-4171 and Installer C-3860-A.

(2) Install the transfer case (Refer to 21 - TRANSMISSION/TRANSFER CASE - INSTALLATION).

BEARINGS

ADJUSTMENTS

BEARING ADJUSTMENT PROCEDURES

Take extreme care when removing and installing bearing cups and cones. **Use only an arbor press for installation,** as a hammer may not properly align the bearing cup or cone. Burrs or nicks on the