BRAKE TRANSMISSION SHIFT INTERLOCK MECHANISM (Continued)

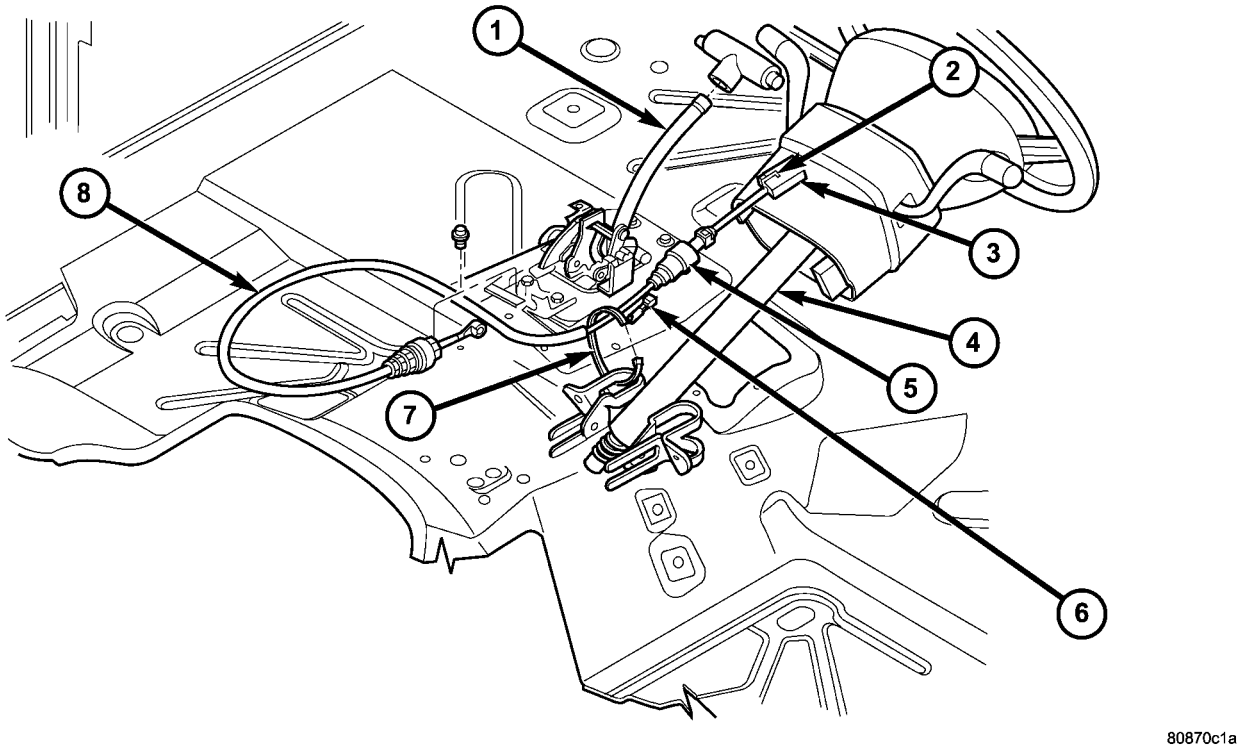

Fig. 150 Cable and Shifter

1 - SHIFT MECHANISM
2 - LOCK-TAB
3 - IGNITION LOCK INTERLOCK
4 - STEERING COLUMN
5 - SOLENOID
6 - WIRE CONNECTOR
7 - TIE STRAP
8 - PARK/BRAKE INTERLOCK CABLE

(6) Pull the cable forward and release.Ensure the cable end is seated in the bellcrank and press cable lock button down until it snaps in place.

(7) Check adjustment as follows:

(a) Check movement of release shift handle button (floor shift) or release lever (column shift). You should not be able to press button inward or move column lever.

(b) Turn ignition switch to RUN position.

(c) Shifting out of park should not be possible.

(d) Apply the brake and attempt to shift out of PARK. Shifting should be possible.

(e) While the transmission is shifted out of PARK, release the brake and attempt to shift through all gears. Release the shift button at least once during this procedure. The ignition key should not go to the LOCK position.

(f) Return transmission to the PARK position without applying the brake.

(8) Move shift lever back to PARK and check ignition switch operation. You should be able to turn switch to LOCK position and shift lever release button/lever should not move.

DRIVING CLUTCHES

DESCRIPTION

Three hydraulically applied input clutches are used to drive planetary components. The underdrive (2), overdrive (3), and reverse (4) clutches are considered input/driving clutches and are contained within the input clutch assembly (Fig. 151). The input clutch assembly also contains:

- Input shaft
- Input hub
- Clutch retainer
- Underdrive piston
- Overdrive/reverse piston
- Overdrive hub
- Underdrive hub

OPERATION

The three input clutches are responsible for driving different components of the planetary geartrain.

NOTE: (Refer to 21 - TRANSMISSION/AUTOMATIC - 42RLE - DIAGNOSIS AND TESTING) for a collective view of which clutch elements are applied at each position of the selector lever.