FLUID AND FILTER (Continued)

NOTE: If the transmission is disassembled for any reason, the fluid and filter should be changed.

(1) Raise vehicle on a hoist. Place a drain container with a large opening, under transmission oil pan.

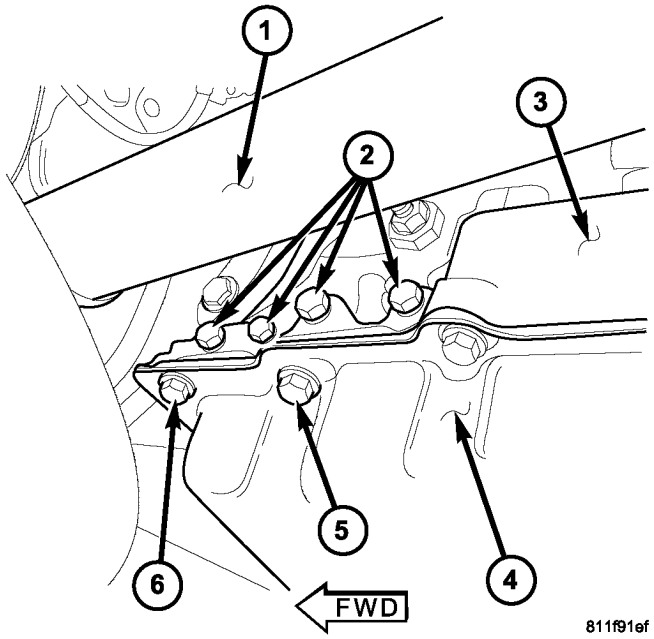

Fig. 153 Pan Fastener

1 - FRONT DRIVESHAFT
2 - PRESSURE PORTS
3 - TRANSMISSION CASE
4 - TRANSMISSION OIL PAN
5 - SECOND TRANSMISSION OIL PAN BOLT ON LEFT SIDE
6 - FIRST TRANSMISSION OIL PAN BOLT

NOTE: One of the oil pan bolts (5) has a sealing patch applied from the factory. Separate this bolt for reuse.

(2) Loosen pan bolts and tap the pan at one corner to break it loose allowing fluid to drain, then remove the oil pan.

(3) Install a new filter and o-ring on bottom of the valve body and tighten retaining screws to 5 N·m (40 in. lbs.).

NOTE: Before installing the oil pan bolt (5) in the bolt hole located between the torque converter clutch on and U/D clutch pressure tap circuits (Fig. 153), it will be necessary to replentish the sealing patch on the bolt using Mopar® Lock & Seal Adhesive.

(4) Clean the oil pan and magnet. Reinstall pan using new Mopar® Silicone Adhesive sealant. Tighten oil pan bolts to 19 N·m (165 in. lbs.).

(5) Pour four quarts of Mopar® ATF+4, Automatic Transmission Fluid, through the dipstick opening.

(6) Start engine and allow to idle for at least one minute. Then, with parking and service brakes applied, move selector lever momentarily to each position, ending in the park or neutral position.

(7) Check the transmission fluid level and add an appropriate amount to bring the transmission fluid level to 3mm (1/8 in.) below the lowest mark on the dipstick.

(8) Recheck the fluid level after the transmission has reached normal operating temperature (180°F.).

(9) To prevent dirt from entering transmission, make certain that dipstick is fully seated into the dipstick opening.

STANDARD PROCEDURE - TRANSMISSION FILL

To avoid overfilling transmission after a fluid change or overhaul, perform the following procedure:

(1) Remove dipstick and insert clean funnel in transmission fill tube.

(2) Add following initial quantity of Mopar® ATF +4, Automatic Transmission Fluid, to transmission:

(a) If only fluid and filter were changed, add **6 pints (3 quarts)** of ATF +4 to transmission.

(b) If transmission was completely overhauled, or torque converter was replaced or drained, add **10 pints (5 quarts)** of ATF +4 to transmission.

(3) Apply parking brakes.

(4) Start and run engine at normal curb idle speed.

(5) Apply service brakes, shift transmission through all gear ranges then back to NEUTRAL, set parking brake, and leave engine running at curb idle speed.

(6) Remove funnel, insert dipstick and check fluid level. If level is low, **add fluid to bring level to MIN mark on dipstick.** Check to see if the oil level is equal on both sides of the dipstick. If one side is noticably higher than the other, the dipstick has picked up some oil from the dipstick tube. Allow the oil to drain down the dipstick tube and re-check.

(7) Drive vehicle until transmission fluid is at normal operating temperature.

(8) With the engine running at curb idle speed, the gear selector in NEUTRAL, and the parking brake applied, check the transmission fluid level.

CAUTION: Do not overfill transmission, fluid foaming and shifting problems can result.

(9) Add fluid to bring level up to MAX arrow mark.

When fluid level is correct, shut engine off, release park brake, remove funnel, and install dipstick in fill tube.