INPUT CLUTCH ASSEMBLY (Continued)

NOTE: Tag overdrive clutch pack for reassembly identification.

(11) Remove the overdrive clutch (1, 3) from the overdrive hub/shaft (2) (Fig. 165).

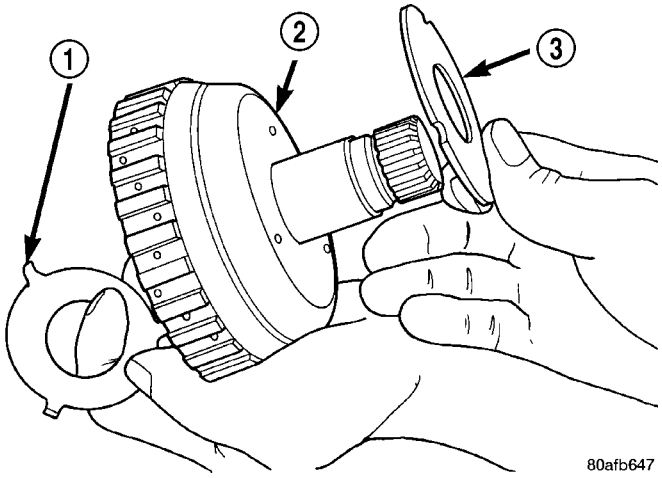

Fig. 166 #3 and #4 Thrust Washers

1 - #3 THRUST PLATE (3 TABS)
2 - OD SHAFT ASSEMBLY
3 - #4 THRUST PLATE (3 SLOTS)

(12) Remove and inspect number 3 and 4 thrust plates (1, 3) (Fig. 166).

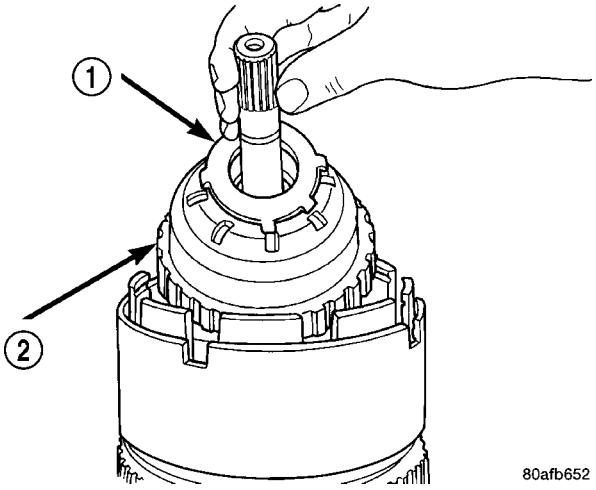

Fig. 167 Underdrive Shaft Assembly

1 - #3 THRUST WASHER (5 TABS)
2 - UNDERDRIVE SHAFT ASSEMBLY

(13) Remove the underdrive shaft assembly (2) (Fig. 167).

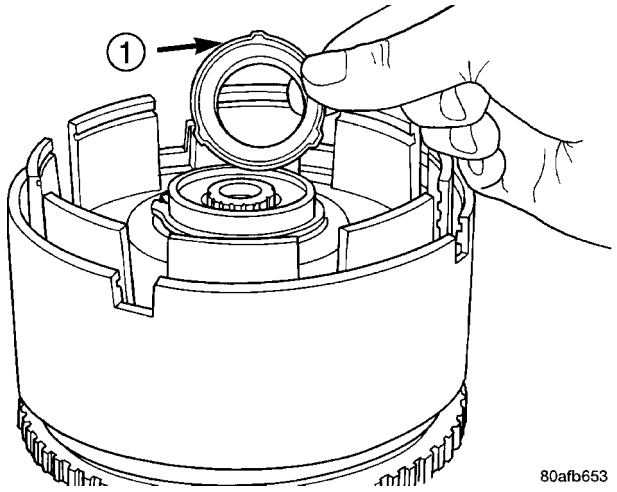

Fig. 168 No 2 Needle Bearing

1 - #2 NEEDLE BEARING (NOTE 3 TABS)

(14) Remove the number 2 needle bearing (1) (Fig. 168).

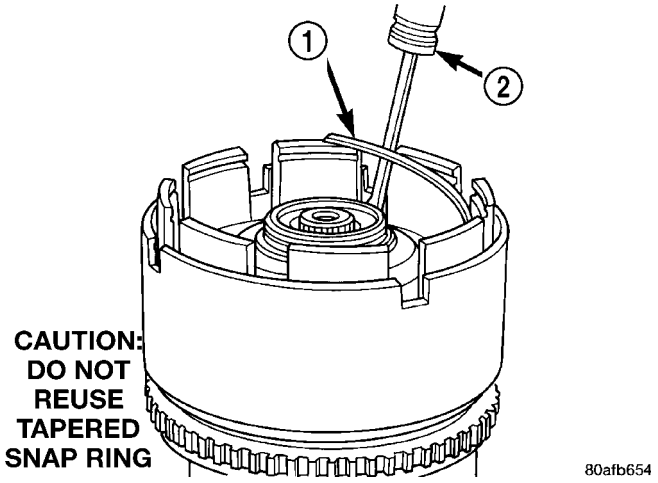

Fig. 169 Tapered Snap Ring

1 - OVERDRIVE/UNDERDRIVE CLUTCHES REACTION PLATE TAPERED SNAP RING
2 - SCREWDRIVER (DO NOT SCRATCH REACTION PLATE)

(15) Remove the OD/UD reaction plate tapered snap ring (1) (Fig. 169).