INPUT CLUTCH ASSEMBLY (Continued)

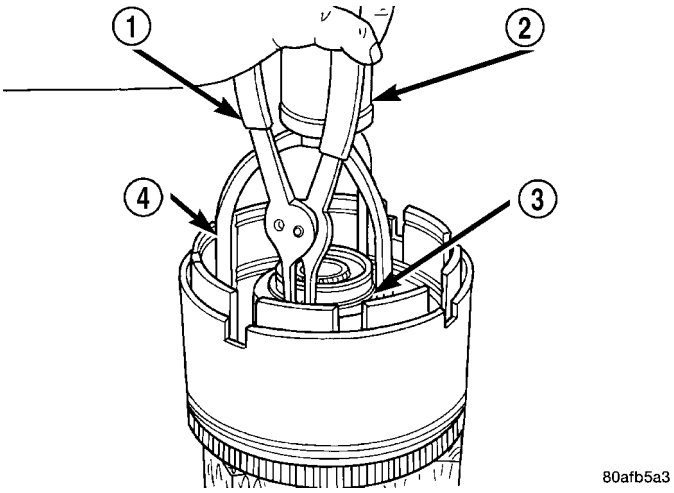

Fig. 174 UD Spring Retainer Snap Ring

1 - SNAP RING PLIERS
2 - ARBOR PRESS RAM
3 - SNAP RING
4 - SPECIAL TOOL 5059A

CAUTION: Compress return spring just enough to remove or install snap ring.

(20) Using Tool 5059A (4) and an arbor press (2), compress UD clutch piston enough to remove snap ring (3) (Fig. 174).

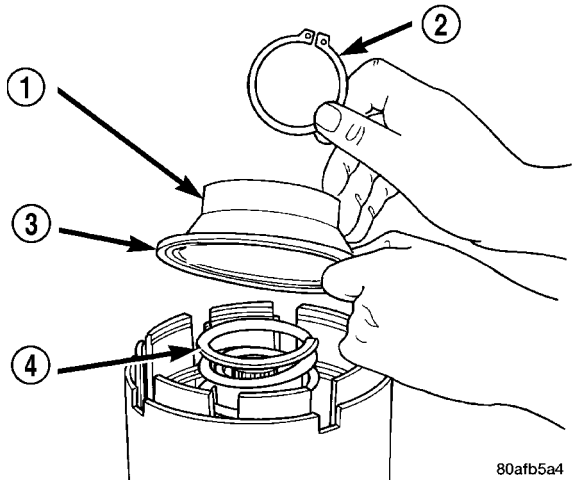

Fig. 175 UD Return Spring and Retainer

1 - UNDERDRIVE SPRING RETAINER
2 - SNAP RING
3 - SEAL
4 - PISTON RETURN SPRING

(21) Remove the underdrive spring retainer snap ring (2), spring retainer (1), and spring (4) (Fig. 175).

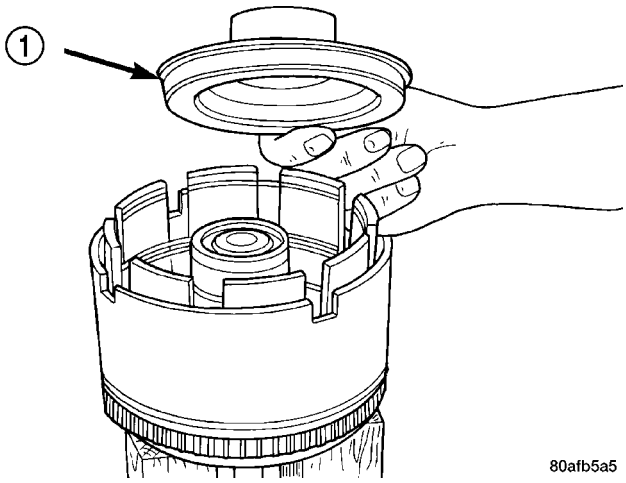

Fig. 176 Underdrive Clutch Piston

1 - PISTON

(22) Remove the UD clutch piston (1) (Fig. 176).

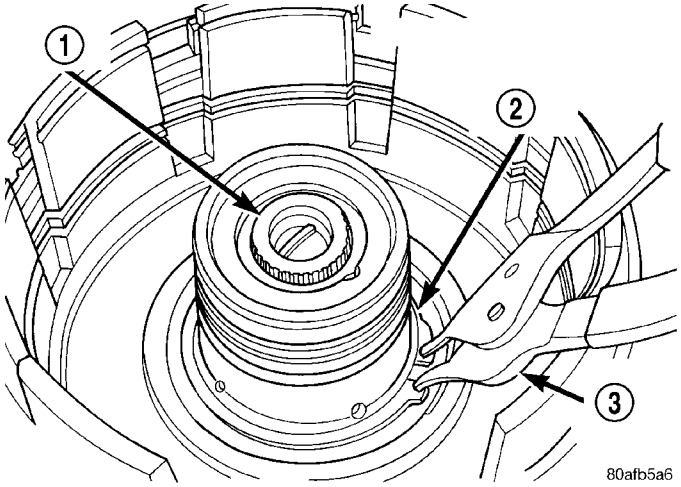

Fig. 177 Input Hub Tapered Snap Ring

1 - INPUT SHAFT
2 - INPUT HUB SNAP RING (TAPERED SIDE UP WITH TABS IN CAVITY)
3 - SNAP RING PLIERS

(23) Remove the input hub tapered snap ring (2) (Fig. 177).