INPUT CLUTCH ASSEMBLY (Continued)

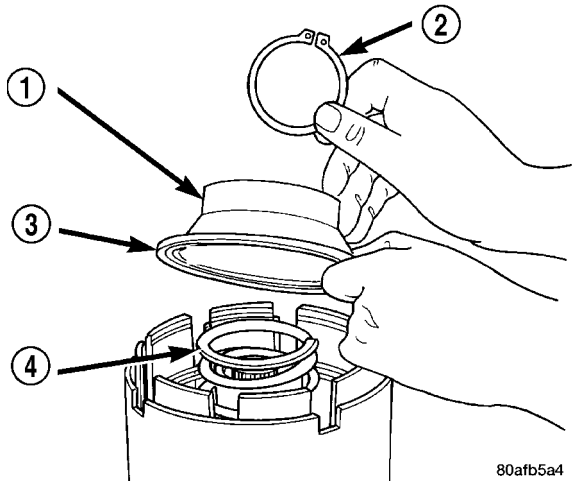

Fig. 194 UD Return Spring and Retainer

1 - UNDERDRIVE SPRING RETAINER
2 - SNAP RING
3 - SEAL
4 - PISTON RETURN SPRING

(10) Position the UD spring retainer (1) and snap ring (2) on the piston return spring (4) (Fig. 194).

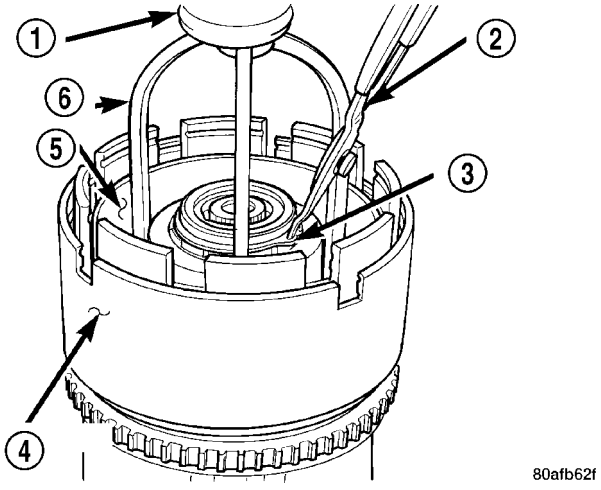

Fig. 195 Install UD Spring Retainer and Snap Ring

1 - ARBOR PRESS RAM
2 - SNAP RING PLIERS
3 - SNAP RING
4 - OD/REVERSE PISTON
5 - TOOL 5067
6 - TOOL 5059A

CAUTION: Compress return spring just enough to install snap ring.

(11) Using Tool 5059A (6) and an arbor press (1), install the UD spring retainer and snap ring (3) (Fig. 195).

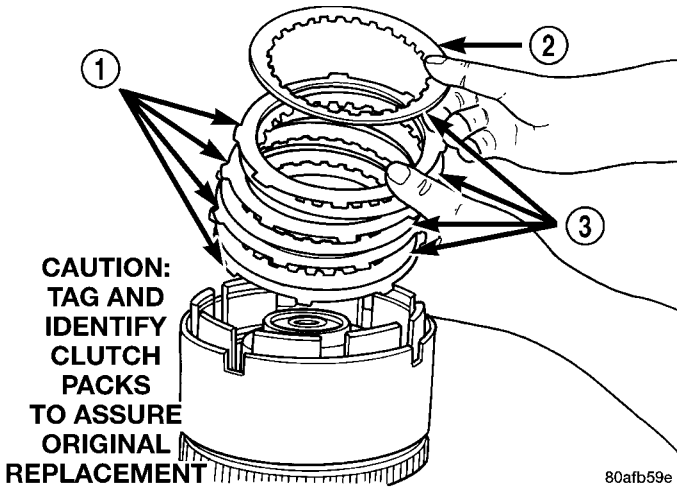

Fig. 196 Underdrive Clutch Pack

1 - CLUTCH PLATE
2 - ONE UD CLUTCH DISC
3 - CLUTCH DISC

(12) Install the UD clutch pack (four fibers/four steels) (1, 3) (Fig. 196). Leave the top disc (2) out until after the snap ring is installed.

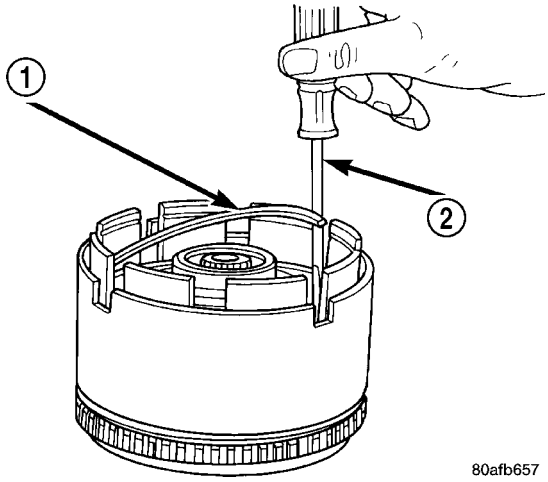

Fig. 197 UD Clutch Flat Snap Ring

1 - UNDERDRIVE CLUTCH REACTION PLATE FLAT SNAP RING
2 - SCREWDRIVER

(13) Install the UD clutch flat snap ring (1) (Fig. 197).