INPUT CLUTCH ASSEMBLY (Continued)

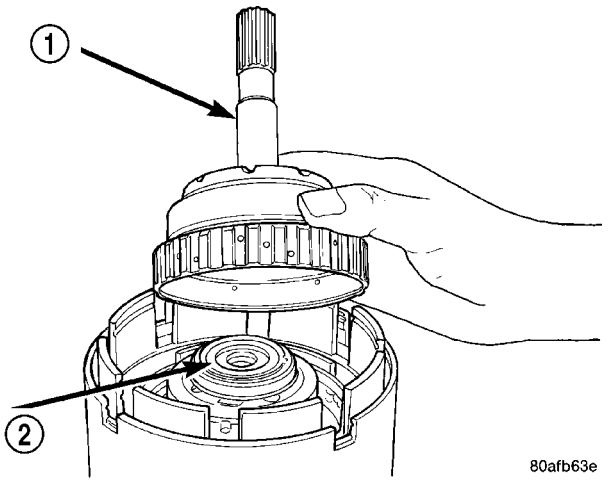

Fig. 217 Install Underdrive Shaft Assembly

1 - UNDERDRIVE SHAFT ASSEMBLY
2 - #2 NEEDLE BEARING

(41) Install the underdrive shaft assembly (1) (Fig. 217).

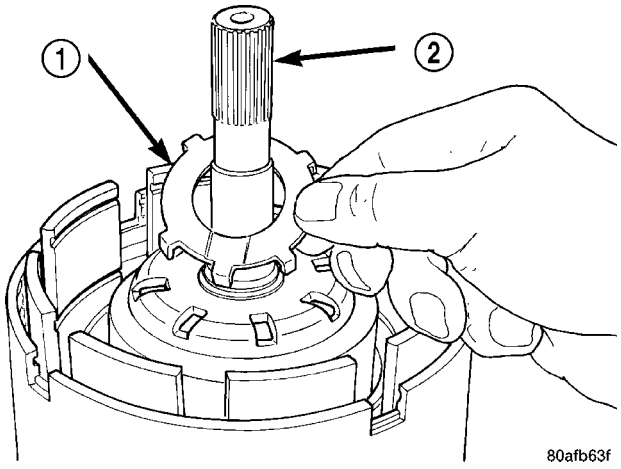

Fig. 218 Install No. 3 Thrust Washer

1 - #3 THRUST WASHER (NOTE 5 TABS)
2 - UNDERDRIVE SHAFT ASSEMBLY

(42) Install the number 3 thrust washer (1) (Fig. 218) to the underdrive shaft assembly (2). Be sure five tabs are seated properly.

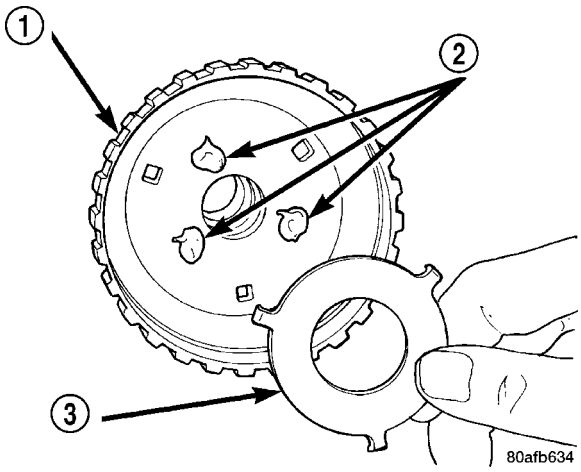

Fig. 219 Install No. 3 Thrust Plate

1 - OVERDRIVE SHAFT ASSEMBLY
2 - DABS OF PETROLATUM (FOR RETENTION)
3 - #3 THRUST PLATE (NOTE 3 TABS)

(43) Install the number 3 thrust plate (3) to the bottom of the overdrive shaft assembly (1). Retain with petrolatum or transmission assembly gel (2) (Fig. 219).

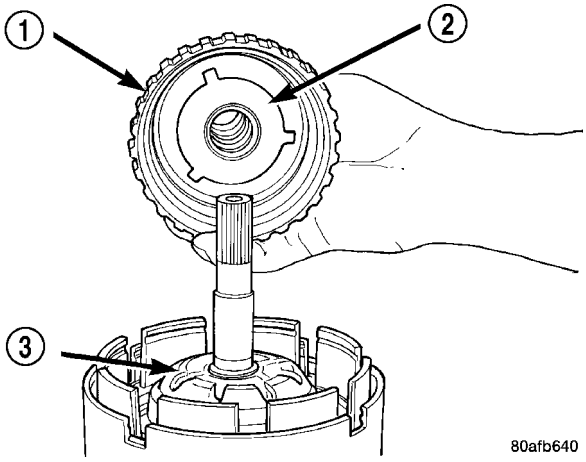

Fig. 220 Install Overdrive Shaft Assembly

1 - OVERDRIVE SHAFT ASSEMBLY
2 - #3 THRUST PLATE
3 - #3 THRUST WASHER

(44) Install the overdrive shaft assembly (1) (Fig. 220).