INPUT SPEED SENSOR (Continued)

INSTALLATION

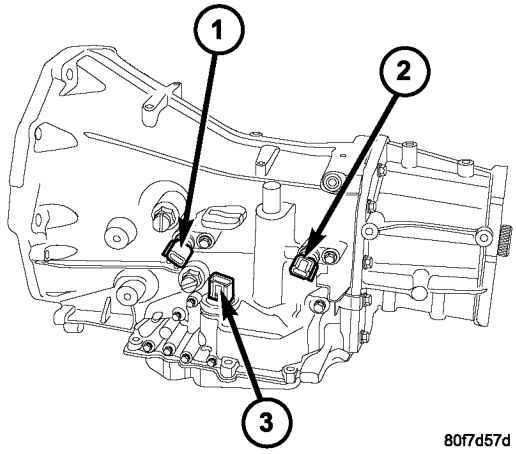

Fig. 224 Input Speed Sensor

1 - INPUT SPEED SENSOR
2 - OUTPUT SPEED SENSOR
3 - TRANSMISSION RANGE SENSOR

(1) Install the input speed sensor (1) (Fig. 224)into the transmission case.

NOTE: Before installing the speed sensor bolt, it will be necessary to replentish the sealing patch on the bolt using Mopar® Lock & Seal Adhesive.

(2) Install the bolt to hold the input speed sensor into the transmission case. Tighten the bolt to 9 N·m (80 in.lbs.).

(3) Install the wiring connector onto the input speed sensor

(4) Verify the transmission fluid level. Add fluid as necessary.

(5) Lower vehicle.

OIL PUMP

DESCRIPTION

The oil pump is located in the pump housing inside the bell housing of the transmission case. The oil pump assembly (Fig. 225) consists of an inner (3) and outer (2) gear, a housing (1), and a cover that also serves as the reaction shaft support (6).

OPERATION

As the torque converter rotates, the converter hub rotates the inner and outer gears. As the gears rotate, the clearance between the gear teeth increases in the crescent area, and creates a suction at the inlet side of the pump. This suction draws fluid through the pump inlet from the oil pan. As the clearance between the gear teeth in the crescent area decreases, it forces pressurized fluid into the pump outlet and to the valve body.

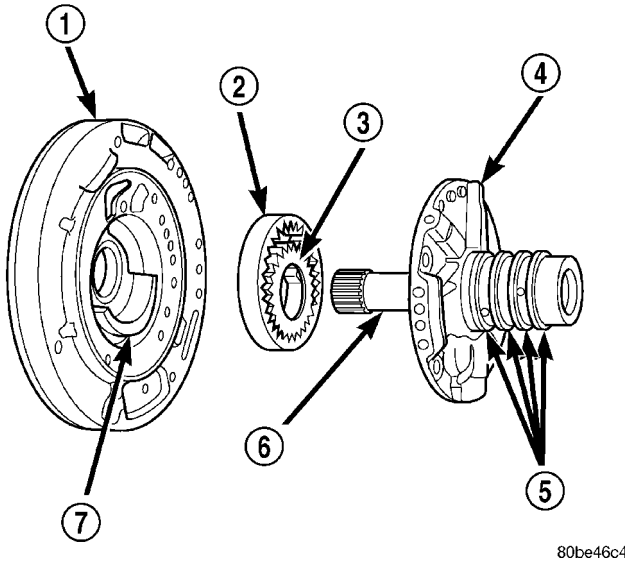

Fig. 225 Oil Pump Assembly

1 - PUMP HOUSING
2 - OUTER PUMP GEAR
3 - INNER PUMP GEAR
4 - REACTION SHAFT SUPPORT
5 - SEAL RINGS (4)
6 - REACTION SHAFT
7 - CRESCENT

DISASSEMBLY

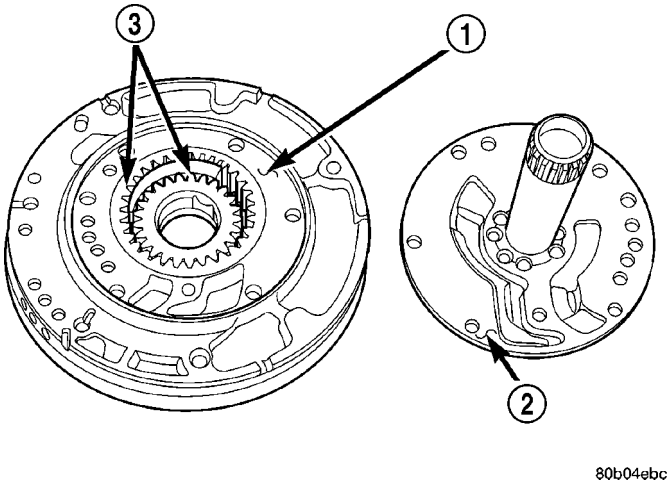

Fig. 226 Reaction Shaft Support

1 - PUMP HOUSING
2 - REACTION SHAFT SUPPORT
3 - PUMP GEARS

(1) Remove the reaction shaft support bolts.

(2) Remove the reaction shaft support(2) from the pump housing (1) (Fig. 226).