OUTPUT SPEED SENSOR (Continued)

NOTE: Before installing the speed sensor bolt, it will be necessary to replentish the sealing patch on the bolt using Mopar® Lock & Seal Adhesive.

(2) Install the bolt to hold the output speed sensor into the transmission case. Tighten the bolt to 9 N·m (80 in.lbs.).

(3) Install the wiring connector onto the output speed sensor

(4) Verify the transmission fluid level. Add fluid as necessary.

(5) Lower vehicle.

OVERDRIVE SWITCH

DESCRIPTION

The overdrive OFF (control) switch is located in the center console (Fig. 233). The switch is a momentary contact device that signals the PCM to toggle current status of the overdrive function.

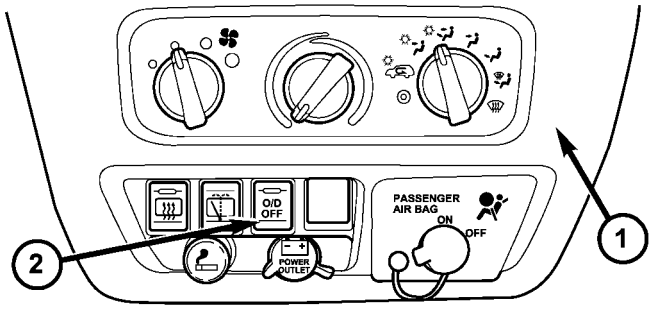

Fig. 233 Overdrive Off Switch

1 - ACCESSORY SWITCH BEZEL
2 - OVERDRIVE OFF SWITCH

OPERATION

At key-on, overdrive operation is allowed. Pressing the switch once causes the overdrive OFF mode to be entered and the overdrive OFF switch lamp to be illuminated. Pressing the switch a second time causes normal overdrive operation to be restored and the overdrive lamp to be turned off. The overdrive OFF mode defaults to ON after the ignition switch is cycled OFF and ON. The normal position for the control switch is the ON position. The switch must be in this position to energize the solenoid and allow a 3-4 upshift. The control switch indicator light illuminates only when the overdrive switch is turned to the OFF position, or when illuminated by the transmission control module.

REMOVAL

(1) Remove the accessory switch bezel (Fig. 234) (Refer to 23 - BODY/INSTRUMENT PANEL/ACCESSORY SWITCH BEZEL - REMOVAL).

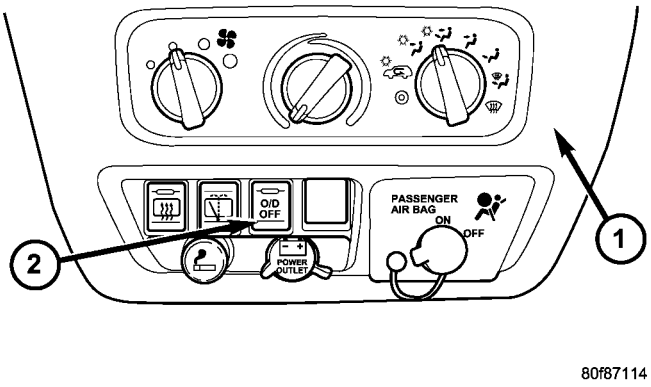

Fig. 234 Overdrive Off Switch

1 - ACCESSORY SWITCH BEZEL
2 - OVERDRIVE OFF SWITCH

(2) Remove the overdrive off switch from the accessory switch bezel.

INSTALLATION

(1) Install the overdrive off switch to the accessory switch bezel.

(2) Install the accesory switch bezel (Refer to 23 - BODY/INSTRUMENT PANEL/ACCESSORY SWITCH BEZEL - INSTALLATION).