SOLENOID/PRESSURE SWITCH ASSY (Continued)

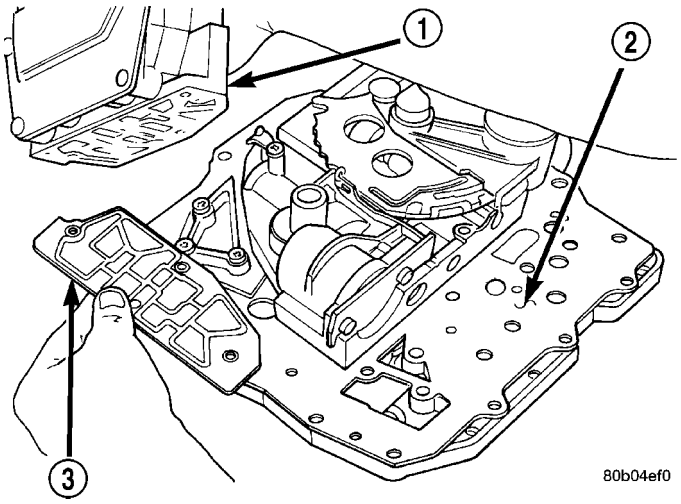

Fig. 240 Solenoid/Pressure Switch Assembly and Screen

1 - SOLENOID/PRESSURE SWITCH ASSEMBLY
2 - VALVE BODY
3 - SCREEN

(4) Remove Solenoid/Pressure Switch Assembly (1) and screen from valve body (2) (Fig. 240).

INSTALLATION

NOTE: If the Solenoid/Pressure Switch assembly is being replaced, the Quick Learn Procedure must be performed. (Refer to 8 - ELECTRICAL/ELECTRONIC CONTROL MODULES/TRANSMISSION CONTROL MODULE - STANDARD PROCEDURE)

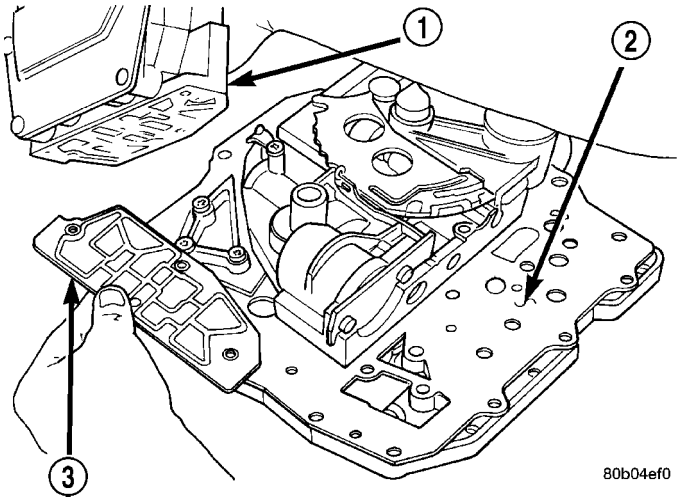

Fig. 241 Solenoid/Pressure Switch Assembly and Screen

1 - SOLENOID/PRESSURE SWITCH ASSEMBLY
2 - VALVE BODY
3 - SCREEN

(1) Install Solenoid/Pressure Switch Assembly (1) (Fig. 241) and screen (3) to the separator and transfer plates.

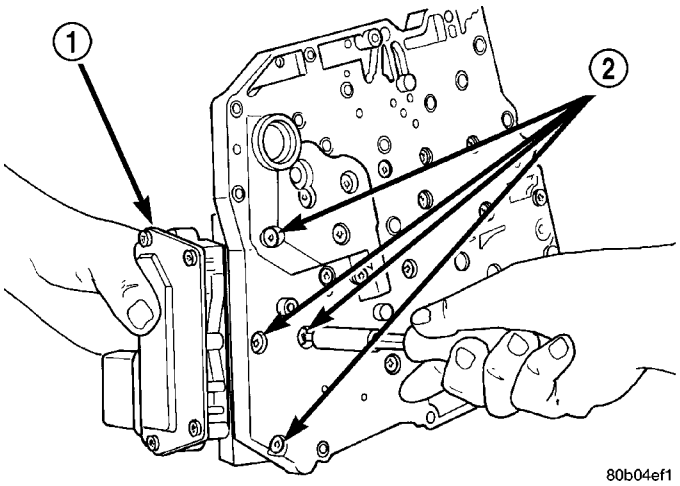

Fig. 242 Solenoid Retaining Screws

1 - SOLENOID/PRESSURE SWITCH ASSEMBLY
2 - RETAINING SCREWS

(2) Install and tighten retaining screws (2) (Fig. 242) to 5.5 N·m (50 in. lbs.) torque.

(3) Install valve body. (Refer to 21 - TRANSMISSION/AUTOMATIC - 42RLE/VALVE BODY - INSTALLATION)