TRANSMISSION RANGE SENSOR (Continued)

## REMOVAL

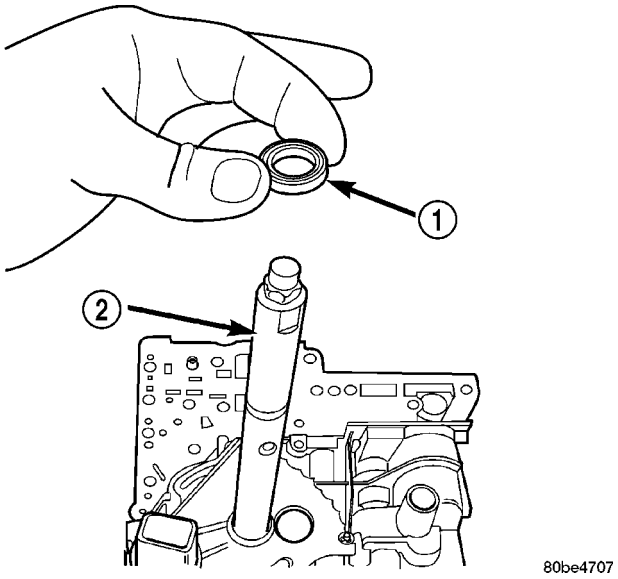


***Fig. 253 Manual Shaft Seal - Typical***

1 - SEAL
2 - MANUAL SHAFT

(1) Remove valve body assembly from vehicle. (Refer to 21 - TRANSMISSION/AUTOMATIC - 42RLE/VALVE BODY - REMOVAL)

(2) Remove the manual shaft seal (1) (Fig. 253).

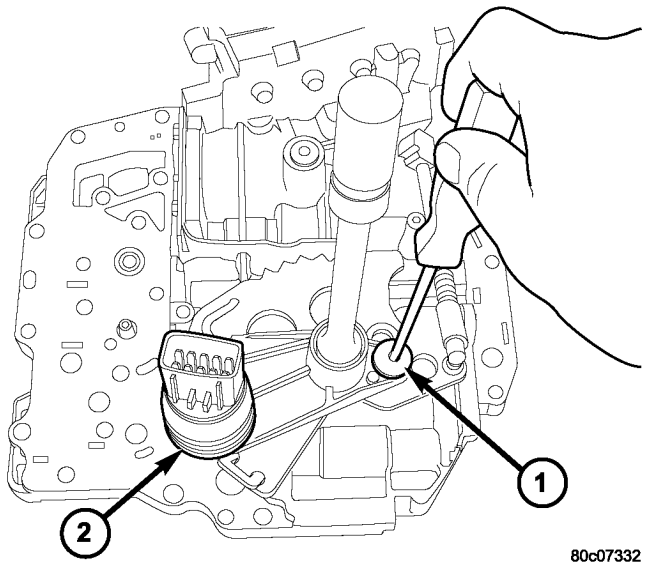


***Fig. 254 Manual Shaft Retaining Screw***

1 - SCREW
2 - TRS

(3) Remove manual shaft/TRS retaining screw (1) (Fig. 254).

(4) Slide TRS off of manual valve shaft.

## INSTALLATION

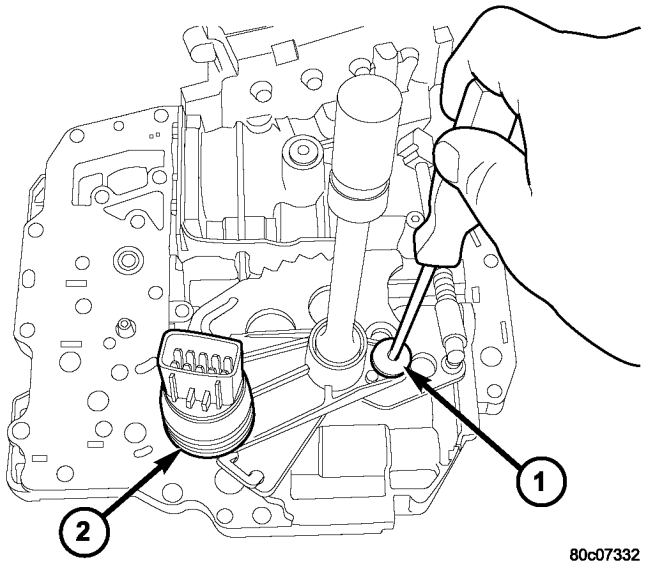


***Fig. 255 Manual Shaft Retaining Screw***

1 - SCREW
2 - TRS

(1) Install the TRS (2) to the manual shaft. Make sure TRS locating pin rests in manual valve bore slot.

(2) Install the TRS/manual shaft retaining screw (1) (Fig. 255) and torque to 5 N·m (45 in. lbs.) torque.

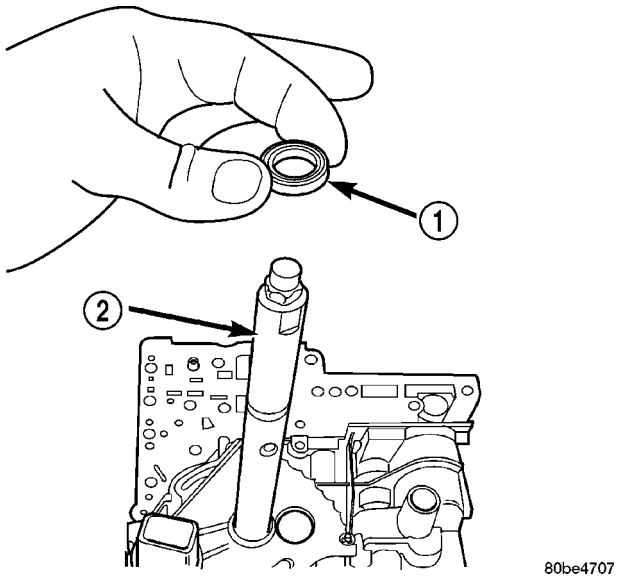


***Fig. 256 Manual Shaft Seal - Typical***

1 - SEAL
2 - MANUAL SHAFT

(3) Install the manual shaft seal (1) (Fig. 256).

(4) Install valve body to the transmission. (Refer to 21 - TRANSMISSION//AUTOMATIC - 42RLE/VALVE BODY - INSTALLATION)