VALVE BODY (Continued)

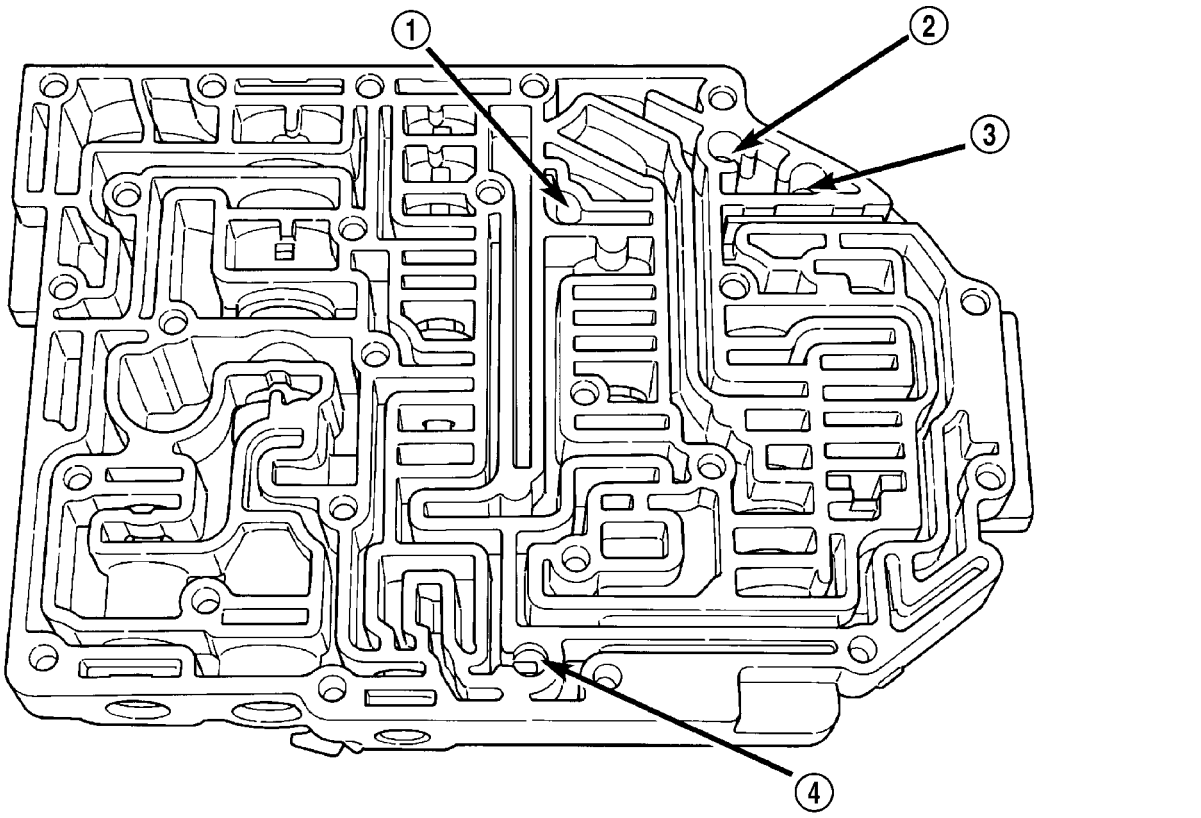

Fig. 281 Ball Check Location

1 - (#4) BALL CHECK LOCATION
2 - (#2) BALL CHECK LOCATION
3 - (#5) BALL CHECK LOCATION
4 - (#3) BALL CHECK LOCATION

(12) Remove valve body check balls (1-4). Note their location for assembly ease (Fig. 281).

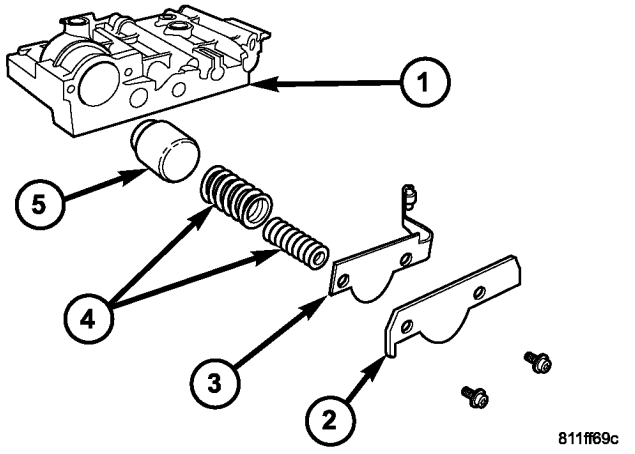

Fig. 282 2/4 Accumulator Assembly

1 - VALVE BODY
2 - RETAINER PLATE
3 - DETENT SPRING
4 - RETURN SPRINGS
5 - PISTON

(13) Remove 2/4 accumulator assembly (1-5) (Fig. 282).

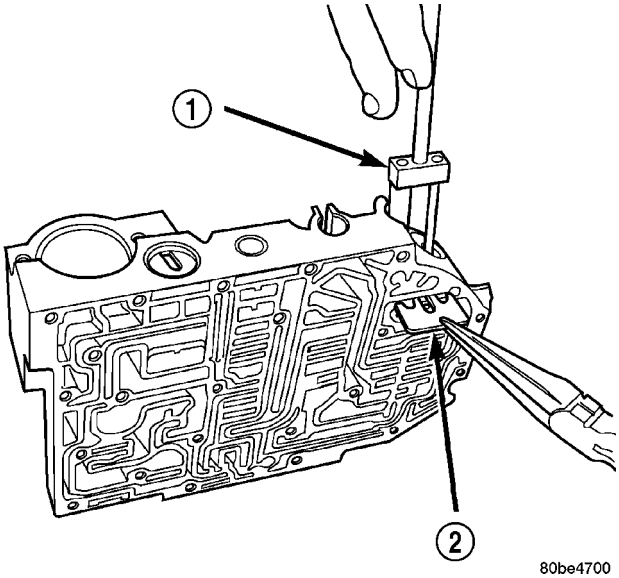

Fig. 283 Remove Dual Retainer Plate using Tool 6301

1 - TOOL 6301
2 - RETAINER

(14) Remove dual retainer plate (2) from valve body. Use special tool 6301 (1) to remove plate (2) (Fig. 283).