VALVE BODY (Continued)

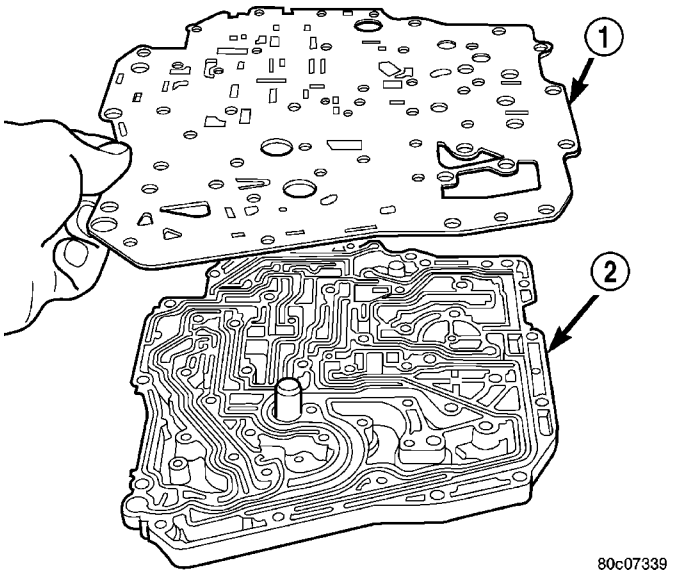

Fig. 295 Install Separator Plate to Transfer Plate

1 - SEPARATOR PLATE
2 - TRANSFER PLATE

(9) Install separator plate (1) to transfer plate (2) (Fig. 295).

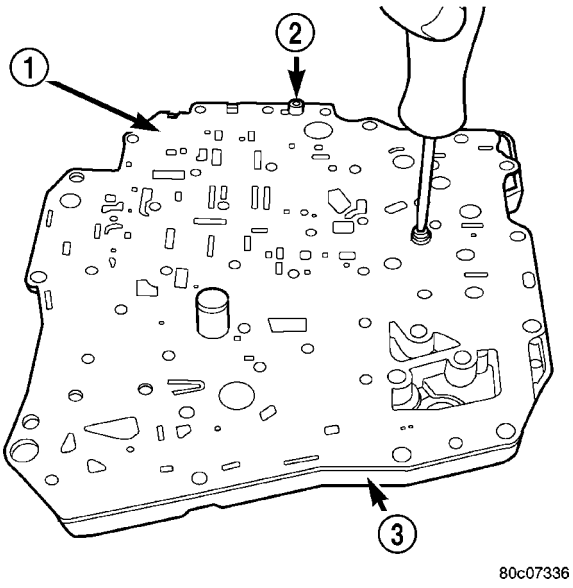

Fig. 296 Install Separator Plate-to-Transfer Plate Screws

1 - SEPARATOR PLATE
2 - SCREW (2)
3 - TRANSFER PLATE

(10) Install the two separator plate-to-transfer plate screws (2) (Fig. 296).

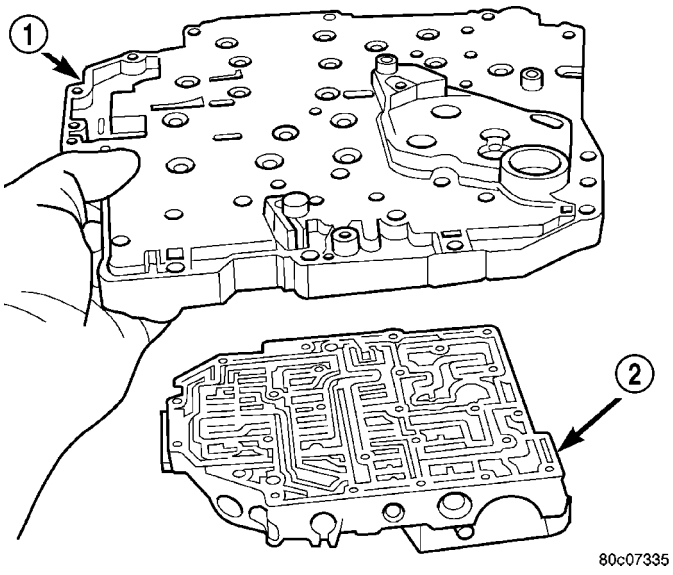

Fig. 297 Install Transfer Plate to Valve Body

1 - TRANSFER PLATE
2 - VALVE BODY

(11) Install the transfer plate (1) to the valve body (2) (Fig. 297).

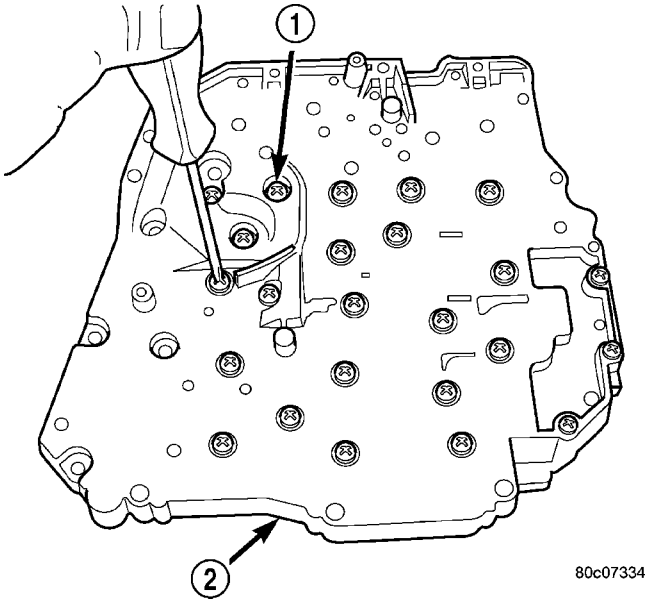

Fig. 298 Install Transfer Plate-to-Valve Body Screws

1 - SCREW (24)
2 - TRANSFER PLATE

(12) Install the transfer plate-to-valve body screws (1) (Fig. 298) and torque to 5 N·m (45 in. lbs.).