VALVE BODY (Continued)

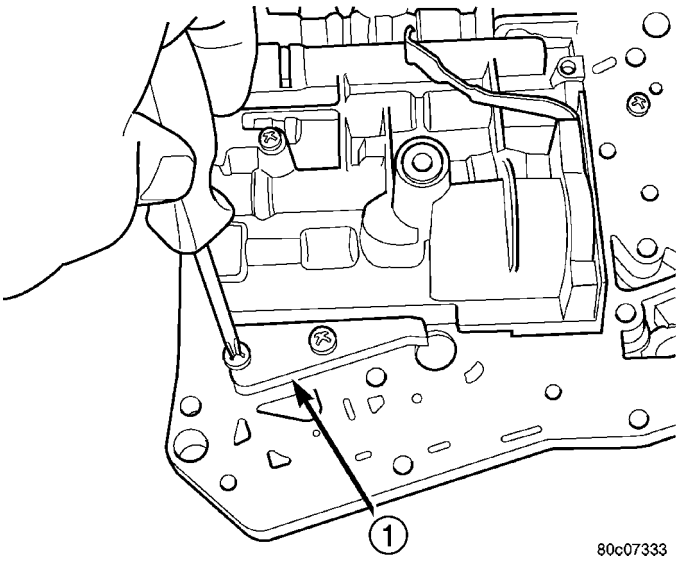

Fig. 299 Install Stiffener Plate

1 - STIFFENER PLATE

(13) Install the stiffener plate (1) (Fig. 299).

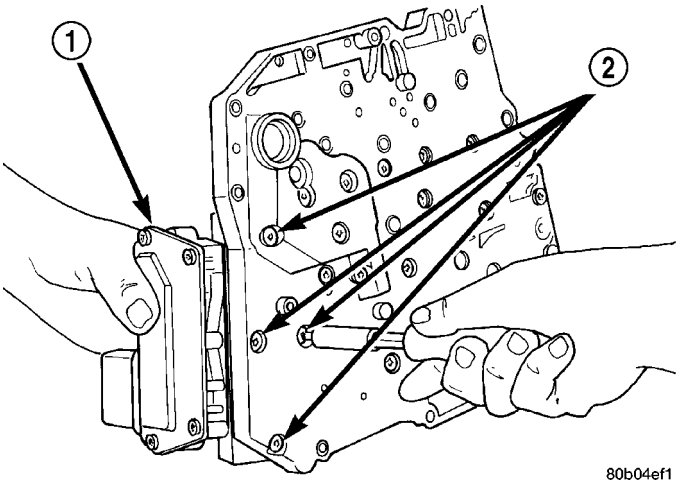

Fig. 300 Solenoid Retaining Screws

1 - SOLENOID/PRESSURE SWITCH ASSEMBLY
2 - RETAINING SCREWS

(14) Install the solenoid/pressure switch assembly (1) and screws to the transfer plate (Fig. 300) and torque to 5.5 N·m (50 in. lbs.).

(15) Install the manual shaft/rooster comb (3) and transmission range sensor (1) to the valve body (Fig. 301).

(16) Install the TRS/manual shaft retaining screw (1) (Fig. 302) and torque to 5 N·m (45 in. lbs.).

(17) Install manual shaft seal.

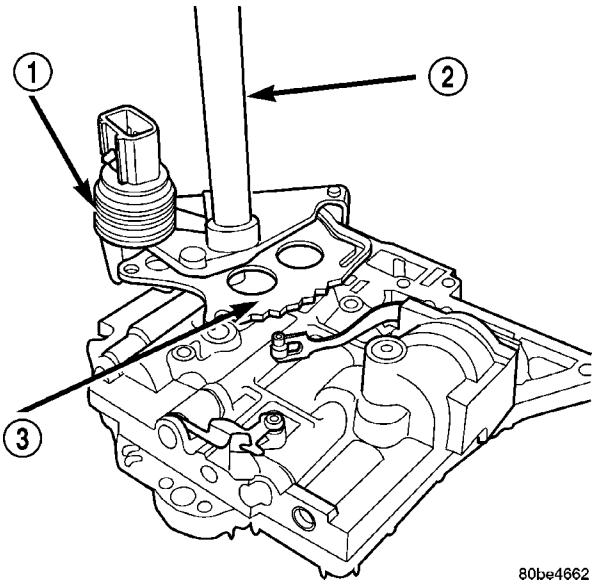

Fig. 301 Manual Shaft/Rooster Comb and Transmission Range Sensor

1 - TRANSMISSION RANGE SENSOR
2 - MANUAL SHAFT
3 - ROOSTER COMB

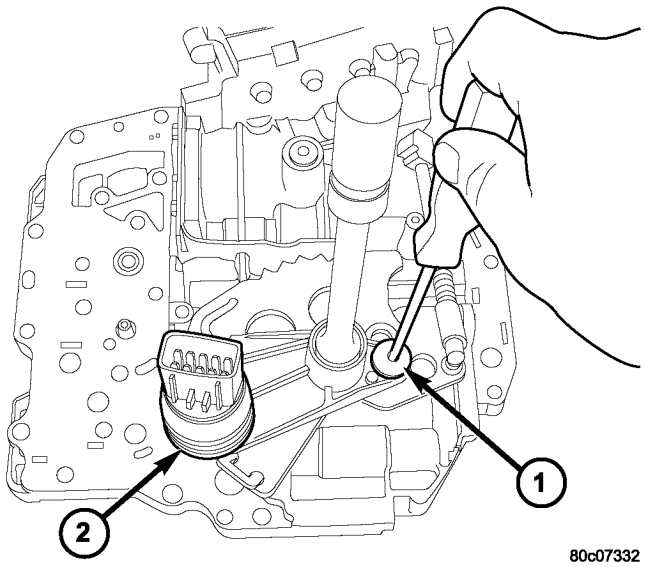

Fig. 302 Manual Shaft Retaining Screw

1 - SCREW
2 - TRS