TRANSFER CASE - NV231 (Continued)

Condition	Possible Cause	Correction
Transfer case noisy while in, or jumps out of, 4L mode.	1) Transfer case not completely engaged in 4L position.	1) Slow vehicle, shift transfer case to the Neutral position, and then shift into the 4L mode.
	2) Transfer case shift linkage out of adjustment.	2) Adjust linkage as necessary.
	3) Transfer case shift linkage loose or binding.	3) Repair, replace, or tighten linkage components as necessary.
	4) Range fork damaged, inserts worn, or fork is binding on the shift rail.	4) Repair or replace components as necessary.
	5) Low range gear worn or damaged.	5) Repair or replace components as necessary.
Lubricant leaking from transfer case seals or vent.	1) Transfer case overfilled.	1) Drain lubricant to the correct level.
	2) Transfer case vent closed or restricted.	2) Clean or replace vent as necessary.
	3) Transfer case seals damaged or installed incorrectly.	3) Replace suspect seal.
Abnormal tire wear.	1) Extended operation in 4H mode on dry surfaces,	1) Operate vehicle in 2H mode on dry surfaces.

REMOVAL

(1) Shift transfer case into NEUTRAL.
(2) Raise vehicle.
(3) Drain transfer case lubricant.
(4) Mark front and rear propeller shaft yokes for alignment reference.
(5) Support transmission with jack stand.
(6) Remove rear crossmember, or skid plate.
(7) Disconnect front/rear propeller shafts at transfer case.
(8) Disconnect vehicle speed sensor wires.
(9) Disconnect transfer case linkage rod from range lever.
(10) Disconnect transfer case vent hose (Fig. 2) and indicator switch harness, if necessary.
(11) Support transfer case with transmission jack.
(12) Secure transfer case to jack with chains.
(13) Remove nuts attaching transfer case to transmission.
(14) Pull transfer case and jack rearward to disengage transfer case.
(15) Remove transfer case from under vehicle.

DISASSEMBLY

Position transfer case on shallow drain pan. Remove drain plug and drain lubricant remaining in case.

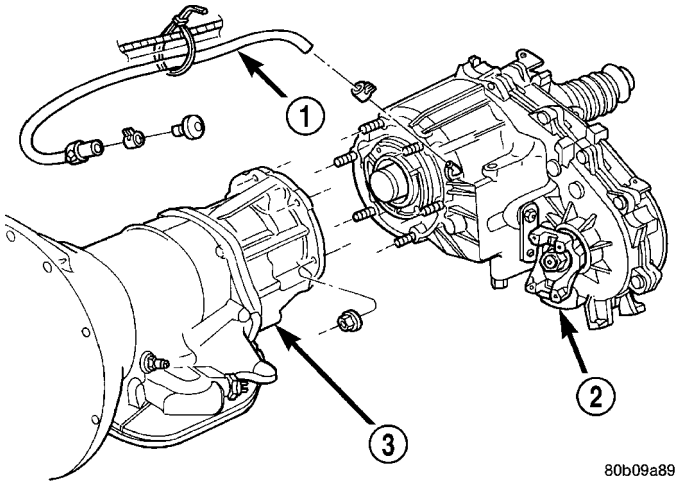

Fig. 2 Transfer Case Mounting

1 - VENT TUBE
2 - TRANSFER CASE
3 - TRANSMISSION

REAR RETAINER AND OIL PUMP

(1) Remove the speedometer adapter.
(2) Spread band clamp which holds output shaft boot to the output shaft slinger, or output shaft damper, with a suitable awl, or equivalent.