TRANSFER CASE - NV231 (Continued)

NOTE: Vehicles built with a 4.0L engine and a manual transmission use a damper weight on the transfer case output shaft. Be sure to identify the transfer case before proceeding.

(3) Remove output shaft boot from slinger, or output shaft damper, and output shaft.

(4) If the vehicle is not equipped with an output shaft damper, remove the output shaft rear slinger using Puller MD-998056-A (Fig. 3).

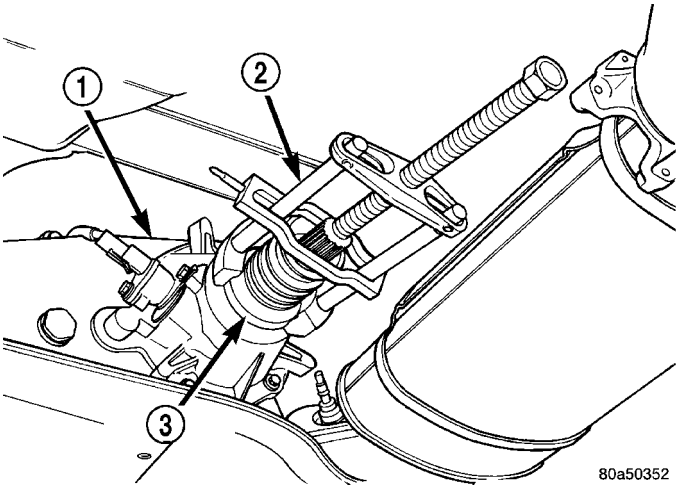

Fig. 3 Rear Slinger Removal

1 - TRANSFER CASE
2 - SPECIAL TOOL MD-998056-A
3 - SLINGER

(5) If the vehicle is equipped with an output shaft damper, use Screws 8421 and the puller yoke and forcing screw from a bolt-grip puller set, such as those used to remove steering wheels and harmonic balancers, to remove the transfer case output shaft damper.

(6) Use a suitable pry tool, or a slide hammer mounted screw, to remove the seal from the rear retainer (Fig. 4).

(7) Remove the rear output bearing I.D. retaining ring (Fig. 5).

(8) Remove the bolts holding the rear retainer to the rear case half.

(9) Tap rear retainer with rawhide or rubber mallet to loosen sealer bead.

(10) Remove rear retainer from rear case half (Fig. 6).

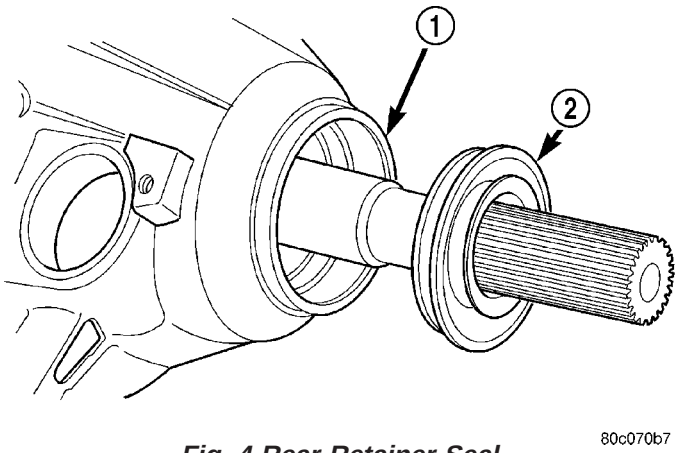

Fig. 4 Rear Retainer Seal

1 - REAR RETAINER
2 - OUTPUT SHAFT SEAL

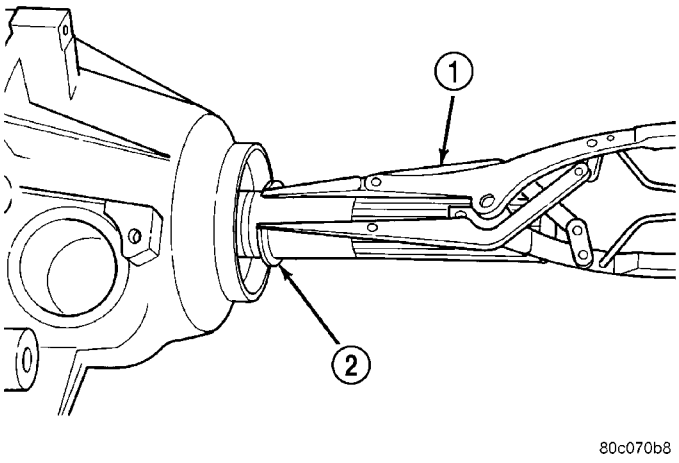

Fig. 5 Output Shaft Rear Bearing Retaining Ring

1 - SNAP-RING PLIERS
2 - REAR BEARING I.D. RETAINING RING

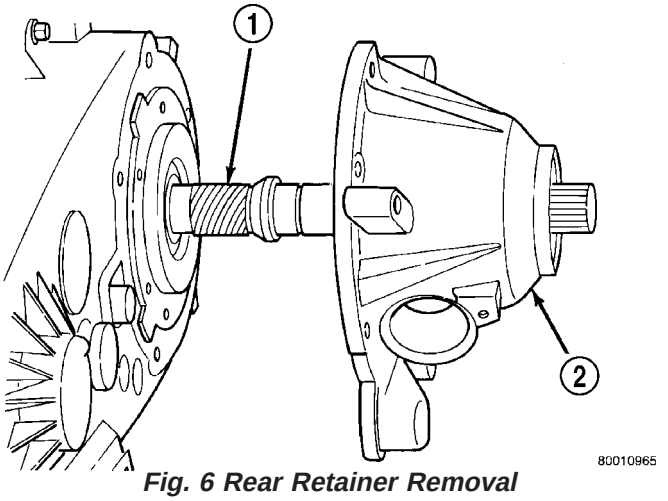

Fig. 6 Rear Retainer Removal

1 - MAINSHAFT
2 - REAR RETAINER