TRANSFER CASE - NV231 (Continued)

(11) Remove snap-ring holding oil pump in position on output shaft.

(12) Disengage oil pickup tube from oil pump and remove oil pump assembly. Remove oil pump by tilting the edge of the oil pump from under the edge of the rear case half and sliding the pump (Fig. 7).

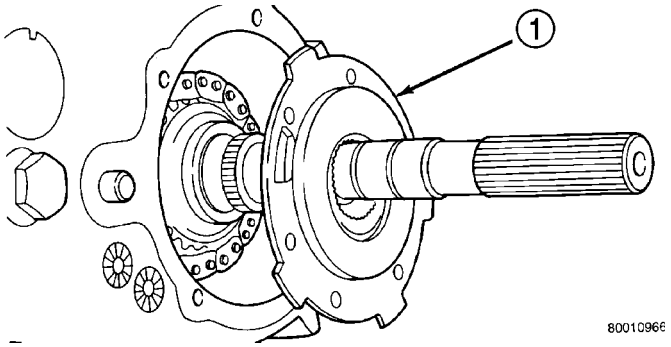

Fig. 7 Oil Pump Removal

1 - OIL PUMP

(13) Remove pick-up tube o-ring from oil pump (Fig. 8), if necessary. Do not disassemble the oil pump, it is not serviceable.

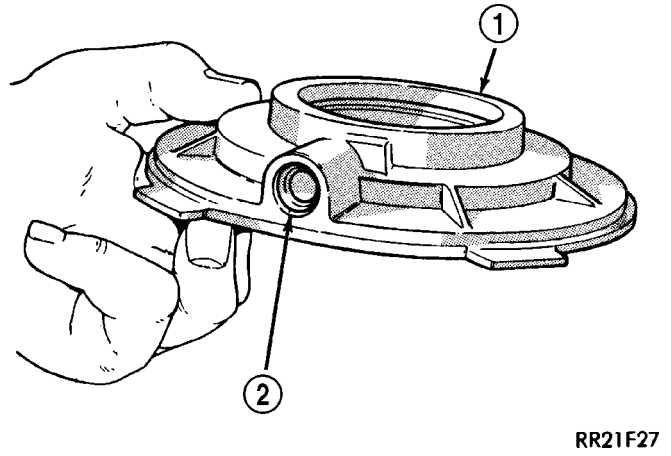

Fig. 8 Pick-up Tube O-ring Location

1 - OIL PUMP
2 - O-RING

YOKE AND RANGE LEVER

(1) Remove transfer case indicator switch.

(2) Remove front yoke nut as follows:

(a) Move range lever to 4L position.

(b) Then remove nut with socket and impact wrench (Fig. 9).

(3) Remove yoke. If yoke is difficult to remove by hand, remove it with bearing splitter, or with standard two jaw puller (Fig. 10). Be sure puller tool is positioned on yoke and not on slinger as slinger will be damaged.

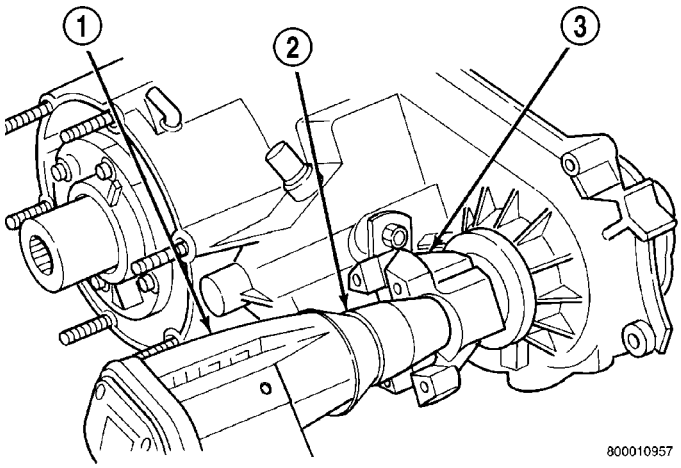

Fig. 9 Yoke Nut Removal

1 - IMPACT WRENCH
2 - SOCKET
3 - YOKE

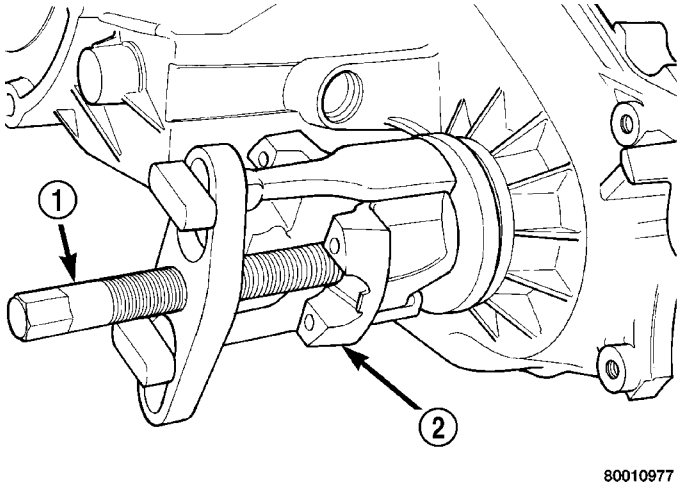

Fig. 10 Yoke Removal

1 - PULLER TOOL
2 - YOKE

(4) Remove seal washer from front output shaft. Discard washer as it should not be reused.