TRANSFER CASE - NV231 (Continued)

(6) Remove mode fork spring (Fig. 15).

(7) Pull front output shaft upward and out of front output shaft bearing (Fig. 16).

(8) Remove front output shaft and chain.

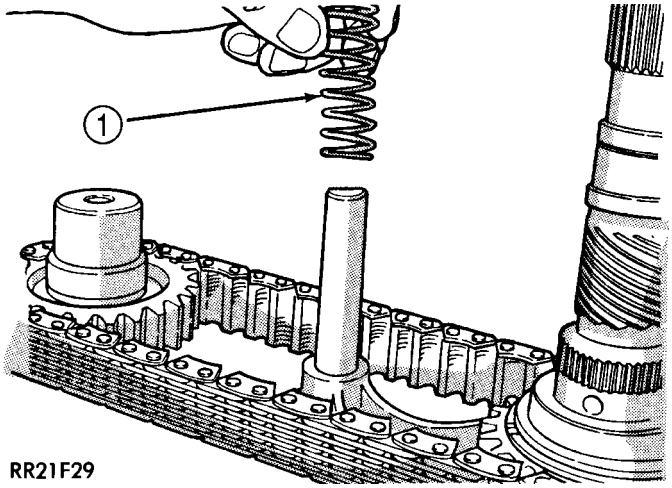


Fig. 15 Mode Fork Spring Removal

1 - MODE SPRING

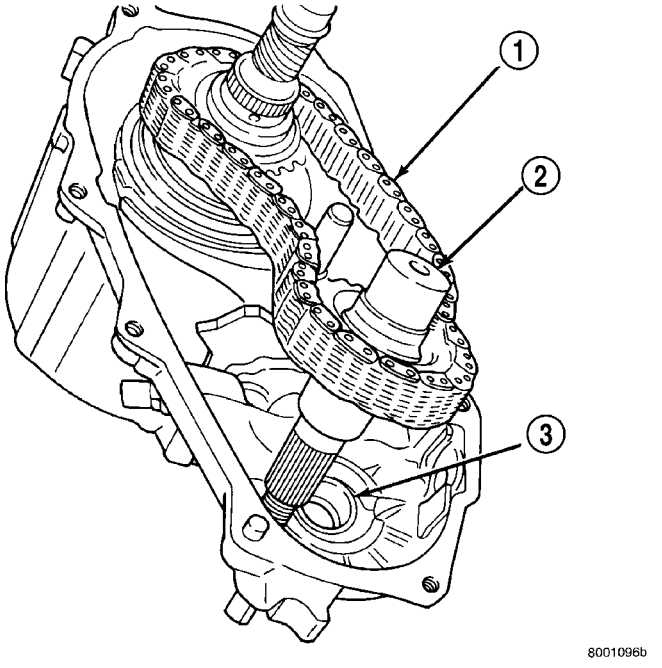


Fig. 16 Remove Front Output Shaft And Chain

1 - DRIVE CHAIN
2 - FRONT OUTPUT SHAFT
3 - SHAFT FRONT BEARING

SHIFT FORKS AND MAINSHAFT

(1) Remove detent plug, O-ring, detent spring and detent plunger (Fig. 17).

(2) Remove mainshaft from mode sleeve and input gear pilot bearing.

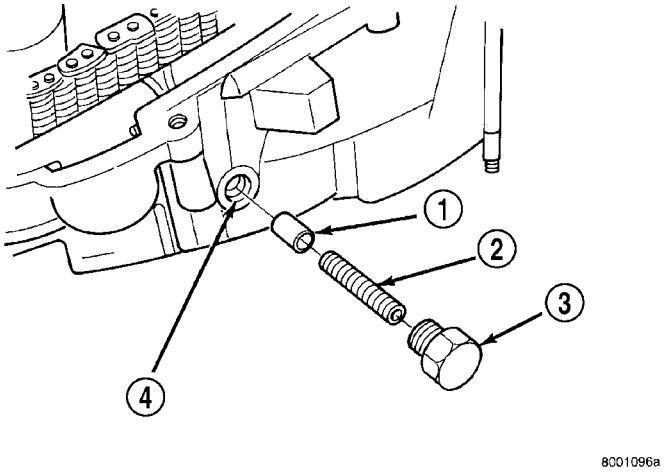


Fig. 17 Detent Plug, Spring And Plunger Removal

1 - POPPET
2 - SPRING
3 - SCREW
4 - POPPET BORE (IN CASE)

(3) Remove mode fork and sleeve as an assembly (Fig. 18). Note position of sleeve for assembly reference. The short side of the sleeve faces upward.

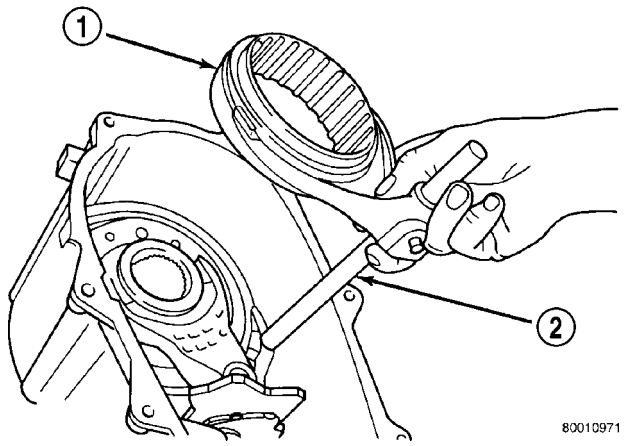


Fig. 18 Mode Fork And Sleeve Removal

1 - MODE SLEEVE
2 - MODE FORK AND RAIL