TRANSFER CASE - NV231 (Continued)

(4) Remove range fork and hub as an assembly (Fig. 19). Note fork position for installation reference.

(5) Remove shift sector from front case (Fig. 20).

(6) Remove shift sector bushing and O-ring (Fig. 21).

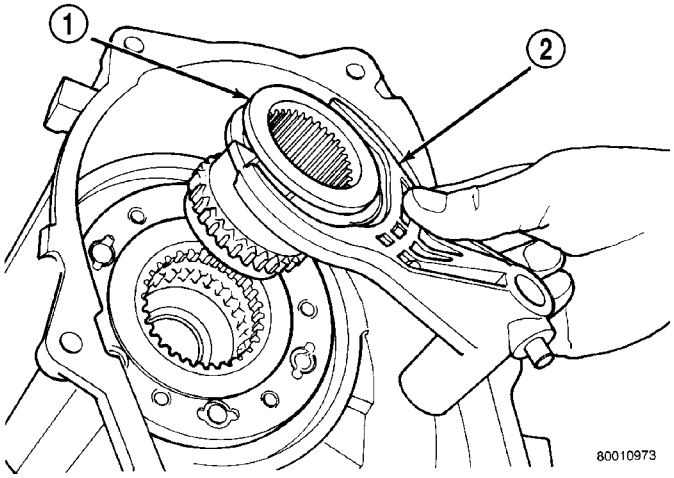

Fig. 19 Range Fork And Sleeve Removal

1 - RANGE HUB
2 - RANGE FORK

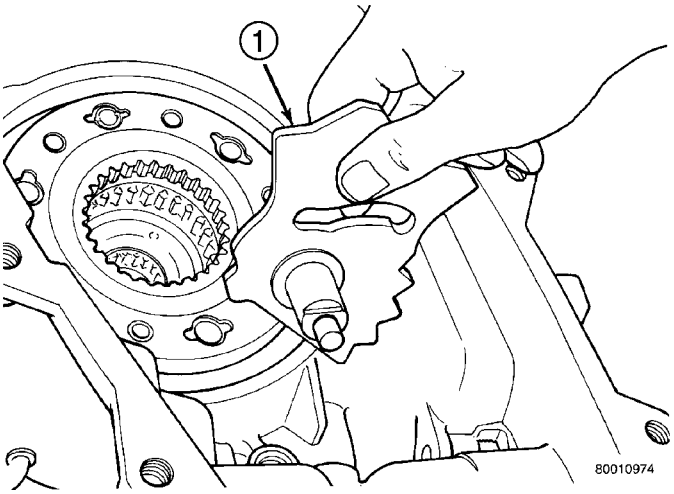

Fig. 20 Shift Sector Removal

1 - SHIFT SECTOR

MAINSHAFT

(1) Remove mode hub retaining ring with heavy duty snap-ring pliers (Fig. 22).

(2) Slide mode hub off mainshaft (Fig. 23).

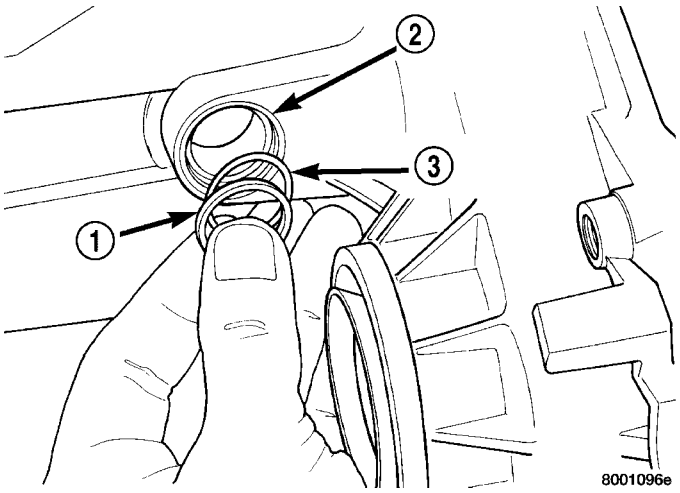

Fig. 21 Sector Bushing And O-Ring Removal

1 - SEAL RETAINER
2 - SECTOR SHAFT BORE
3 - O-RING SEAL

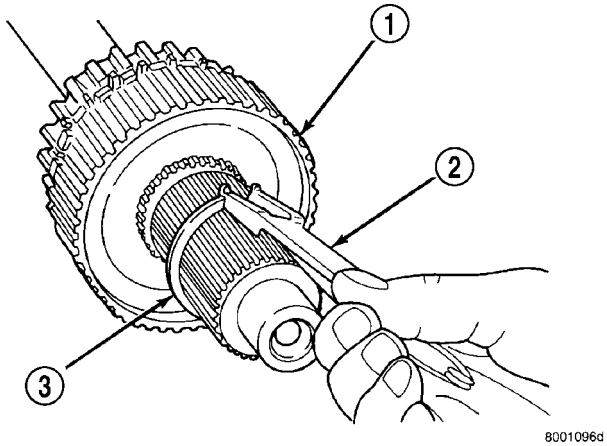

Fig. 22 Mode Hub Retaining Ring Removal

1 - MODE HUB
2 - SNAP-RING PLIERS (HEAVY DUTY)
3 - MODE HUB RETAINING RING

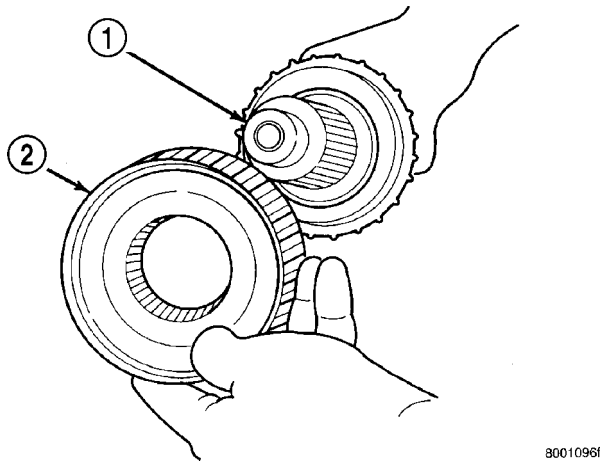

Fig. 23 Mode Hub Removal

1 - MAINSHAFT
2 - MODE HUB