TRANSFER CASE - NV231 (Continued)

(3) Slide drive sprocket off mainshaft (Fig. 24).

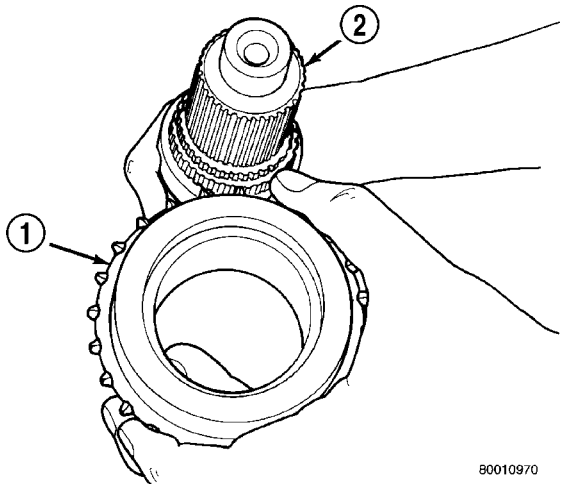


Fig. 24 Drive Sprocket Removal

1 - DRIVE SPROCKET
2 - MAINSHAFT

INPUT GEAR AND LOW RANGE GEAR

(1) Remove front bearing retainer attaching bolts (Fig. 25).

(2) Remove front bearing retainer. Pry retainer loose with pry tool positioned in slots at each end of retainer (Fig. 26).

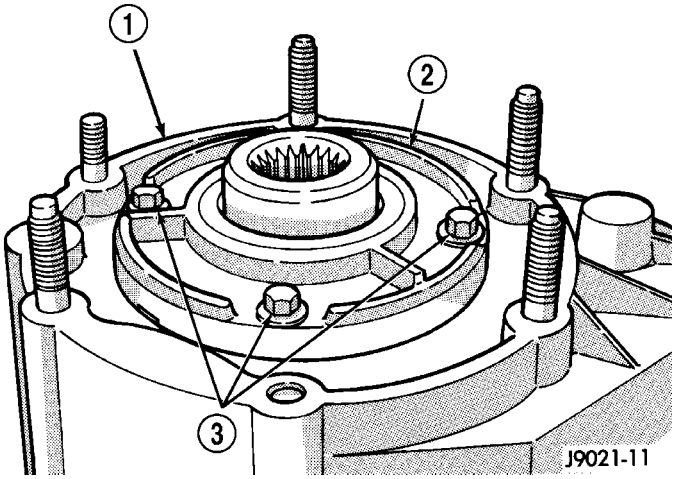


Fig. 25 Front Bearing Retainer Bolts

1 - FRONT CASE
2 - FRONT BEARING RETAINER
3 - RETAINER BOLTS

(3) Remove front bearing retainer seal. Tap seal out with drift and hammer.

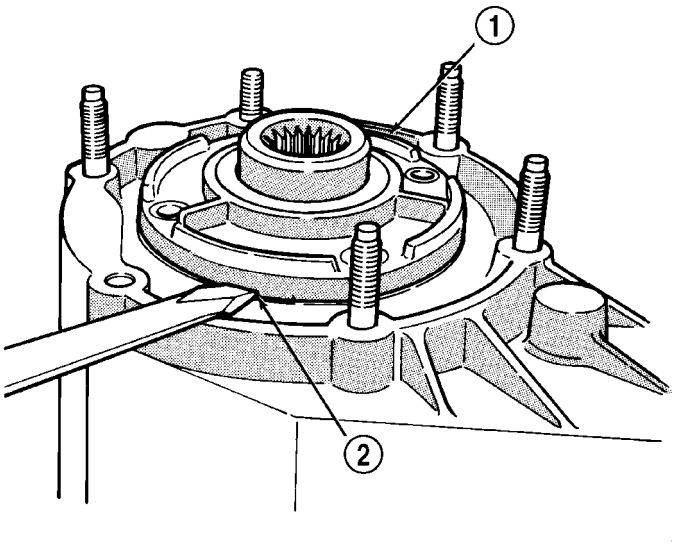


Fig. 26 Front Bearing Retainer Removal

1 - FRONT BEARING RETAINER
2 - RETAINER SLOT

(4) Remove input gear retaining ring with heavy duty snap-ring pliers (Fig. 27)

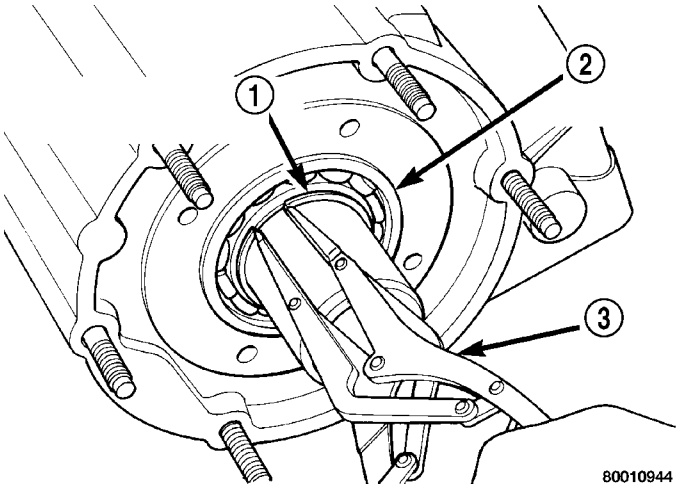


Fig. 27 Removing Input Gear Retaining Ring

1 - INPUT GEAR BEARING RETAINING RING
2 - INPUT GEAR BEARING
3 - SNAP-RING PLIERS