TRANSFER CASE - NV231 (Continued)

(5) Place front case in horizontal position. Then remove input gear and low range gear as an assembly (Fig. 28). Tap gear out of bearing with plastic mallet if necessary.

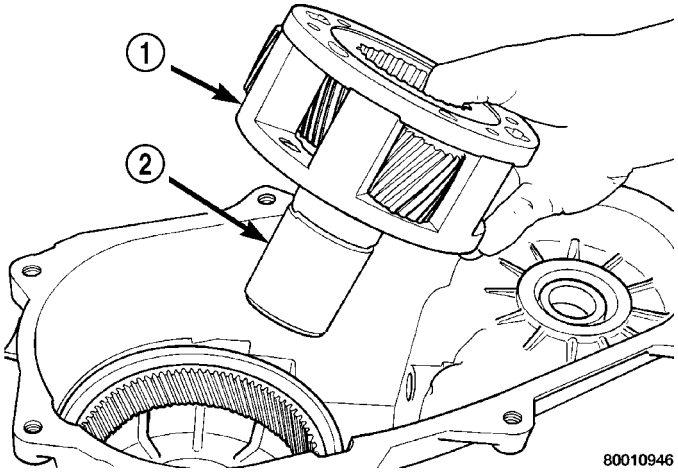


Fig. 28 Input Gear And Planetary Carrier Removal

1 - PLANETARY ASSEMBLY
2 - INPUT GEAR

INPUT AND LOW RANGE GEAR

(1) Remove snap-ring that retains input gear in low range gear (Fig. 29).
(2) Remove retainer (Fig. 30).
(3) Remove front tabbed thrust washer (Fig. 31).
(4) Remove input gear (Fig. 32).

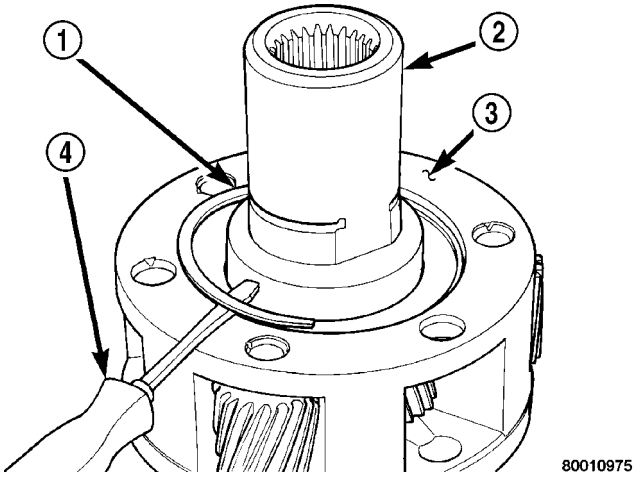


Fig. 29 Input Gear Snap-Ring Removal

1 - CARRIER LOCK RETAINING RING
2 - INPUT GEAR
3 - PLANETARY CARRIER
4 - SCREWDRIVER

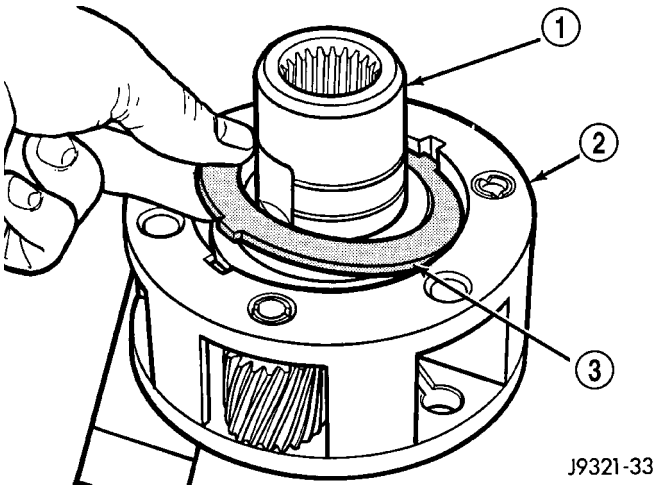


Fig. 30 Input Gear Retainer Removal

1 - INPUT GEAR
2 - LOW RANGE GEAR
3 - RETAINER

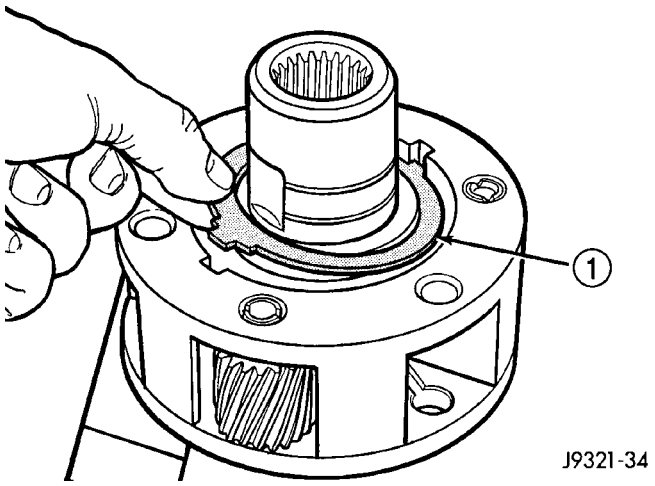


Fig. 31 Front Tabbed Thrust Washer Removal

1 - FRONT TABBED THRUST WASHER

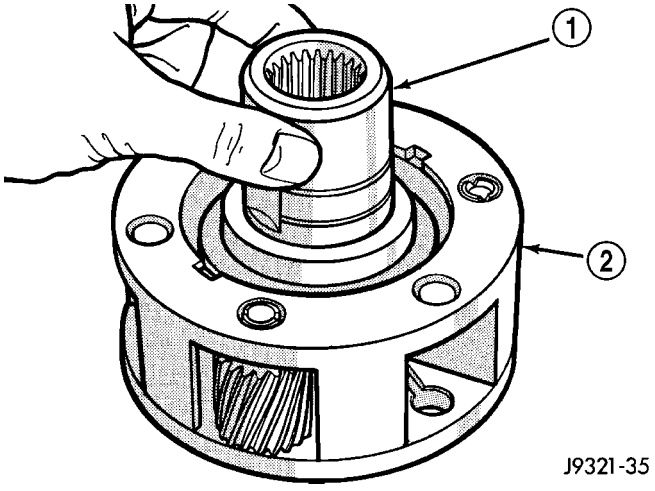


Fig. 32 Input Gear Removal

1 - INPUT GEAR
2 - LOW RANGE GEAR