TRANSFER CASE - NV231 (Continued)

REAR RETAINER/BEARING/ SEAL/SLINGER/BOOT

Inspect the retainer components (Fig. 38). Replace the bearing if rough or noisy. Check the retainer for cracks or wear in the bearing bore. Clean the retainer sealing surfaces with a scraper and 3M™ all purpose cleaner. This will ensure proper adhesion of the sealer during reassembly.

An output shaft slinger is used on some vehicles, while an output shaft damper is used on other vehicles. The output shaft slinger and seal should be replaced outright; do not reuse either part.

Replace any part if distorted, bent, or broken. Also replace the boot if cut or torn. Replace the boot band clamps, do not reuse them.

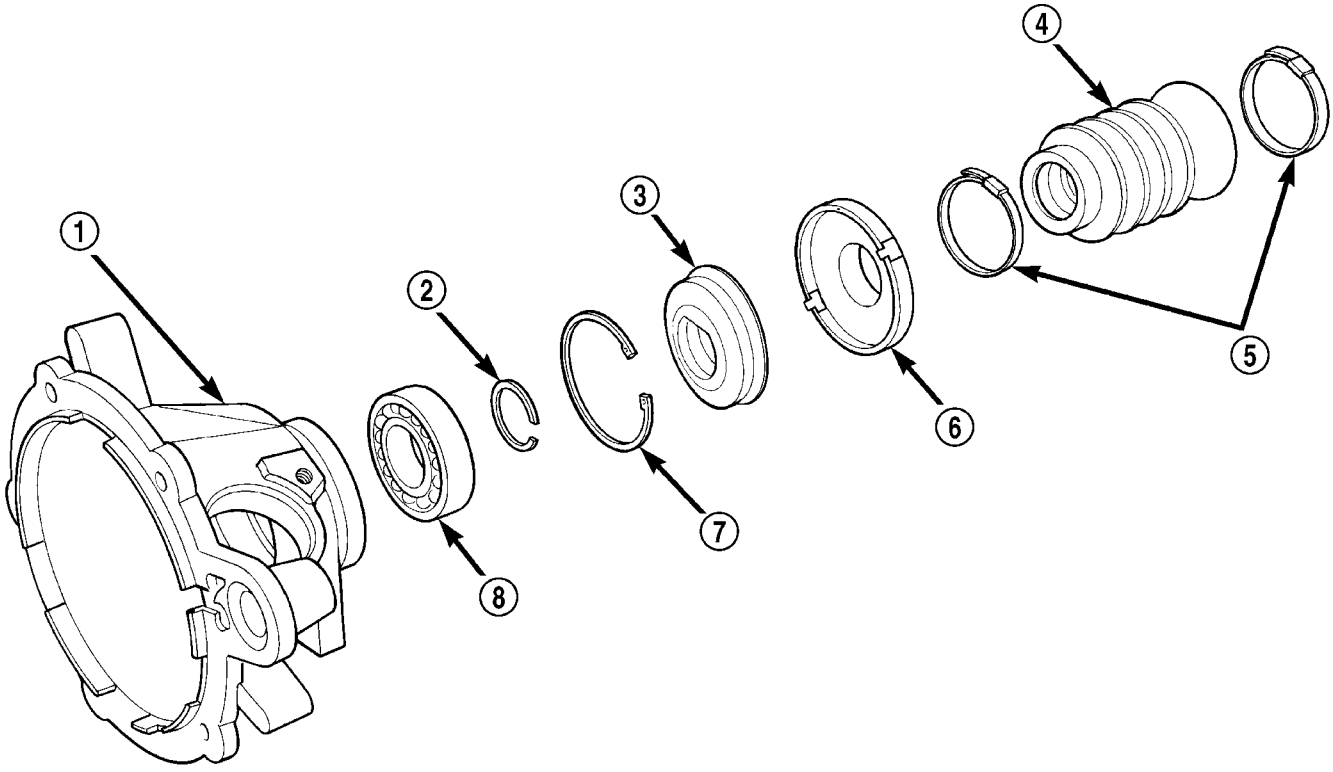

80c070f4

Fig. 38 Rear Retainer Without Output Shaft Damper

1 - REAR RETAINER
2 - REAR BEARING I.D. MAINSHAFT RETAINING RING
3 - REAR SEAL
4 - BOOT
5 - BAND CLAMPS
6 - REAR SLINGER
7 - REAR BEARING O.D. RETAINING RING
8 - REAR BEARING