TRANSFER CASE - NV231 (Continued)

ASSEMBLY

Lubricate transfer case components with Mopar® ATF +4, Automatic Transmission Fluid, or petroleum jelly (where indicated) during assembly.

BEARINGS AND SEALS

CAUTION: The bearing bores in various transfer case components contain oil feed holes. Make sure replacement bearings do not block the holes.

(1) Remove the front output shaft seal from case with pry tool (Fig. 41).

(2) Remove the front output shaft bearing retaining ring with screwdriver (Fig. 42).

(3) Remove bearing with Tool Handle C-4171 and Tool 5065 (Fig. 43).

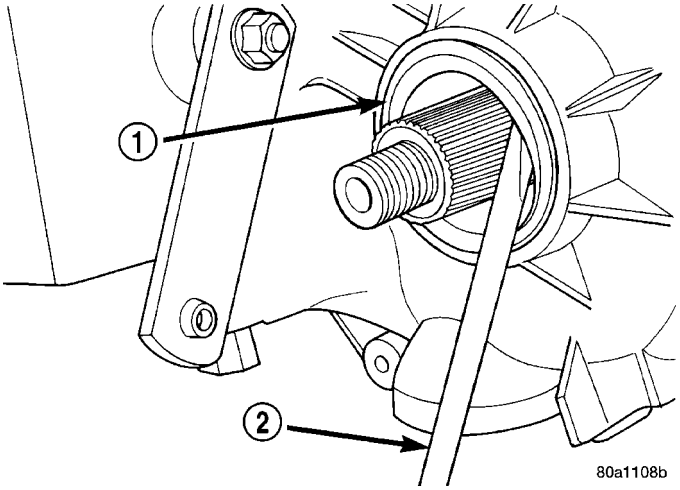

Fig. 41 Front Output Seal Removal - Typical

1 - OUTPUT SHAFT SEAL
2 - PRYBAR

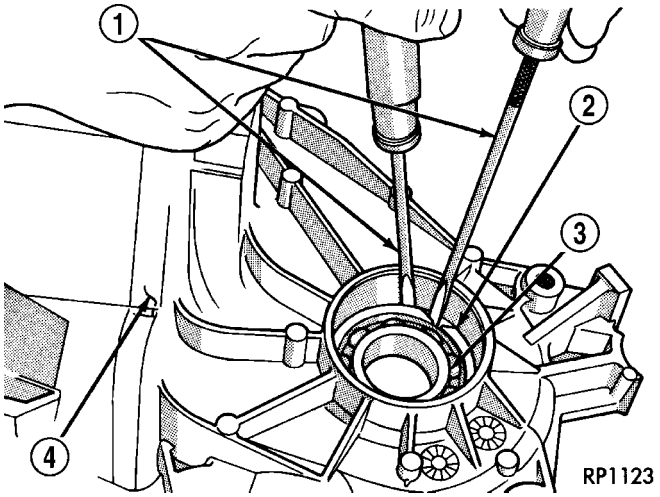

Fig. 42 Front Output Shaft Bearing Retaining Ring Removal

1 - SCREWDRIVERS
2 - SNAP-RING
3 - FRONT OUTPUT SHAFT BEARING
4 - FRONT CASE

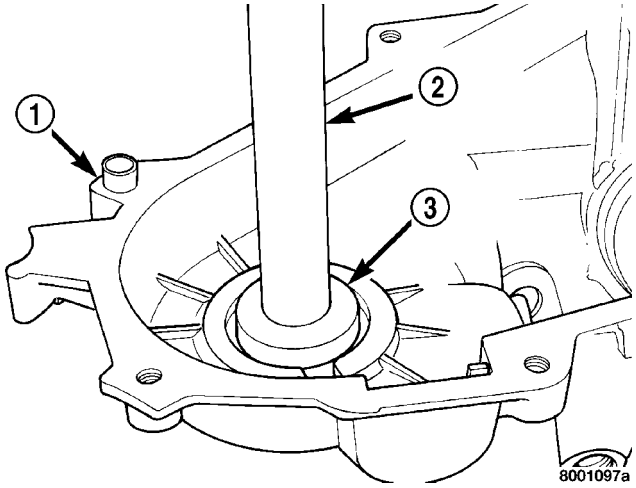

Fig. 43 Front Output Shaft Bearing Removal

1 - FRONT CASE
2 - SPECIAL TOOL C-4171
3 - SPECIAL TOOL 5065