TRANSFER CASE - NV231 (Continued)

(8) Install new bearing with Tool Handle C-4171 and Installer 5066 (Fig. 48). The bearing bore is chamfered at the top. Install the bearing so it is flush with the lower edge of this chamfer (Fig. 49).

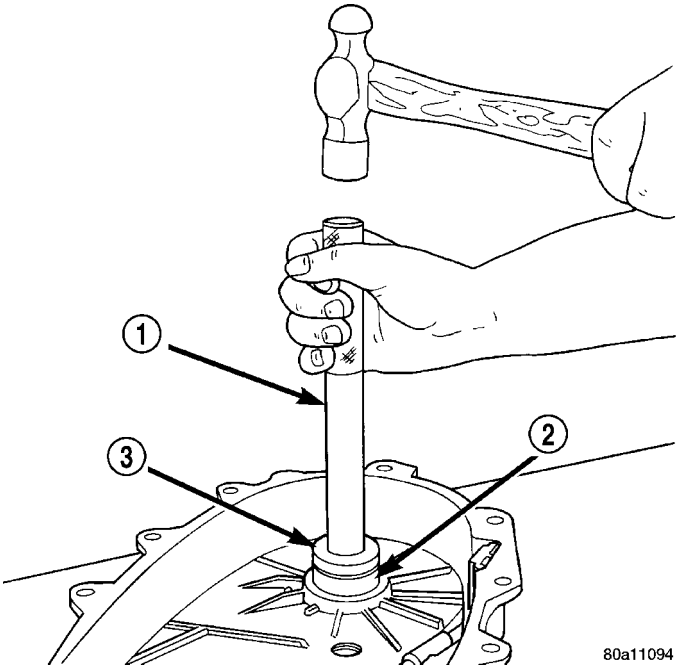


Fig. 48 Output Shaft Rear Bearing Installation

1 - HANDLE C-4171
2 - OUTPUT SHAFT INNER BEARING
3 - INSTALLER 5066

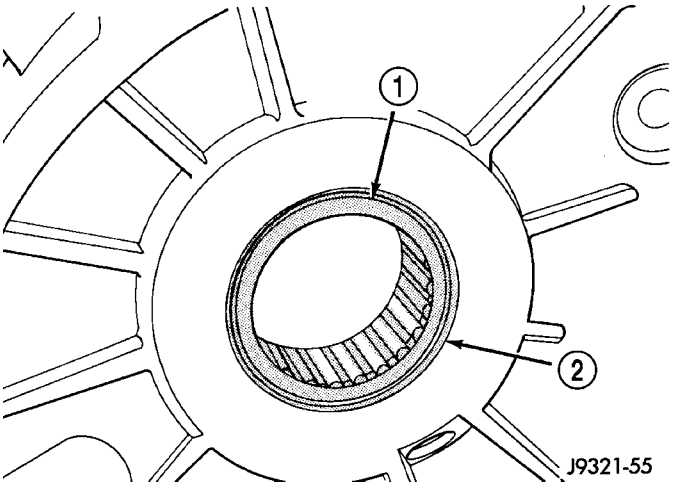


Fig. 49 Output Shaft Rear Bearing Installation Depth

1 - BEARING (SEATED) AT LOWER EDGE OF CHAMFER
2 - CHAMFER

(9) Using Remover C-4210 and Handle C-4171, drive input shaft bearing from inside the annulus gear opening in the case (Fig. 50).

(10) Install locating ring on new bearing.

(11) Position case so forward end is facing upward.

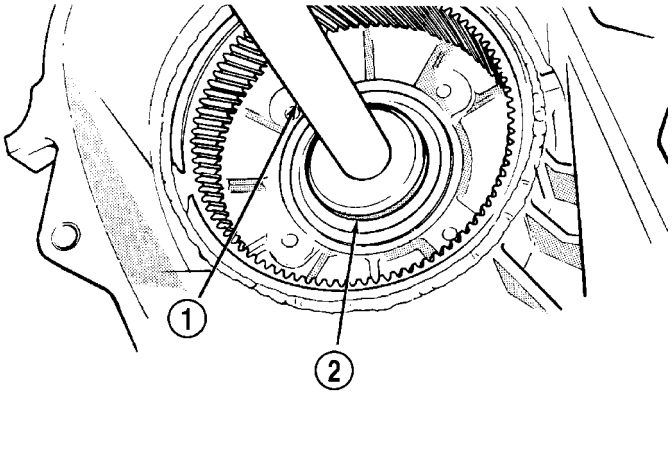


Fig. 50 Input Shaft Bearing Removal

1 - SPECIAL TOOL C-4171
2 - SPECIAL TOOL C-4210

(12) Using Remover C-4210 and Handle C-4171, drive input shaft bearing into case. The bearing locating ring must be fully seated against case surface (Fig. 51).

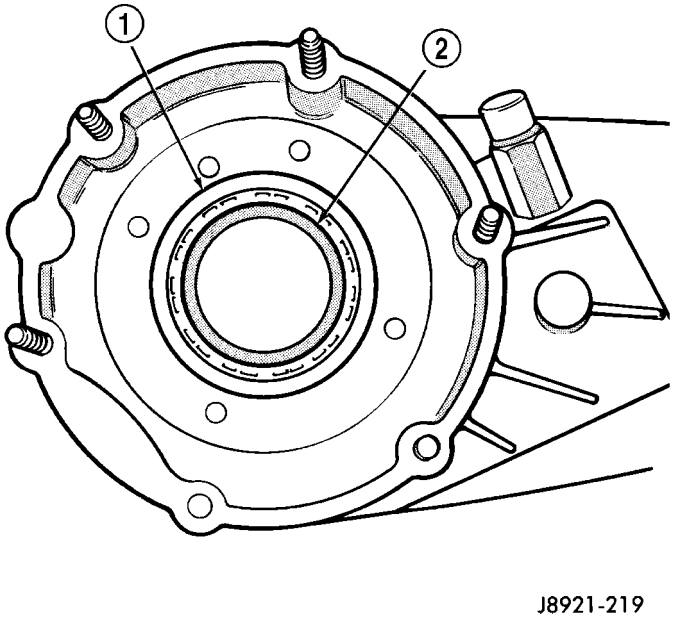


Fig. 51 Seating Input Shaft Bearing

1 - SNAP-RING
2 - INPUT SHAFT BEARING