TRANSFER CASE - NV231 (Continued)

(11) Install new O-ring on detent plug (Fig. 68).

(12) Lubricate detent plunger with transmission fluid or light coat of petroleum jelly.

(13) Install detent plunger, spring and plug (Fig. 68).

(14) Verify that plunger is properly engaged in sector.

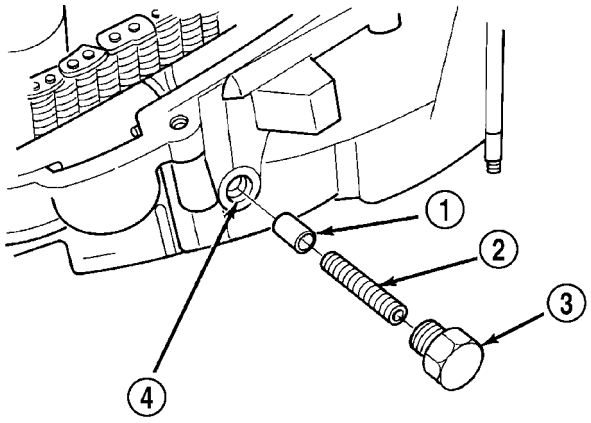


Fig. 68 Shift Detent Components

1 - POPPET
2 - SPRING
3 - SCREW
4 - POPPET BORE (IN CASE)

FRONT OUTPUT SHAFT AND DRIVE CHAIN

(1) Lubricate front output shaft-sprocket assembly, drive chain, and drive sprocket with transmission fluid.

(2) Assemble drive chain and front output shaft (Fig. 69).

(3) Start chain on mainshaft drive sprocket.

(4) Guide front shaft into bearing and drive sprocket onto mainshaft drive gear (Fig. 69).

(5) Install mode spring on upper end of mode fork shift rail (Fig. 70).

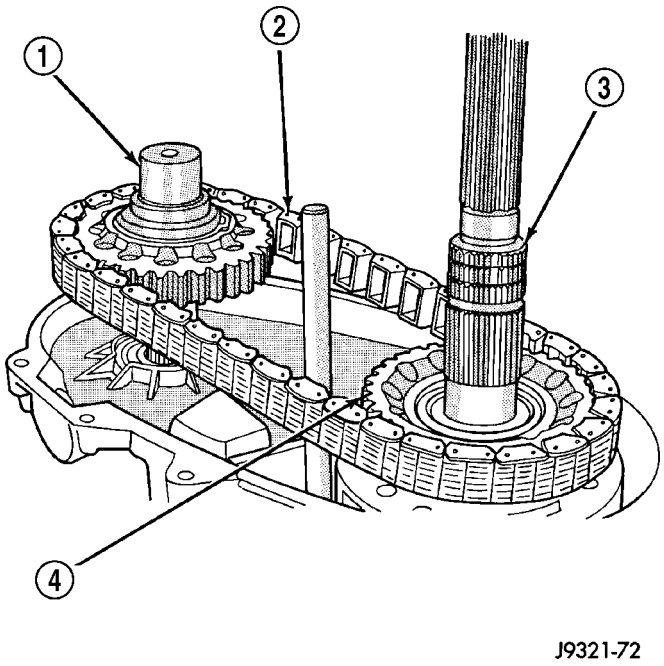


Fig. 69 Installing Drive Chain And Front Output Shaft

1 - FRONT OUTPUT SHAFT
2 - DRIVE CHAIN
3 - MAINSHAFT
4 - DRIVE SPROCKET

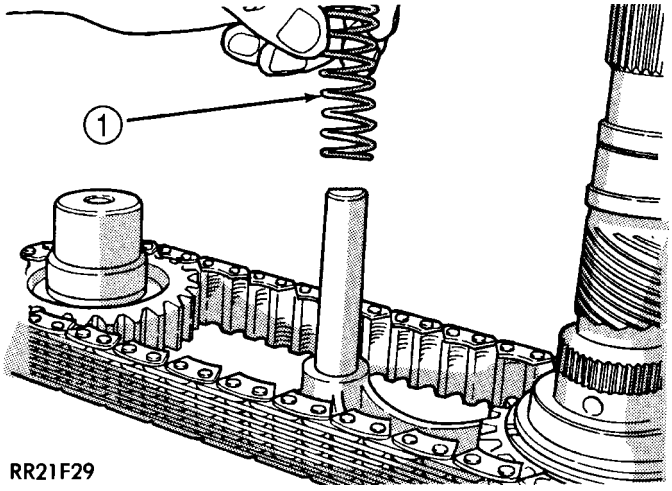


Fig. 70 Install Mode Fork Spring

1 - MODE SPRING