TRANSFER CASE - NV231 (Continued)

OIL PUMP AND REAR CASE

(1) Install magnet in front case pocket (Fig. 71).

(2) Assemble oil pickup screen, connecting hose, and tube.

(3) Install new pickup tube O-ring in oil pump (Fig. 72).

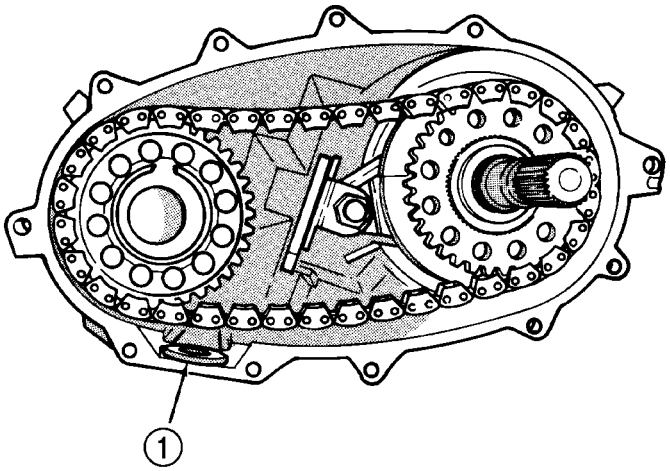


Fig. 71 Installing Case Magnet

1 - MAGNET

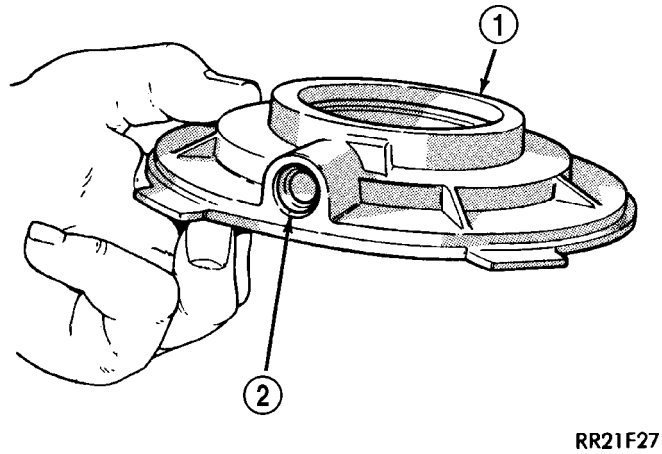


Fig. 72 Pickup Tube O-Ring Position

1 - OIL PUMP
2 - O-RING

(4) Insert oil pickup tube in oil pump inlet.

(5) Position assembled oil pump and pickup tube in rear case. Be sure pickup screen is securely seated in case slot. Also be sure oil pump locating tabs are outside rear case (Fig. 73).

(6) Apply 3 mm (1/8 in.) wide bead of Mopar® gasket maker or silicone adhesive sealer to mounting flange of front case. Work sealer bead around bolt holes.

(7) Lift rear case and oil pump and carefully position assembly on front case. Be sure case dowels are aligned and that mode fork rail extends through rear case before seating rear case on front case.

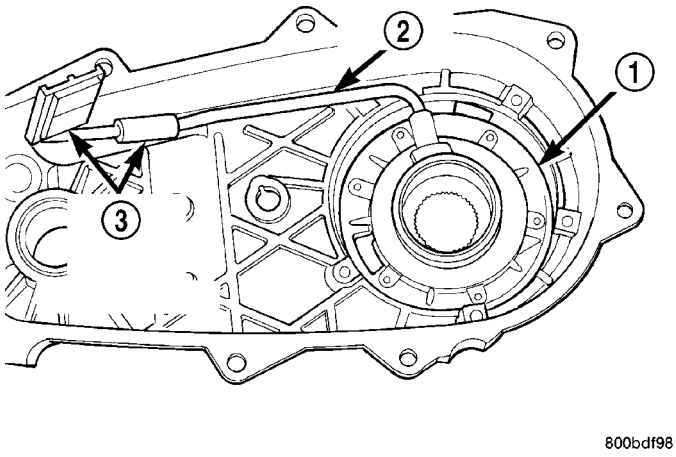


Fig. 73 Oil Pump And Pickup Tube Installation

1 - OIL PUMP
2 - PICKUP TUBE
3 - PICKUP SCREEN AND CONNECTOR

(8) Install case attaching bolts. Alignment bolts at each end of case are only ones requiring washers (Fig. 74).

(9) Tighten case bolts to 27-34 N·m (20-25 ft. lbs.) torque.

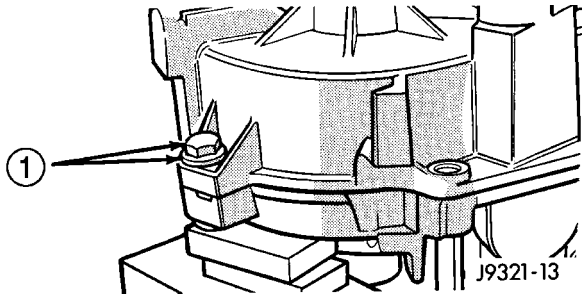


Fig. 74 Alignment Bolt Location

1 - ALIGNMENT BOLT AND WASHER (AT EACH END OF CASE)

YOKE AND RANGE LEVER

(1) Install indicator switch in front case. Tighten switch to 20-34 N·m (15-25 ft. lbs.) torque.

(2) Install range lever, washer and locknut on sector shaft (Fig. 75). Tighten locknut to 27-34 N·m (20-25 ft. lbs.) torque.

(3) Install new seal washer on front output shaft (Fig. 77).

(4) Lubricate yoke hub with transmission fluid and install yoke on front shaft.

(5) Install new seal washer on front shaft.

(6) Install yoke and new yoke nut on front output shaft (Fig. 76).

(7) Tighten yoke nut to 122-176 N·m (90-130 ft. lbs.) torque. Use Tool C-3281, or similar tool to hold yoke while tightening yoke nut.