TRANSFER CASE - NV231 (Continued)

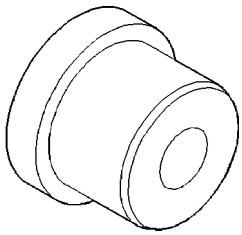

Installer, Bushing - 5066

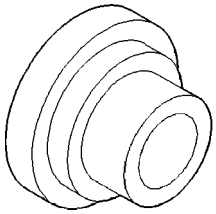

Installer, Bearing - 8128

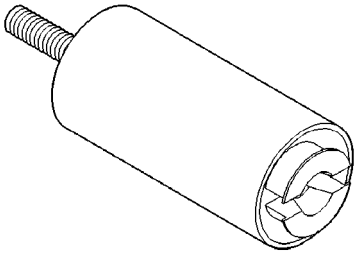

Remover - L-4454

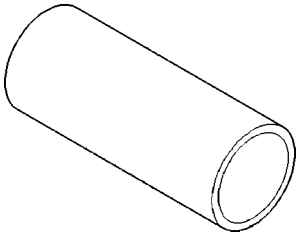

Cup - 8148

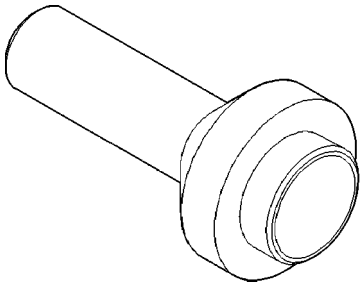

Installer, Seal - 7884

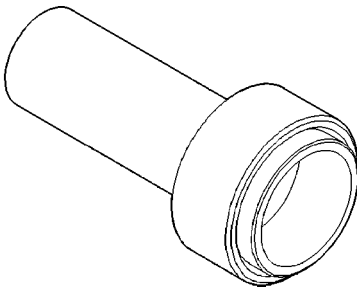

Installer, Pump Housing Seal - 7888

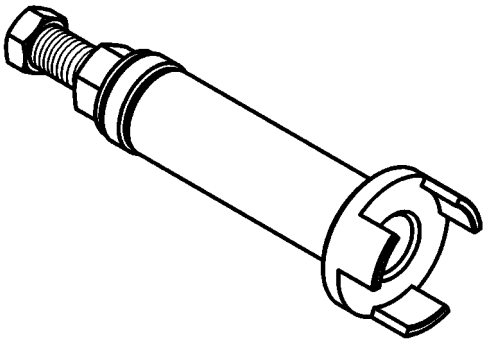

Installer, Transfer Case Damper Driver - 8422

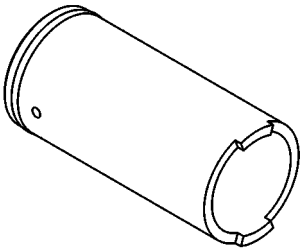

Installer, Output Shaft Slinger - 8408