FLUID

STANDARD PROCEDURE - FLUID DRAIN AND FILL

The fill and drain plugs are both in the rear case (Fig. 84). Correct fill level is to the bottom edge of the fill plug hole. Be sure the vehicle is level to ensure an accurate fluid level check.

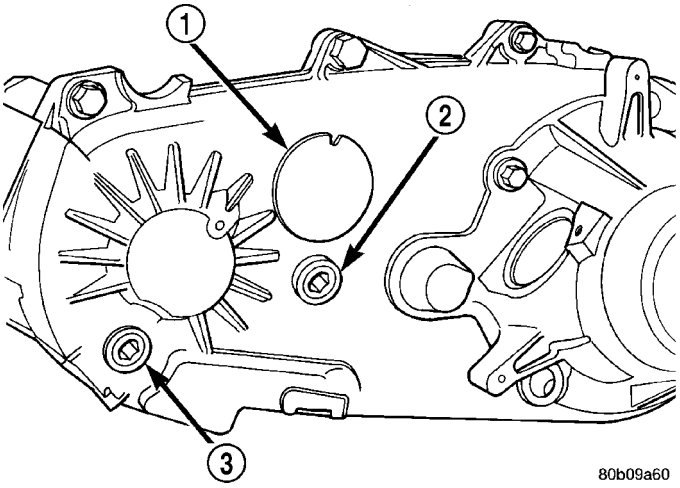

Fig. 84 Fill/Drain Plug And I.D. Tag Locations

1 - I.D. TAG
2 - FILL PLUG
3 - DRAIN PLUG

FRONT OUTPUT SHAFT SEAL

REMOVAL

(1) Raise vehicle.

(2) Remove front propeller shaft. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - REMOVAL)

(3) Remove front output shaft yoke.

(4) Remove seal from front case with pry tool (Fig. 85).

INSTALLATION

(1) Install new front output seal in front case with Installer Tool 8143-A as follows:

(a) Place new seal on tool. Garter spring on seal goes toward interior of case.

(b) Start seal in bore with light taps from hammer (Fig. 86). Once seal is started, continue tapping seal into bore until installer tool seats against case.

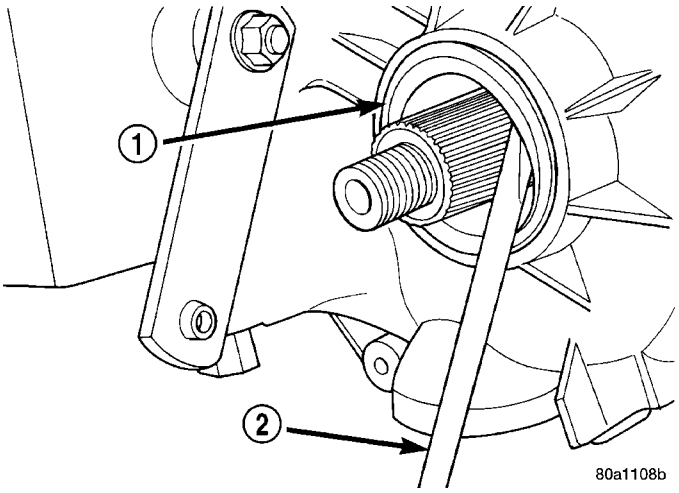

Fig. 85 Remove Front Output Shaft Seal - Typical

1 - OUTPUT SHAFT SEAL
2 - PRYBAR

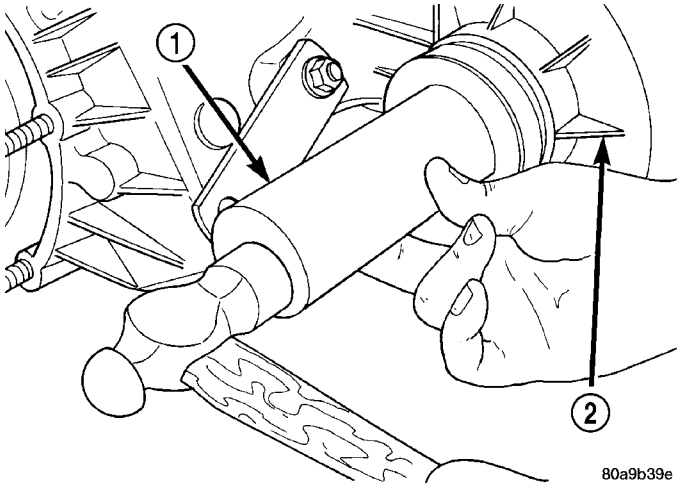

Fig. 86 Front Output Seal Installation - Typical

1 - INSTALLER 8143-A
2 - TRANSFER CASE