REAR OUTPUT SHAFT SEAL (Continued)

(c) Thread the puller screw of Installer 8422 into the output shaft by hand only. Make sure the screw is fully threaded into the output shaft.

(d) Using a wrench to hold the pulling screw stationary (Fig. 94), turn the pulling screw nut until the driver legs contact the rear face of the transfer case rear retainer. When the legs contact the retainer, the damper is properly positioned on the output shaft.

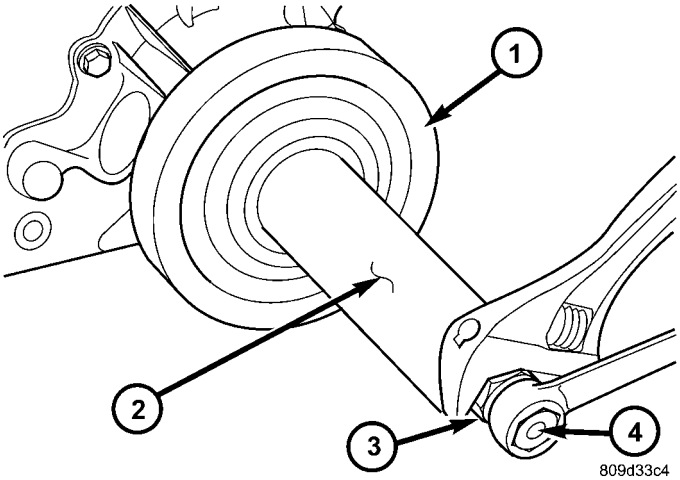

Fig. 94 Install Damper

1 - Damper
2 - Installer Driver
3 - Pulling Screw Nut
4 - Pulling Screw

(6) Install boot on output shaft slinger, or output shaft damper, and crimp retaining clamp with tool C-4975-A (Fig. 95).

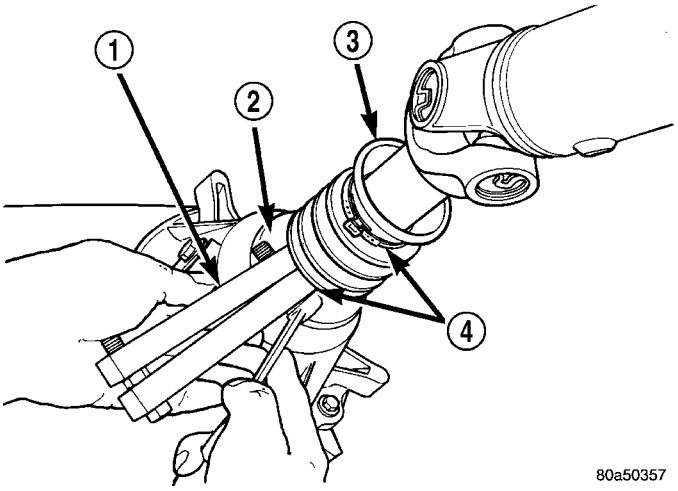

Fig. 95 Slinger Boot Installation - Typical

1 - SPECIAL TOOL C-4975–A
2 - SLINGER
3 - BOOT
4 - CLAMP

(7) Slide the slip yoke on the transmission/transfer case output shaft. Align installation reference marks at the axle yoke and install the propeller shaft.

(8) Tighten the U-joint strap/clamp bolts at the axle yoke to 19 N·m (14 ft. lbs.).

(9) Crimp clamp with Clamp Tool C-4975A to hold dust boot to propeller shaft yoke.

(10) Remove support and lower the vehicle.

SHIFT LEVER

REMOVAL

(1) Shift transfer case into 4L.

(2) Raise vehicle.

(3) Loosen adjusting trunnion locknut and slide shift rod out of trunnion (Fig. 96). If rod lacks enough travel to come out of trunnion, push trunnion out of torque shaft.

(4) Lower vehicle.

(5) Remove console. (Refer to 23 - BODY/INTERIOR/FLOOR CONSOLE - REMOVAL)

(6) Remove screws attaching lever assembly to floorpan and remove assembly and shift rod (if left attached).

INSTALLATION

(1) If shift rod was not removed from lever assembly, work rod down through floorpan opening. Then position lever assembly on floorpan and install assembly attaching screws.

(2) Install console. (Refer to 23 - BODY/INTERIOR/FLOOR CONSOLE - INSTALLATION)

(3) Raise vehicle.

(4) Connect trunnion to torque shaft arm. Or, slide shift rod into trunnion on range lever. Be sure shift rod slides freely in trunnion.

(5) Verify that range lever is in 4L position. Then tighten trunnion lock bolt.

(6) Lower vehicle and check transfer case shift operation.