TRANSFER CASE - NV241 (Continued)

REAR EXTENSION, RETAINER, AND REAR CASE

(1) Install bolts into two threaded holes in the rear propeller shaft companion flange 180° apart (Fig. 3).

(2) Place the Holder 6719 (Fig. 3) over the two bolts and use the Holder to remove the rear companion flange nut.

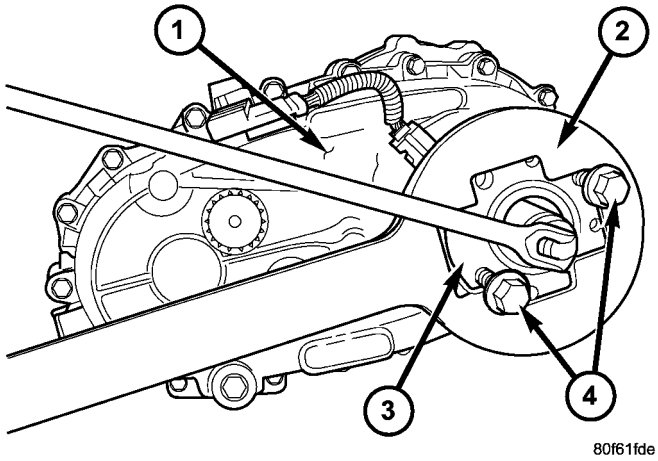

Fig. 3 Rear Companion Flange Nut Removal

1 - TRANSFER CASE
2 - HOLDER 6719
3 - COMPANION FLANGE
4 - BOLTS

(3) Remove the rear companion flange from the output shaft.

NOTE: The companion flange is a taper fit onto the output shaft. It may be necessary to use Puller 8992 to remove the companion flange.

(4) There is a seal slinger located on the rear of the companion flange that can be replaced if necessary. Use a suitable cold chisel to strike the slinger hub parallel to the centerline in several spots to expand the slinger hub. A new slinger can be driven onto the flange hub using a suitable pipe tool.

(5) Remove the speedometer sensor bolt (Fig. 4).

(6) Remove the speedometer sensor (Fig. 5) from the extension housing.

(7) Remove rear extension bolts (Fig. 6).

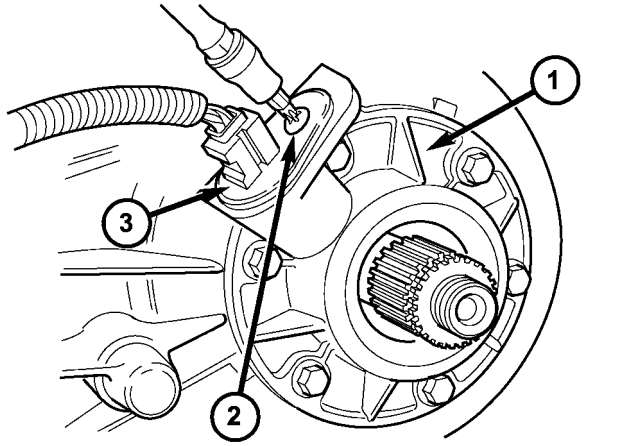

Fig. 4 Speedometer Sensor Bolt Removal

1 - EXTENSION HOUSING
2 - BOLT
3 - SPEEDOMETER SENSOR

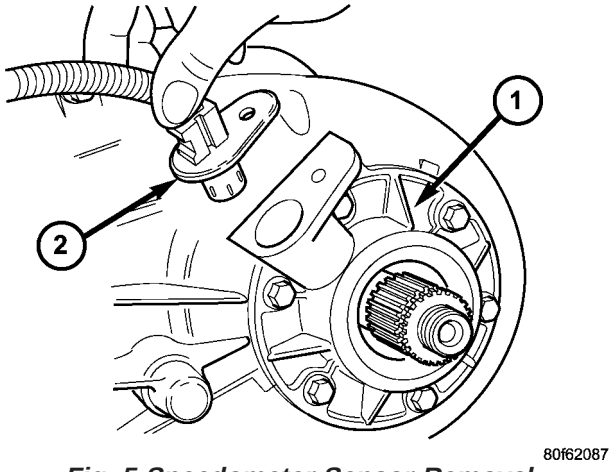

Fig. 5 Speedometer Sensor Removal

1 - EXTENSION HOUSING
2 - SPEEDOMETER SENSOR

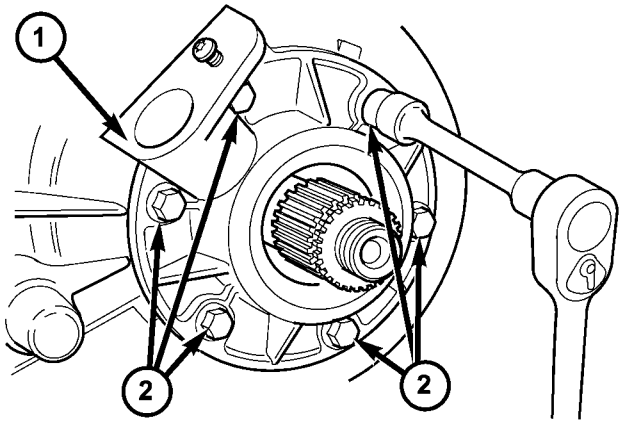

Fig. 6 Rear Extension Bolt Removal

1 - EXTENSION HOUSING
2 - BOLTS