TRANSFER CASE - NV241 (Continued)

(8) Remove rear extension housing (Fig. 7). Tap extension once or twice with a plastic mallet to break sealer bead and loosen it.

(9) Remove the speedometer sensor tone wheel (Fig. 8) from the output shaft.

(10) Remove the tone wheel dowel pin (Fig. 9) from the output shaft.

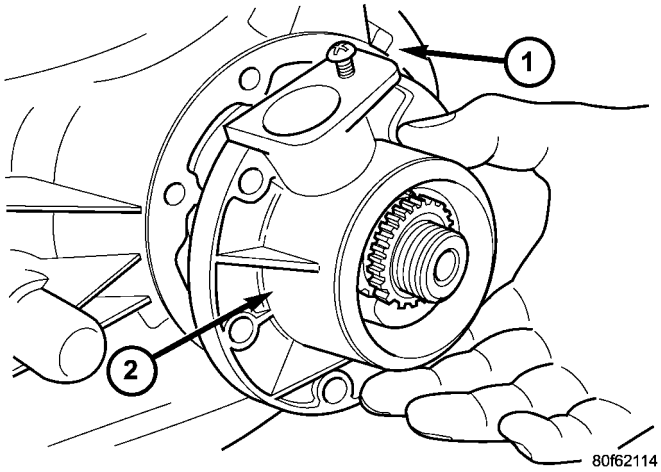

Fig. 7 Rear Extension Removal

1 - TRANSFER CASE
2 - EXTENSION HOUSING

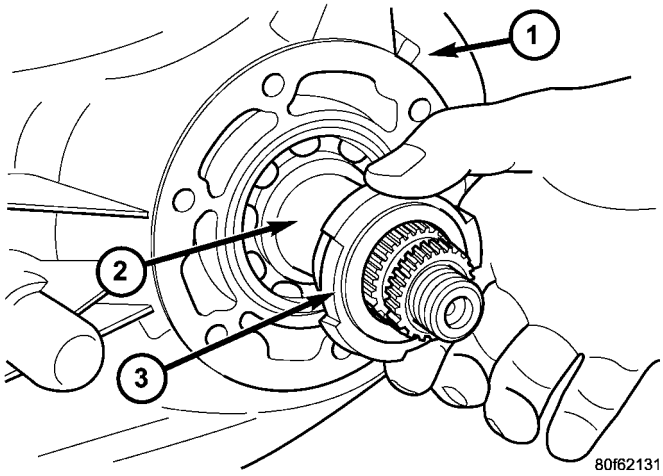

Fig. 8 Speedometer Sensor Tone Wheel Removal

1 - TRANSFER CASE
2 - OUPUT SHAFT
3 - SENSOR TONE WHEEL

YOKE AND SHIFT LEVER

(1) Shift transfer case into a 4WD mode.

(2) Use Holder 6958 to secure the yoke and remove the yoke nut (Fig. 10). Discard nut after removal. It is not reusable.

(3) Remove the yoke (Fig. 11) from the front output shaft.

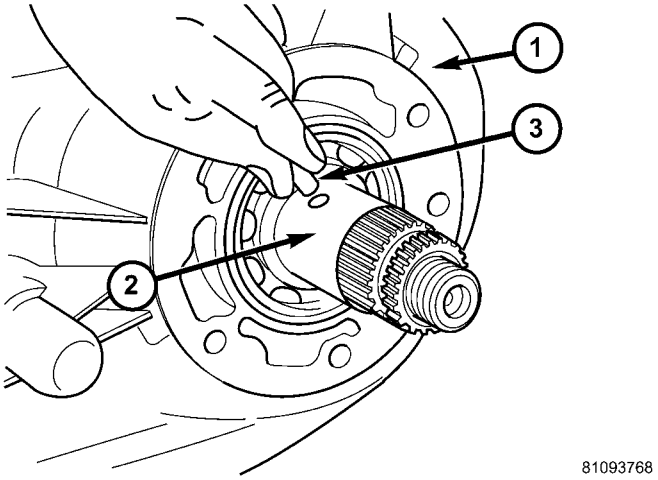

Fig. 9 Output Shaft Dowel Pin

1 - TRANSFER CASE
2 - OUPUT SHAFT
3 - DOWEL PIN

NOTE: The yoke is a taper fit onto the output shaft. It may be necessary to use a puller such as C-452 to remove the yoke.

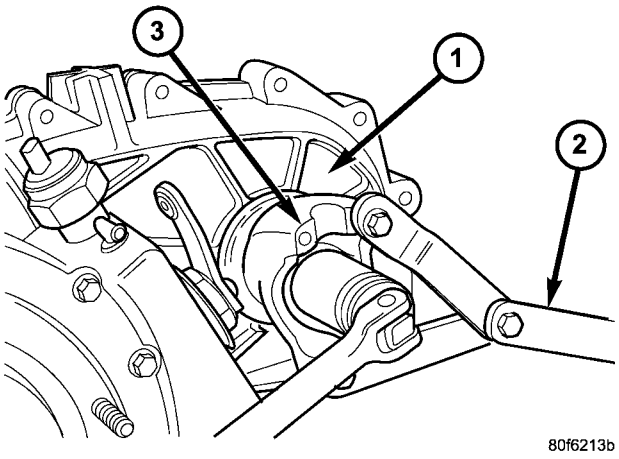

Fig. 10 Front Yoke Nut Removal

1 - TRANSFER CASE
2 - HOLDER 6958
3 - FRONT YOKE

(4) There is a seal slinger located on the rear of the yoke that can be replaced if necessary. Use a suitable cold chisel to strike the slinger hub parallel to the centerline in several spots to expand the slinger hub. A new slinger can be driven onto the yoke hub using a suitable pipe tool.

(5) Remove yoke rubber seal from front output shaft.