TRANSFER CASE - NV241 (Continued)

(9) Remove the detent plug (Fig. 15), spring, and plunger from the transfer case.

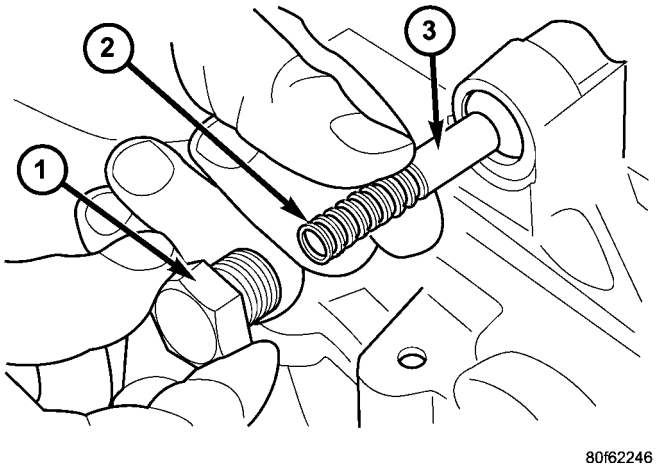


***Fig. 15 Detent Plug, Spring, and Plunger Removal***

1 - DETENT PLUG
2 - SPRING
3 - PLUNGER

(10) Remove the transfer case position sensor (Fig. 16).

(11) Remove the shift sector support (Fig. 17).

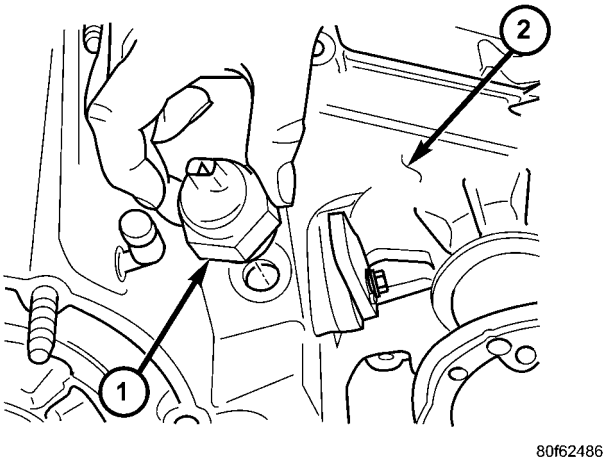


***Fig. 16 Remove Transfer Case Position Sensor***

1 - TRANSFER CASE POSITION SENSOR
2 - TRANSFER CASE

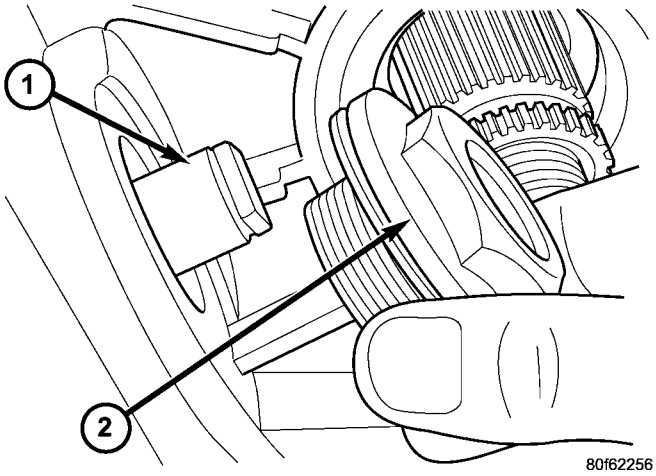


***Fig. 17 Shift Sector Support Removal***

1 - SHIFT SECTOR SHAFT
2 - SECTOR SUPPORT

## MAINSHAFT, FRONT OUTPUT SHAFT, AND DRIVE CHAIN

(1) Note position of bolts that attach rear case to front case. Some bolts are unique. Mark position of these bolts with paint or scriber.

(2) Remove rear case-to-front case bolts (Fig. 18).

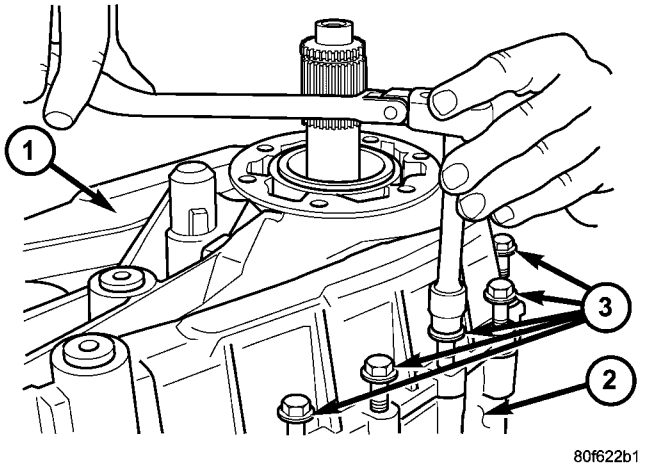


***Fig. 18 Case Half Bolt Removal***

1 - REAR CASE HALF
2 - FRONT CASE HALF
3 - BOLTS

(3) Loosen rear case with pry tool to break sealer bead.