TRANSFER CASE - NV241 (Continued)

(4) Unseat rear case from alignment dowels (Fig. 19).

(5) Remove rear case and oil pump assembly from front case (Fig. 20).

CAUTION: Do not remove the bolts holding the oil pump cover to the rear case half. The oil pump cover is aligned to the rear output shaft bearing inner race and will become mis-aligned if the bolts are loosened. If the transfer case failure has generated any debris which may have become trapped in the oil pump, the rear case and oil pump assembly MUST be replaced.

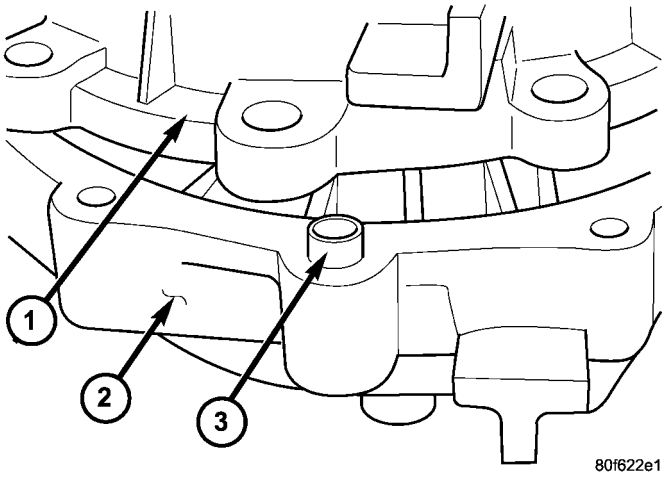

Fig. 19 Case Alignment Dowel

1 - REAR CASE HALF
2 - FRONT CASE HALF
3 - ALIGNMENT DOWEL

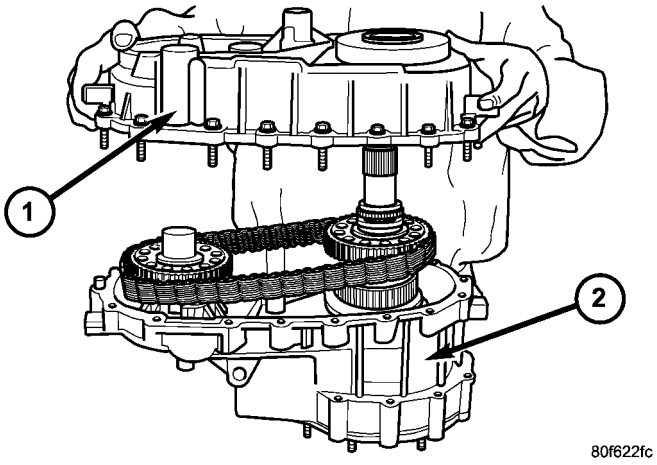

Fig. 20 Rear Case Half Removal

1 - REAR CASE HALF
2 - FRONT CASE HALF

(6) Remove shift rail cups and spring (Fig. 21).

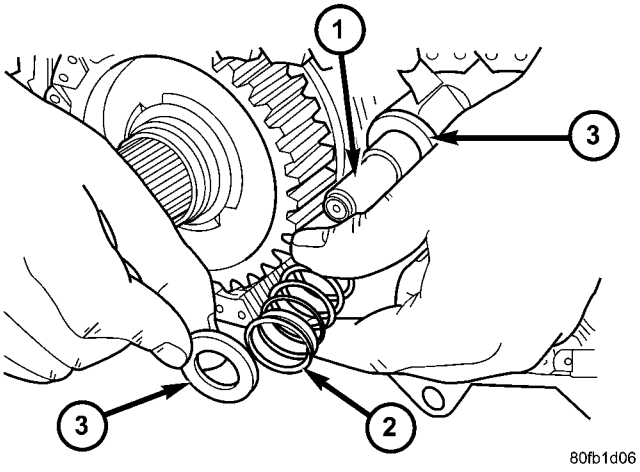

Fig. 21 Shift Rail Cup And Spring Removal

1 - SHIFT RAIL
2 - SPRING
3 - CUPS (2)

(7) Remove front drive sprocket retaining ring (Fig. 22).

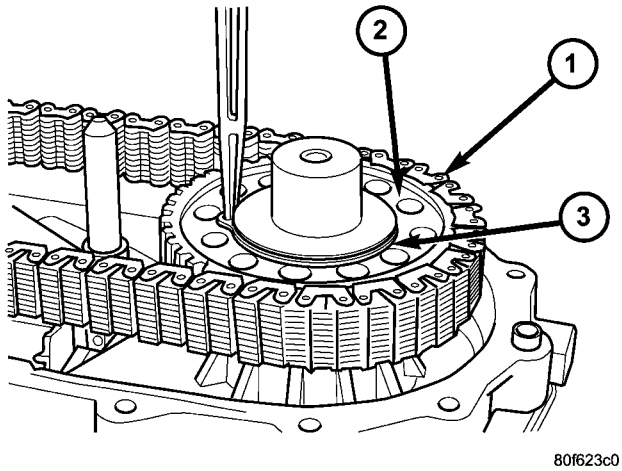

Fig. 22 Front Drive Sprocket Snap-Ring Removal

1 - DRIVE CHAIN
2 - FRONT DRIVE SPROCKET
3 - SNAP-RING