TRANSFER CASE - NV241 (Continued)

(4) Remove range fork and hub as an assembly (Fig. 27). Note fork position for installation reference.
(5) Remove shift sector (Fig. 28).

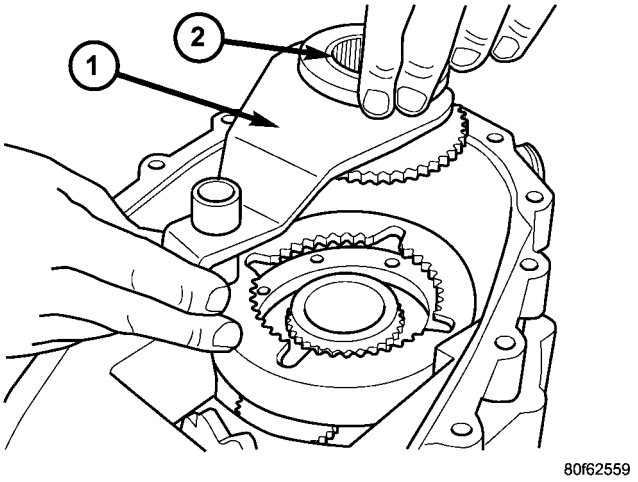

Fig. 27 Range Fork and Hub Removal

1 - RANGE FORK
2 - RANGE HUB

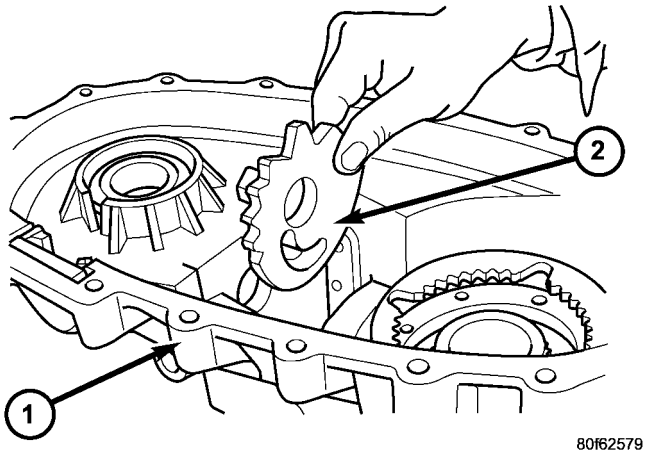

Fig. 28 Shift Sector Removal

1 - FRONT CASE HALF
2 - SHIFT SECTOR

MAINSHAFT

(1) Remove the snap-ring that secures the chain drive sprocket onto mainshaft (Fig. 29). Use standard (instead of parallel jaw) snap-ring pliers to remove this snap-ring.
(2) Remove drive sprocket (Fig. 30).

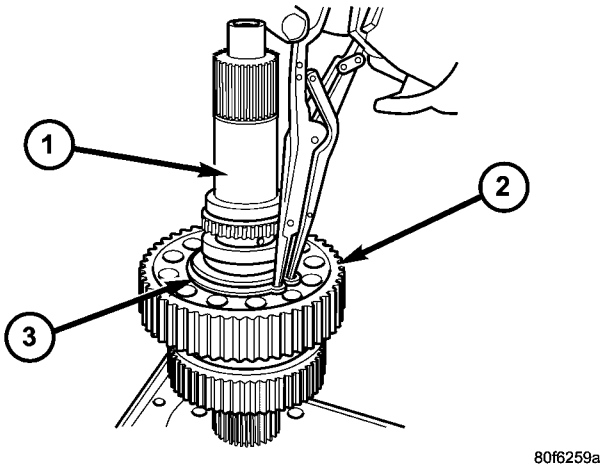

Fig. 29 Mainshaft Drive Sprocket Snap-Ring Removal

1 - MAINSHAFT
2 - DRIVE SPROCKET
3 - SNAP-RING

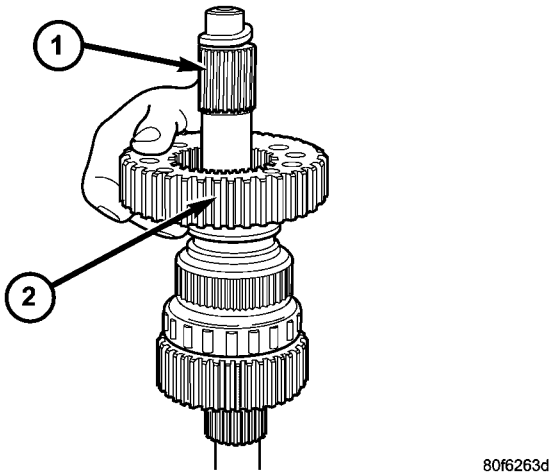

Fig. 30 Mainshaft Drive Sprocket Removal

1 - MAINSHAFT
2 - DRIVE SPROCKET